



Samsung NP-NC10-KA02US Back Plate Replacement

This guide will show you how to remove the back plate of the netbook so you can access the hardware components.

Written By: Brian Smith



This document was generated on 2020-11-15 02:56:45 PM (MST).

 **TOOLS:**

- [iFixit Opening Tools](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



- Locate the external battery on the bottom side of the device.
- Locate the tab on the right side of the battery.
- Shift the tab to the left.

Step 2



- Locate the tab on the left side of the device's battery.
- Push the left tab to the right.

Step 3




- Pull the battery up from the device.

Step 4 — Back Plate



- Locate the 14, 3.93 mm, screws that need to be removed on the base of the computer.

Step 5

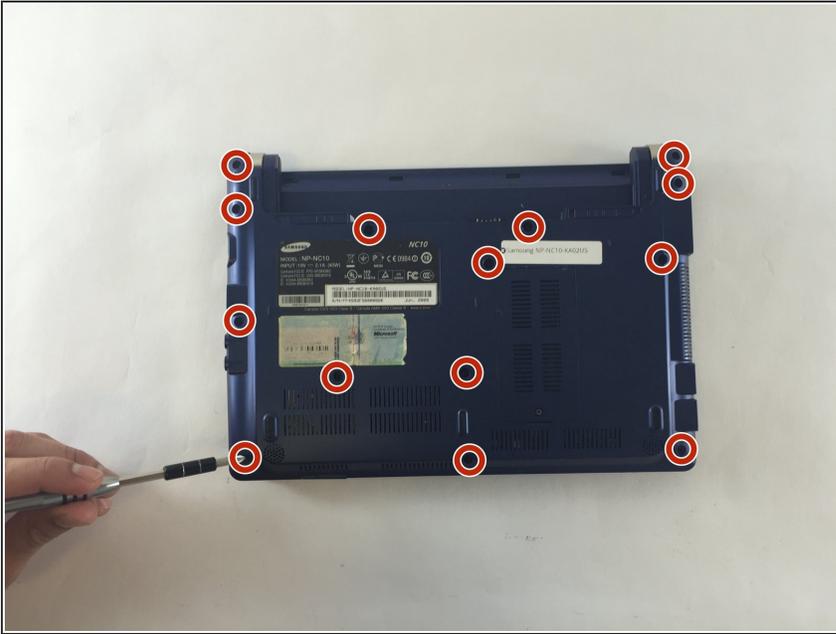

- Remove all 14 of the 3.93 mm screws using a PH1 screw bit.

Step 6



- Using two plastic opening tools remove the back plate.
- ⓘ These plastic opening tools have a flat-head that extends as a wedge which are utilized to separate pressure fit plastic components without causing any damage to them.
- The back plate is now removed exposing all of the hardware components.

This document was generated on 2020-11-15 02:56:45 PM (MST).

