



# HP Pavilion dv4000 CD/DVD drive Replacement

This guide will show how to replace or upgrade the DVD drive.

Written By: Nick LaMarche



---

## INTRODUCTION


Replacing the DVD drive involves removing the hard drive, but you do not need to open up the whole computer.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Battery

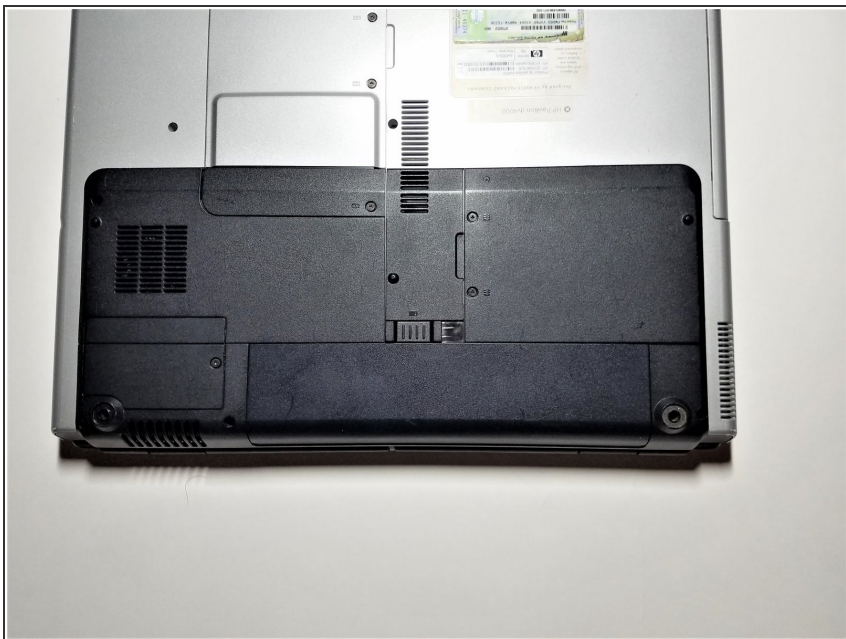

- Turn the laptop upside down with the battery compartment facing you.

## Step 2



- Slide the battery release latch to the right and hold in place.



### Step 3




- Lift the front edge of the battery up and remove it from the compartment.

### Step 4 — Hard Drive



- Orient the laptop with the hard drive panel towards you.

## Step 5

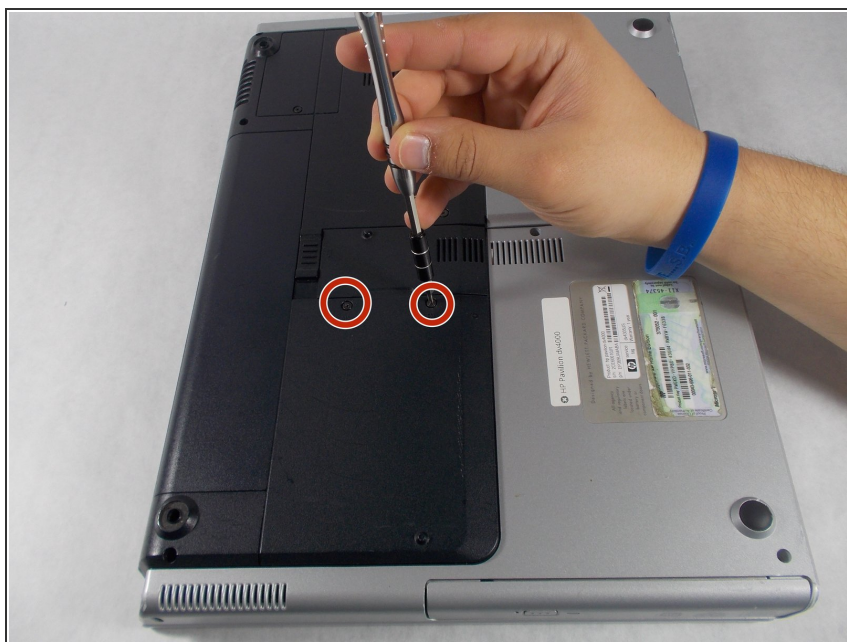

- Unscrew the two 2x5mm screws with a #00 Phillips screwdriver.

## Step 6



- Lift the cover up by the tab near the screws.
- The cover can be removed from the laptop.




## Step 7



- Grab the hard drive from the sides and slide it away from the connectors.
- ⚠ The hard drive should disconnect with light force. If it doesn't easily slide out, ensure there are no cables or obstacles preventing it from moving.
- Lift and remove the hard drive from the laptop.
- ⓘ We did not have a hard drive in our laptop to demonstrate how to remove it.

## Step 8 — CD/DVD Drive

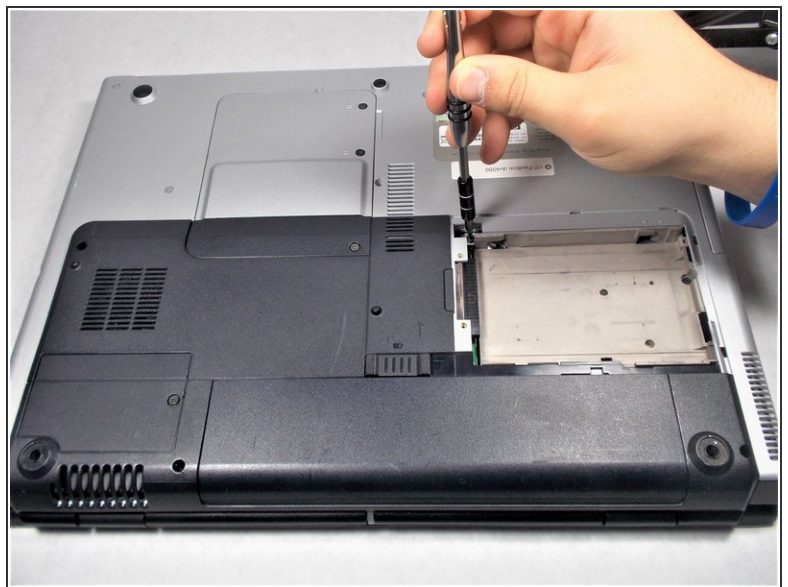


- Locate the one 2x5 mm screw in the hard drive bay.
- Unscrew the screw with a #00 Phillips screwdriver.

## Step 9



- Locate the hole next to the DVD drive release button.
- Insert a paperclip into the hole to release the DVD drive.

## Step 10

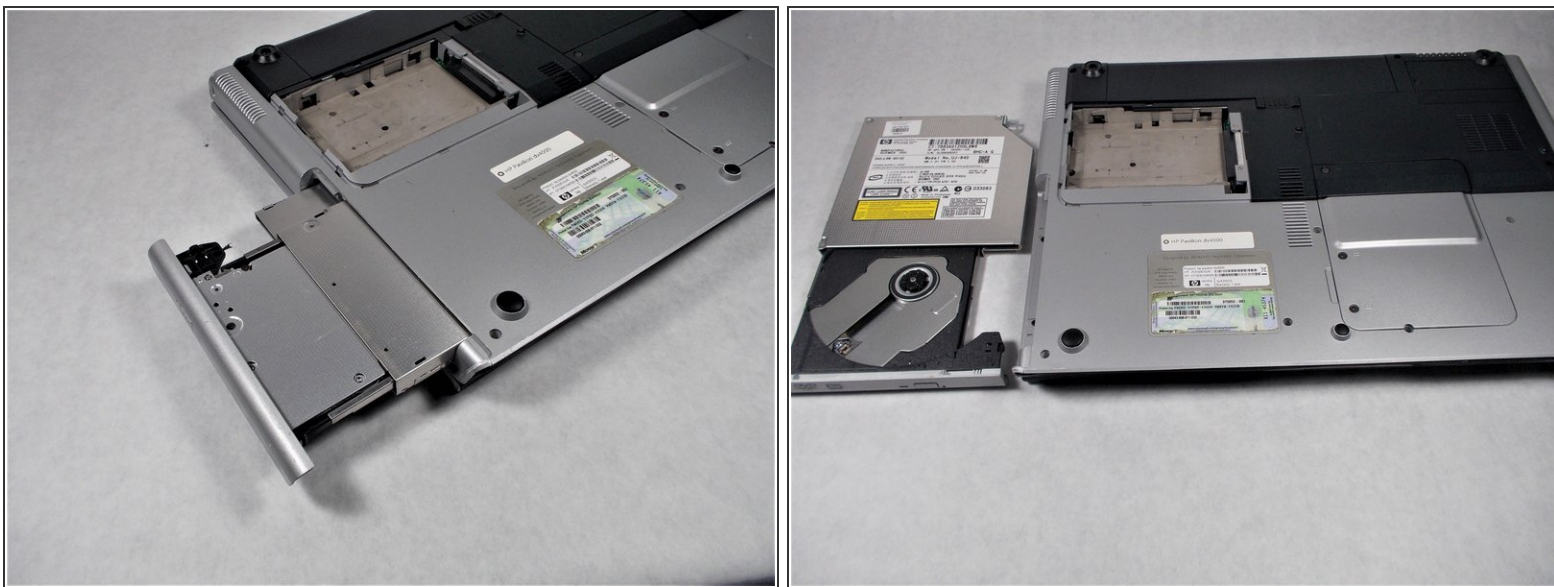

- Carefully grasp the DVD drive and slide it out.

To reassemble your device, follow these instructions in reverse order.