


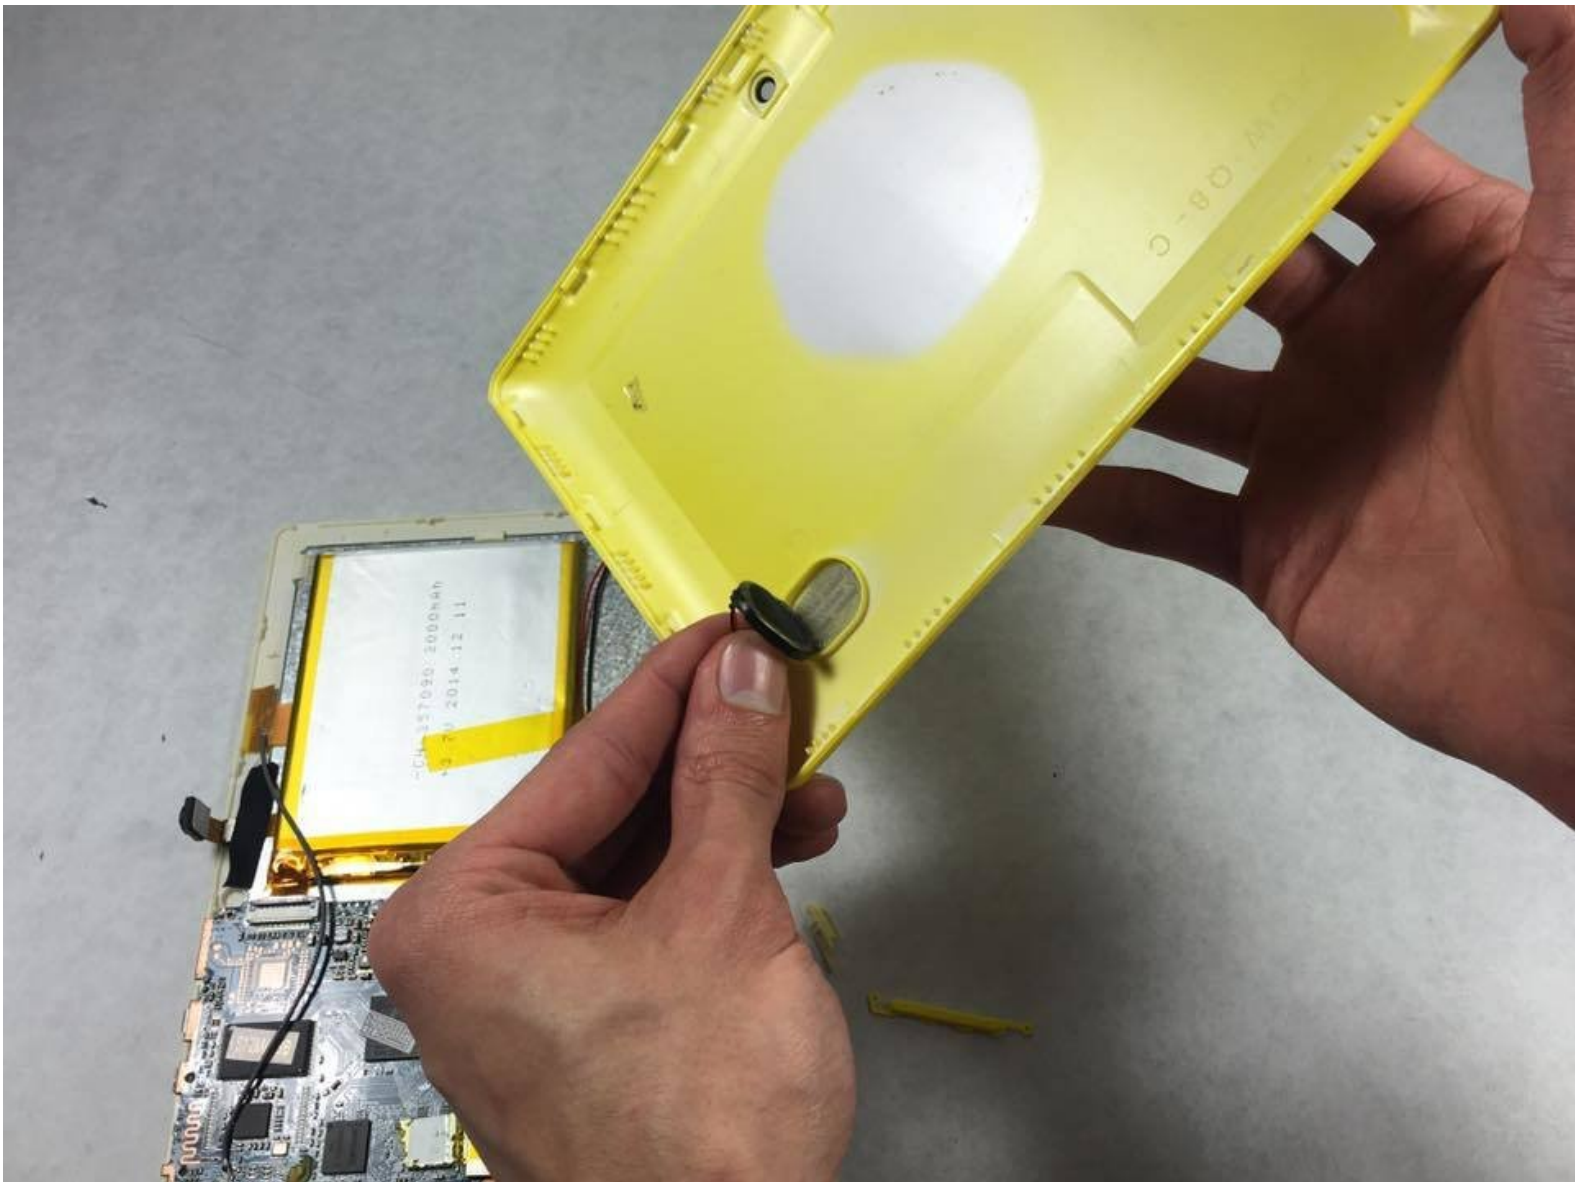

# Zeepad 7DRK Speaker Replacement

If distorted audio is an issue in your Zeepad 7DRK, then this guide is for you! The steps following will explain how to remove the device's speaker for replacement.

Written By: Alexandra Souza



---

## INTRODUCTION


This guide is going to explain how to take the device apart to remove the speaker for eventual replacement.



### TOOLS:

- [iFixit Opening Tools](#) (1)
-


## Step 1 — Speaker

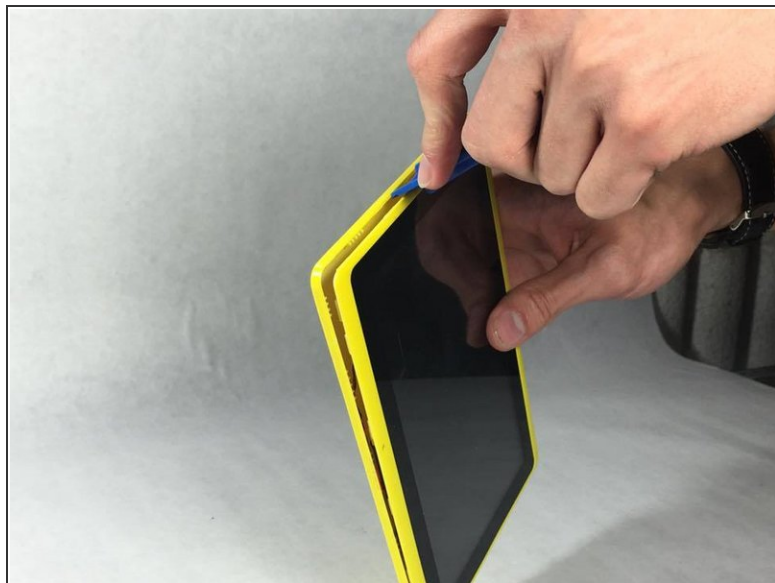

- Begin by popping off the plastic yellow device casing with the soft tip prying tool.
- Start by using the wedging the tip of the tool in and working your way around the device to make things easier.




## Step 2

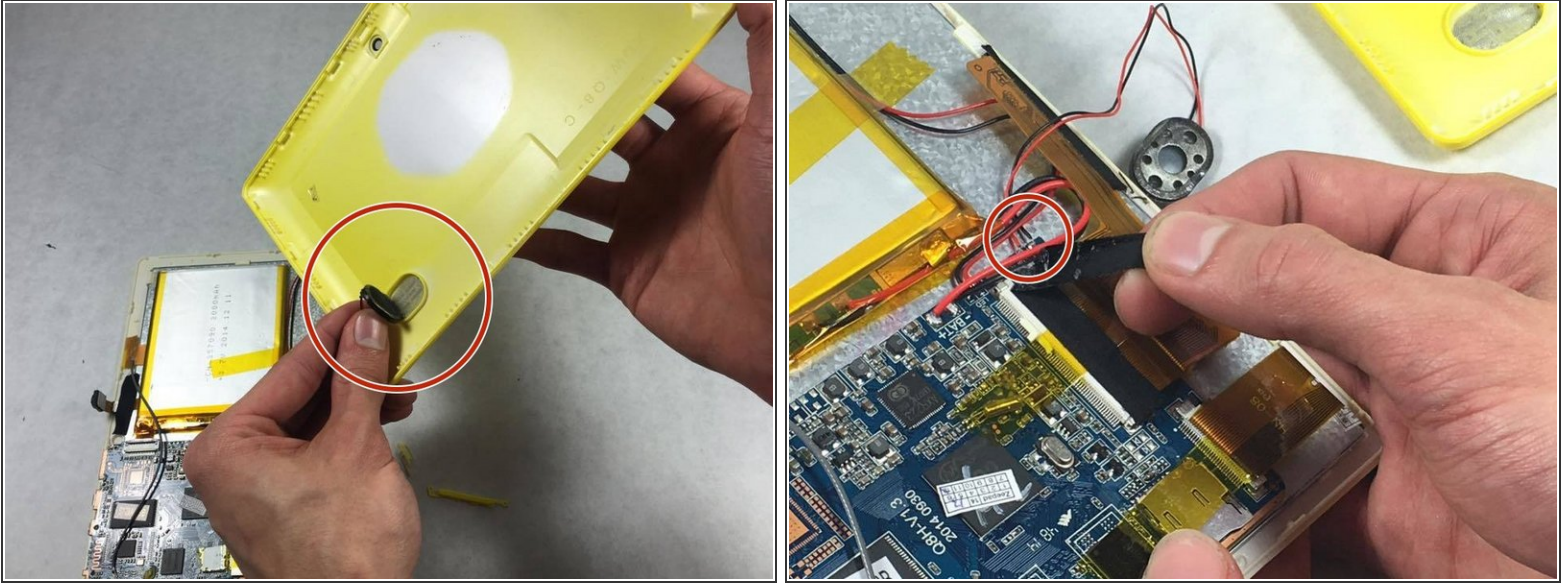

- Once the device is opened, the speaker should fall out of its position.
- Follow the red and black wires attached to the speaker to find the location of connection.

## Step 3

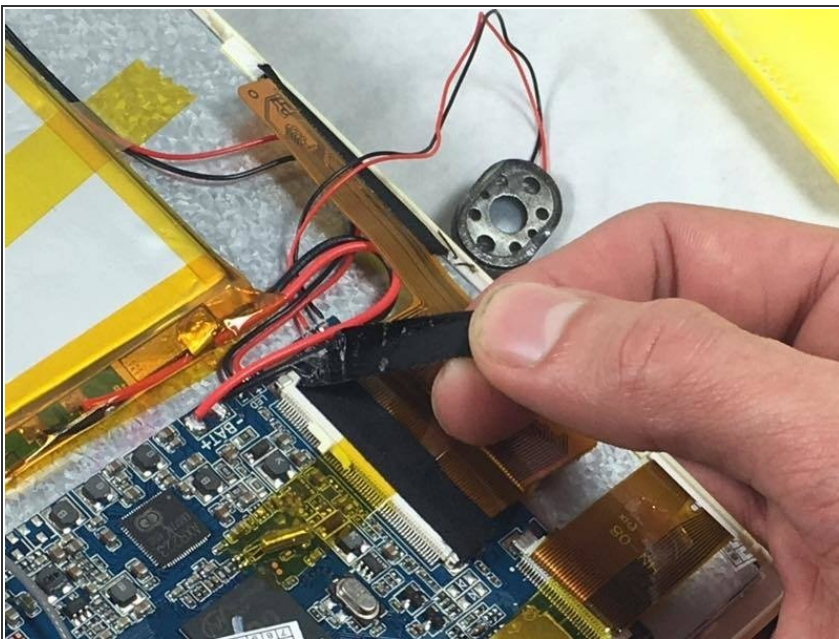

- The red and black wires are attached by a solder, in order to be replaced this connection must be broken.
- Once the wires are disconnected, the speaker will be successfully removed and ready for replacement.

To reassemble your device, follow these instructions in reverse order.