HP G60T-600 CTO Battery Removal



HP G60T-600 CTO Battery Removal

This guide will show you how to remove your device's battery.

Written By: Dominic DeSantis



INTRODUCTION

Remove the battery from your device.

Step 1 — Battery



- Failure to remove the battery before performing any replacement guide may result in electric shock.
 - Close your device, then turn it over.

Step 2





Place your index finger on the ridged tab.

Step 3



- Apply moderate pressure to the tab and slide it to the right.
- While the tab is on the right, you should be able to gently slide your battery out of your device.

To reassemble your device, follow these instructions in reverse order.