



Samsung BD-H5100 Disk Reader Replacement

This guide will show how to remove and replace the disk reader in the case that it is no longer reading the DVDs.

Written By: Mira Patel



INTRODUCTION


This guide will show how to remove and replace the disk reader in the case that it is no longer reading the DVDs.



TOOLS:


- [Small Plastic Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Disk Reader

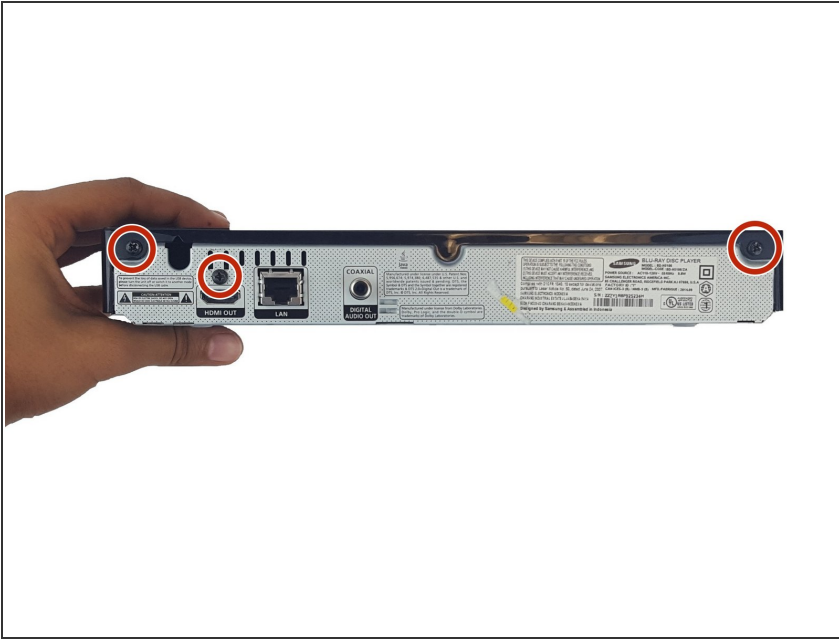

- Use the Phillips Head #2 screwdriver to remove the three 10 mm screws on the back panel.

Step 2

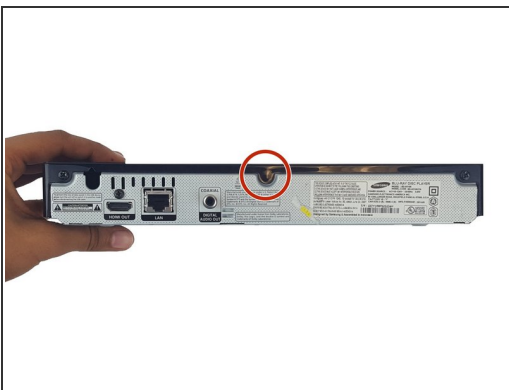

- Use the plastic spudger to pry open the top panel.


⚠ Be careful not to break the ribbon connecting the motherboard on the bottom panel to the top panel.

Step 3




- Pull the ribbons gently from one corner by the blue tabs to remove it.

Step 4

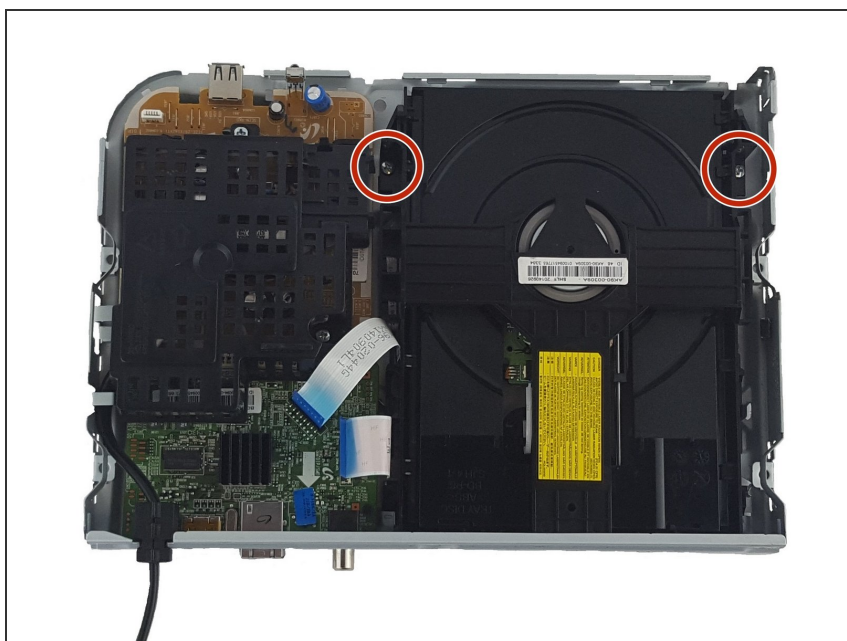


- Remove the two 7.5 mm screws on both sides of the disk tray with Phillips Head #2 screwdriver.

Step 5

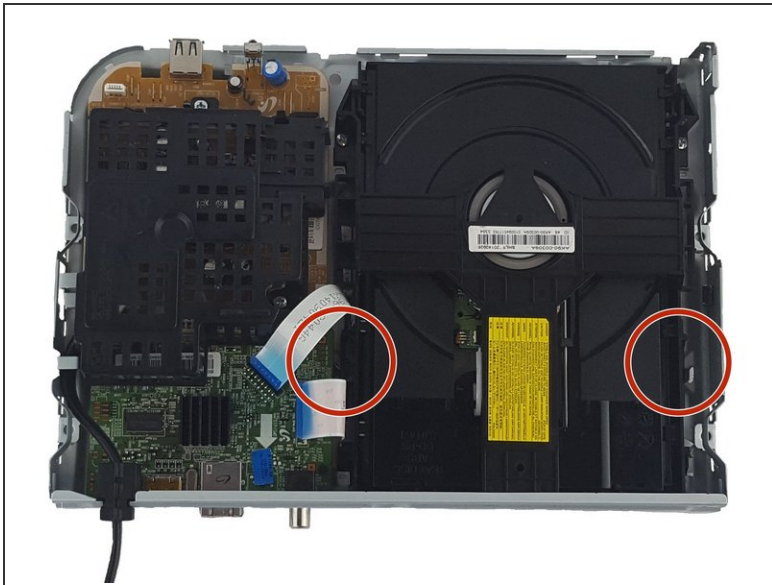


- Push two small prongs on both sides inwards and push forward.
- Remove the disk tray.

Step 6

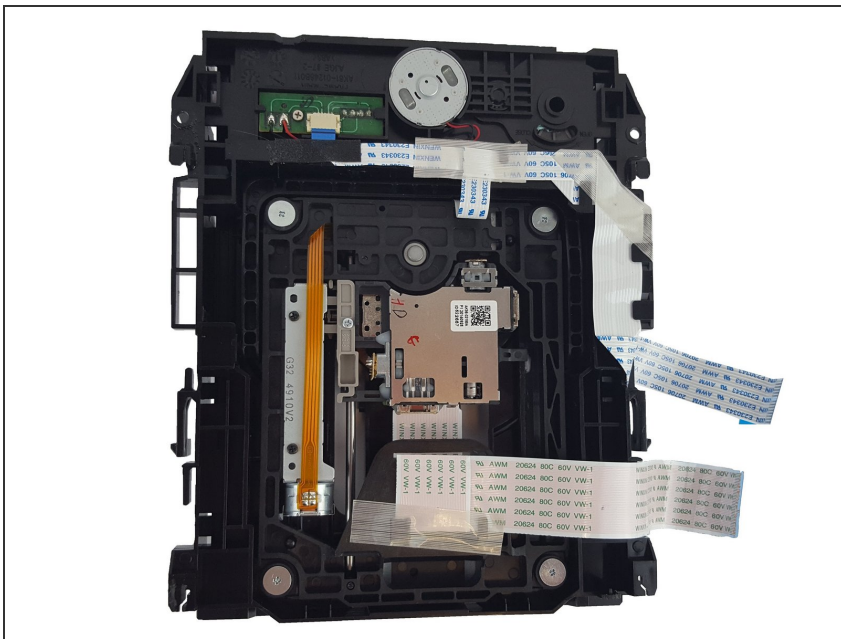


- Flip the disk tray upside down.

Step 7

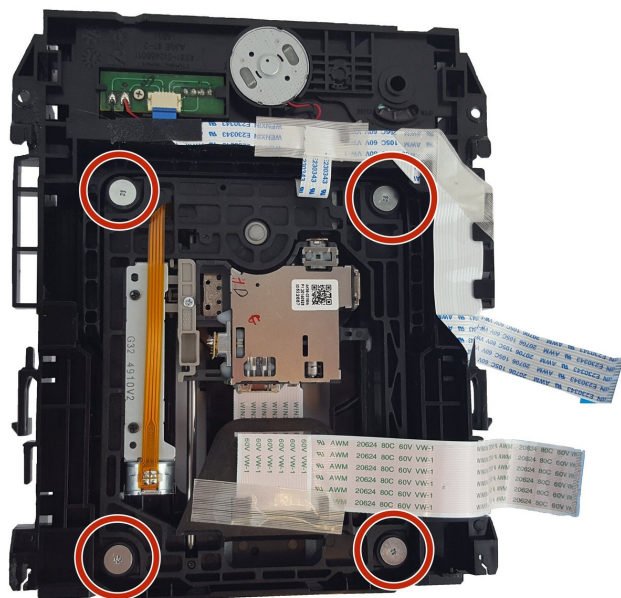



- Use the Phillips Head #00 screwdriver to remove the four 6.2 mm corner screws.

Step 8

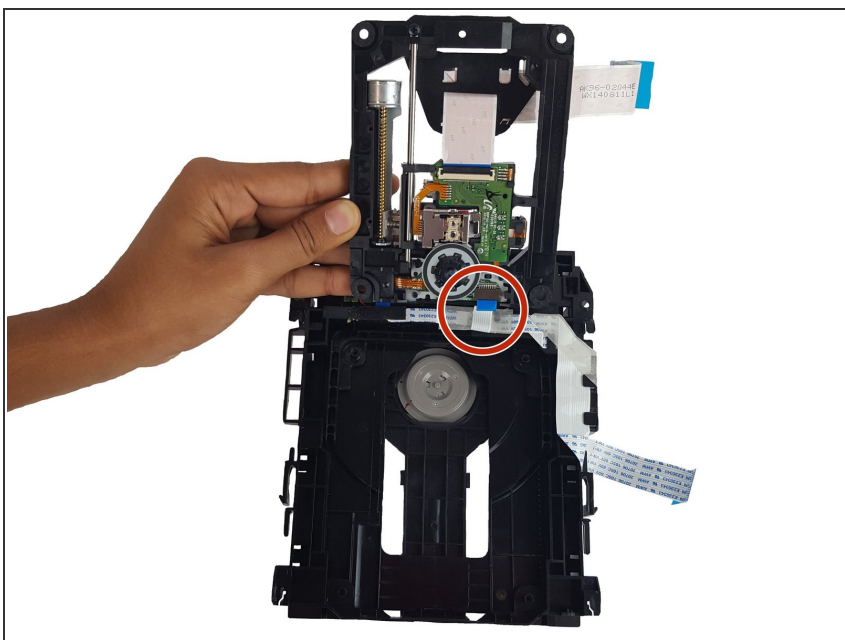

- Flip the disk reader up like a flip phone.
- ⚠ Be careful not to break the ribbon.

Step 9

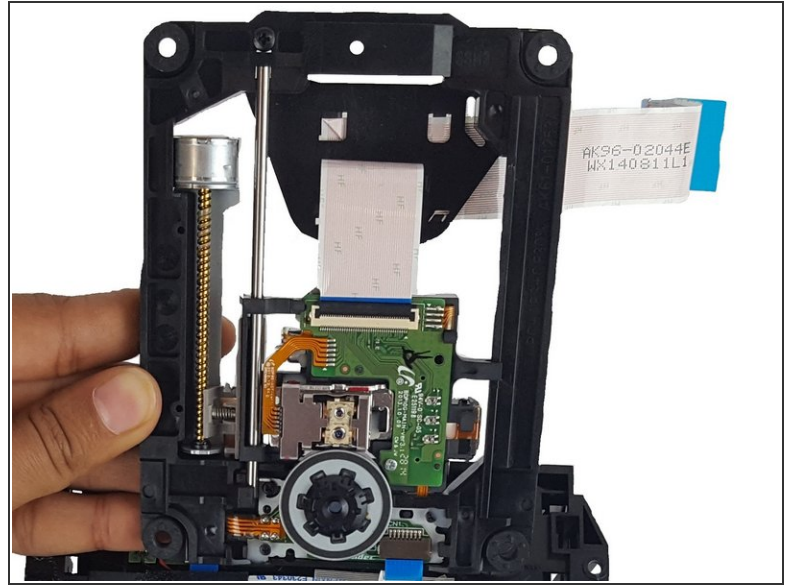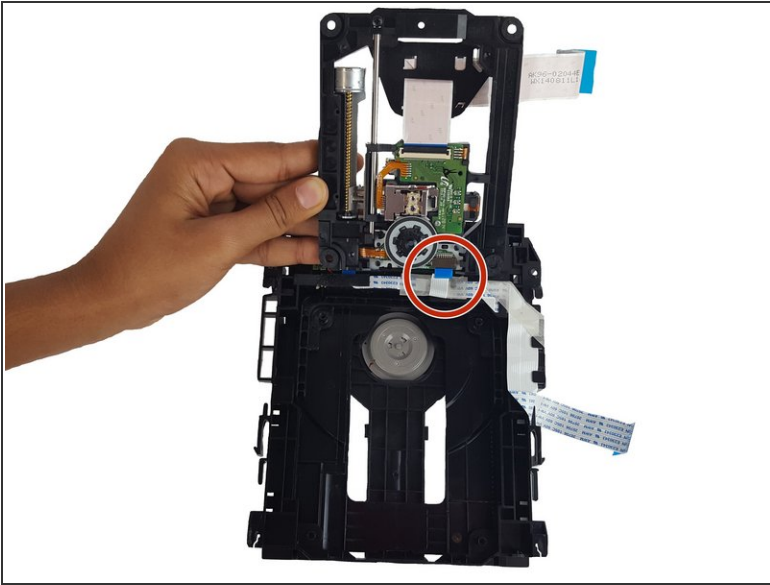

- Pull the ribbon out gently from one corner by the blue tab.

To reassemble your device, follow these instructions in reverse order.