



How to adjust the pressure on your RockShox Pike RC Solo Air

Use this guide to adjust the pressure in your RockShox Pike RC suspension.

Written By: Tobias Isakeit



INTRODUCTION

More information can be found on [RockShox](#).

TOOLS:

- [Bicycle Suspension Pump](#) (1)
-

Step 1 — How to adjust the pressure on your RockShox Pike RC Solo Air



- Remove the cap on the left side of the suspension fork.
- Screw your suspension pump into the designated thread.
- Go on and give your suspension fork some pressure! Consider the weight table printed on to your fork.

To reassemble your device, follow these instructions in reverse order.