



Coby DVD209 The bottom portion of the DVD player Replacement

Written By: Kyle VanAllen



TOOLS:

Tweezers (1)

Phillips #1 Screwdriver (1)

iFixit Opening Tool (1)


Step 1 — The bottom portion of the DVD player






- Press the eject button to view the laser inside.
- Using the blue plastic tool and the [tweezers](#), remove the ribbon cable.

Step 2



- Remove the six 1cm screws on the bottom of the device with the Phillips #1 screwdriver.
-  Do not lift the top of the DVD player too quickly because there are wires attached on the inside.
- Pry the top of the device open from the right side where the buttons are located.

Step 3

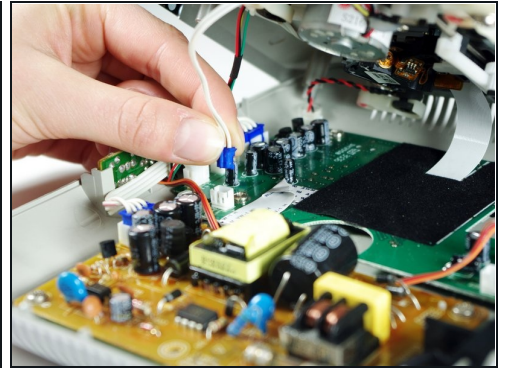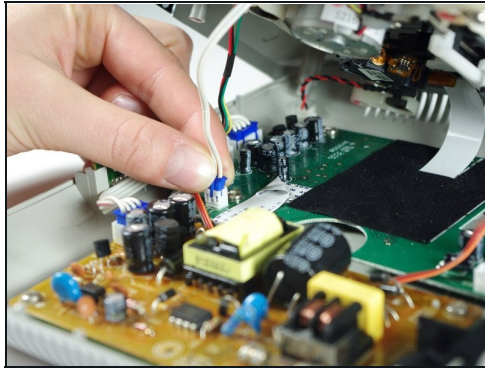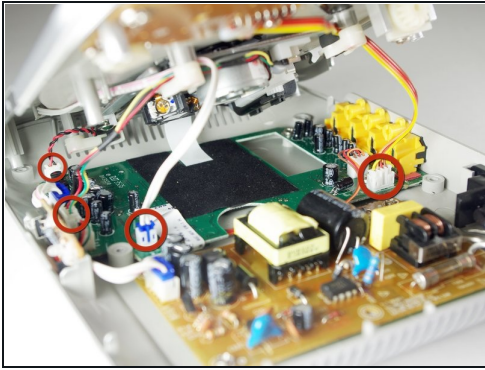

- ⚠ When pulling the ribbon cables out, make sure not to pull by the wires, as this can cause damage to them.
- Pinch the plastic adapter with two fingers to remove the wires circled in red from the circuit board.

To reassemble your device, follow these instructions in reverse order.