




# Asus X5511M-RCLN03 Battery Replacement

This guide will show how to remove the battery from the Asus X5511M-RCLN03.

Written By: Ryann Easterbrook

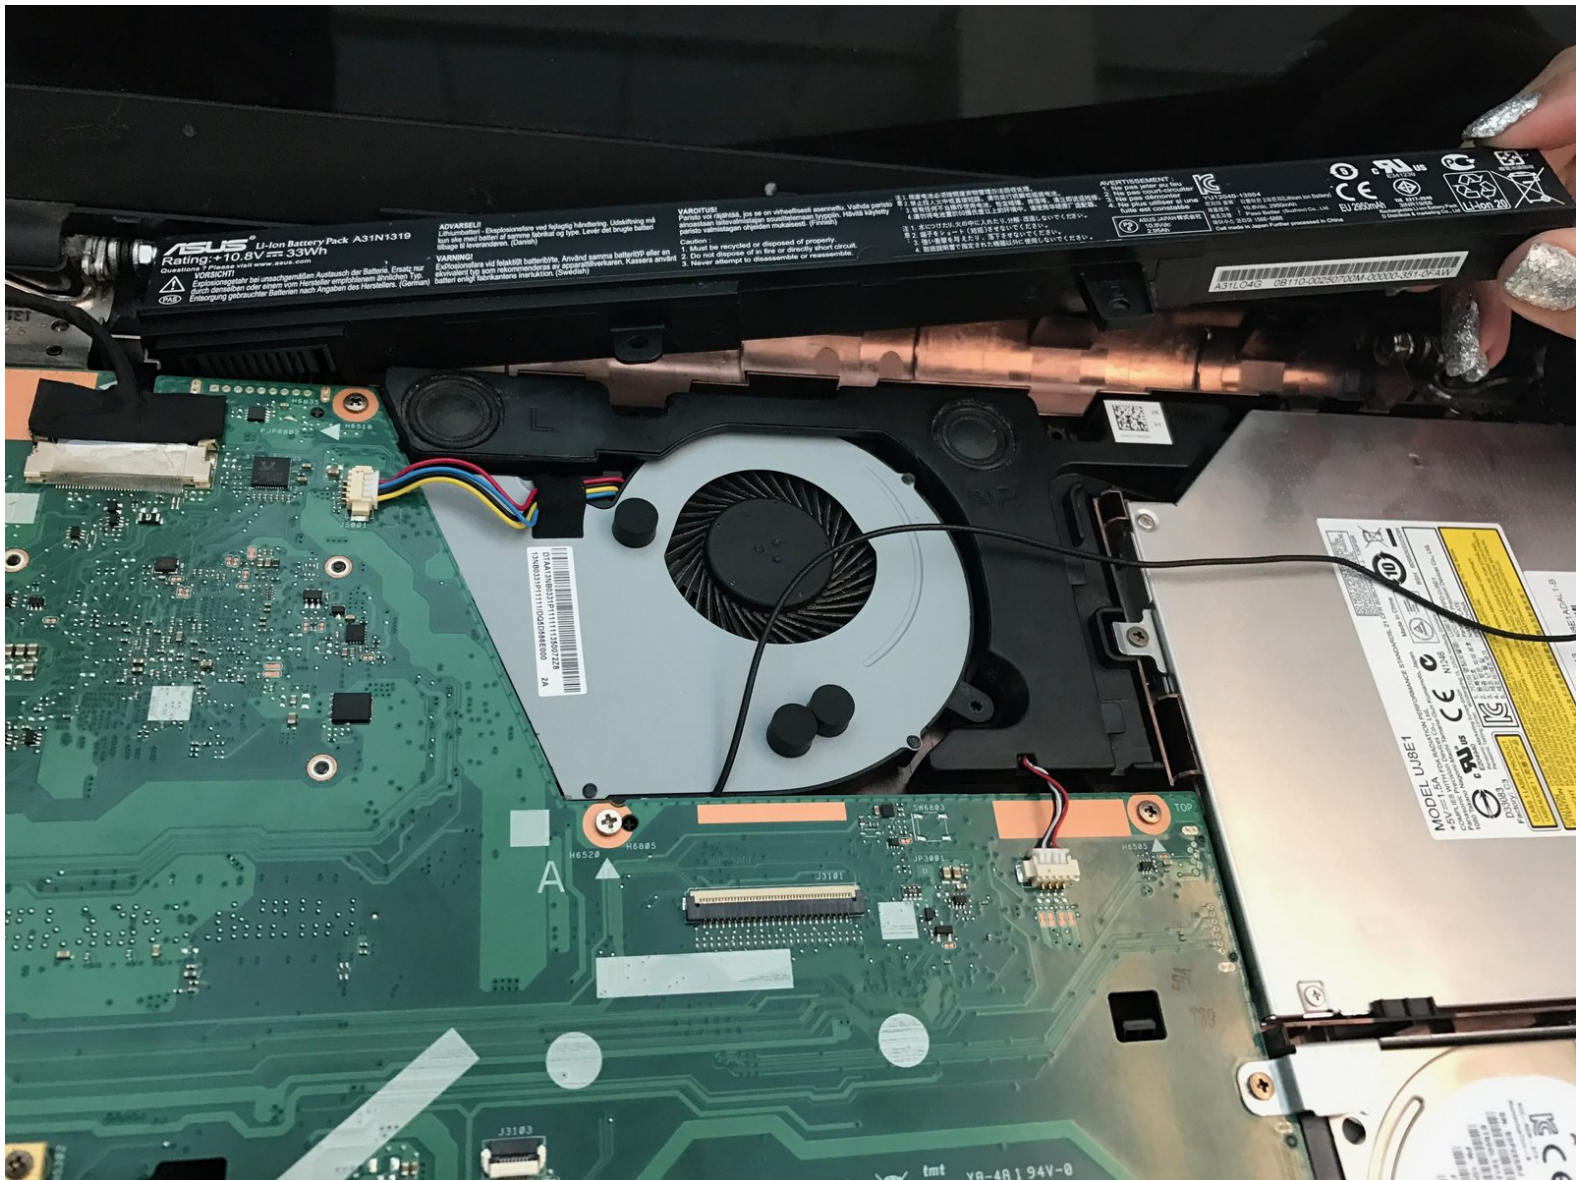

# INTRODUCTION

In this guide, you will learn how to remove or replace the battery of your laptop.



## TOOLS:


- [Heavy-Duty Spudger](#) (1)
- [Phillips #00 Screwdriver](#) (1)



## PARTS:


- [Replacement Battery](#) (1)

## Step 1 — Battery

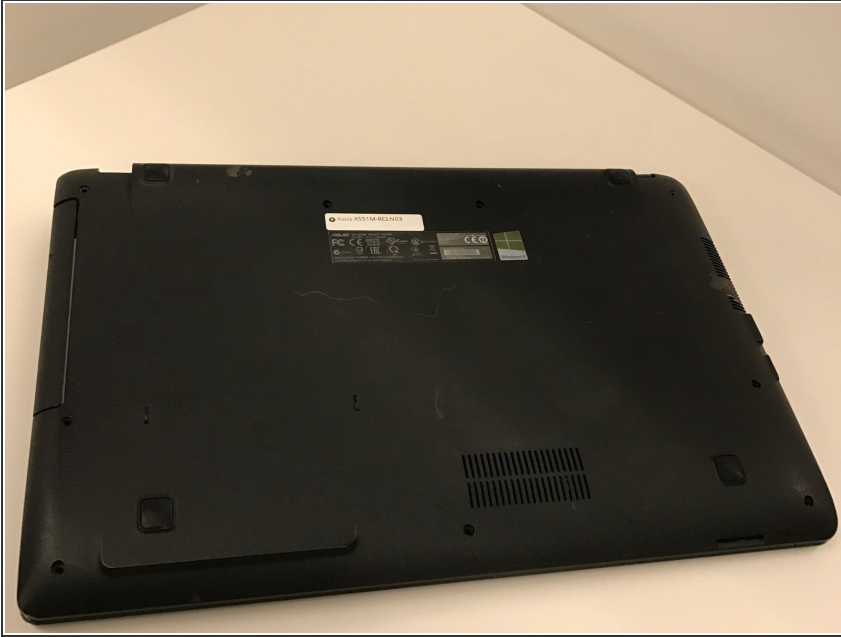

- Position the laptop with the back cover facing upward.


## Step 2

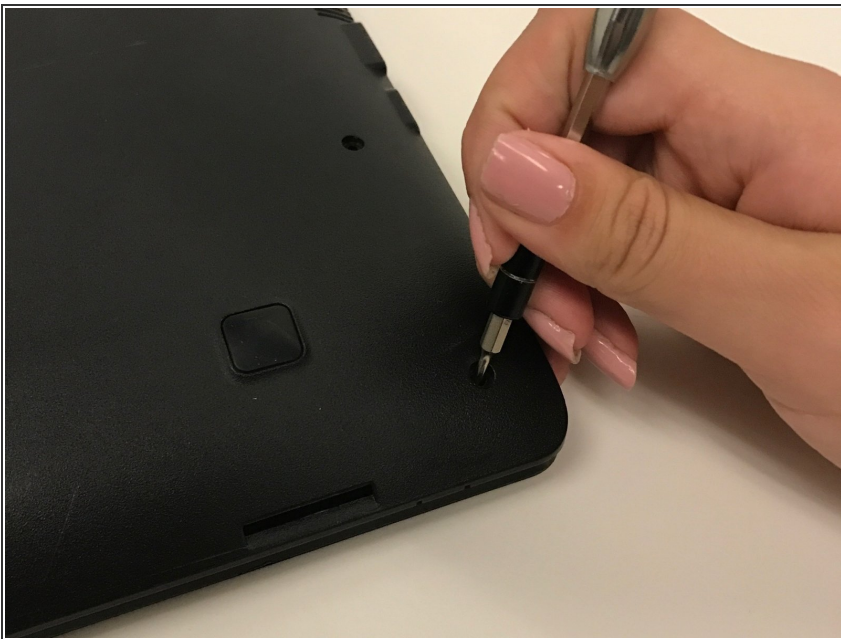

- Remove all 4 mm screws using a #00 Philip's screwdriver.




## Step 3

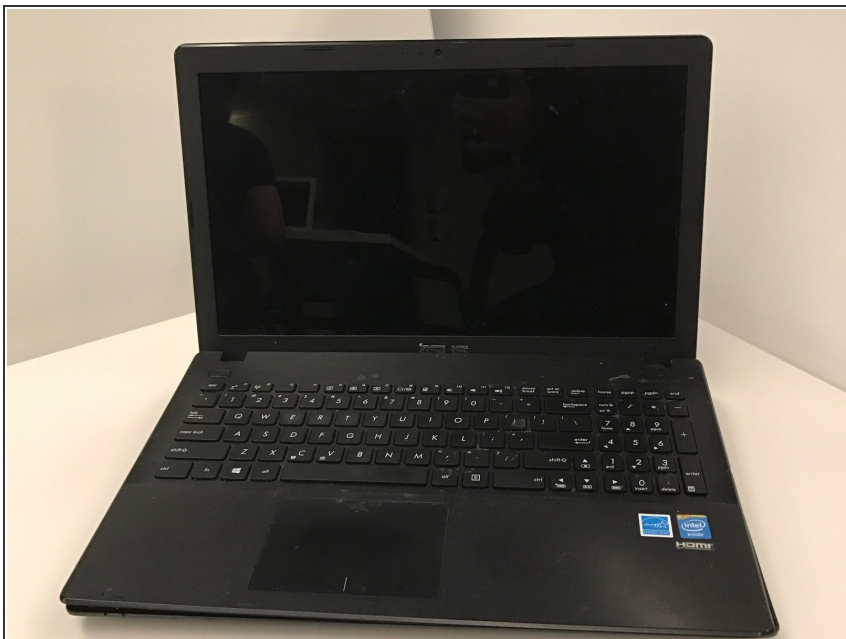


- Open the laptop with the keyboard facing upward.

## Step 4

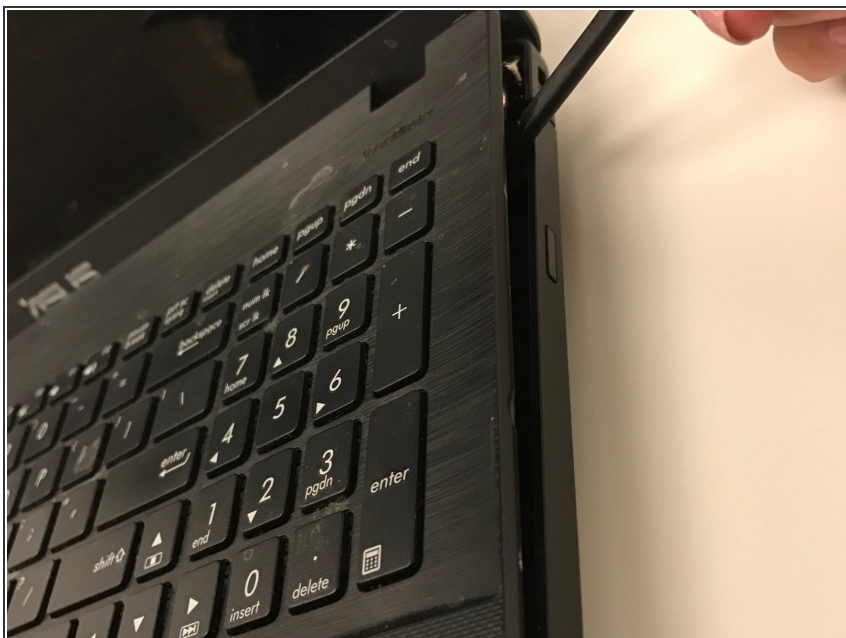


- Carefully pry up the keyboard cover with your fingers or with a plastic spudger.

## Step 5

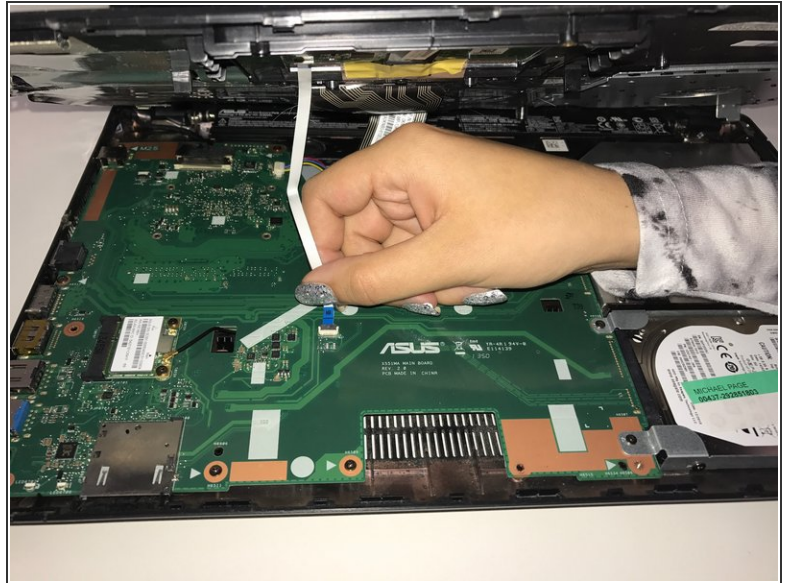

- Remove electrical ribbons by gently lifting up the tab that is holding them down, then pulling them gently.

## Step 6

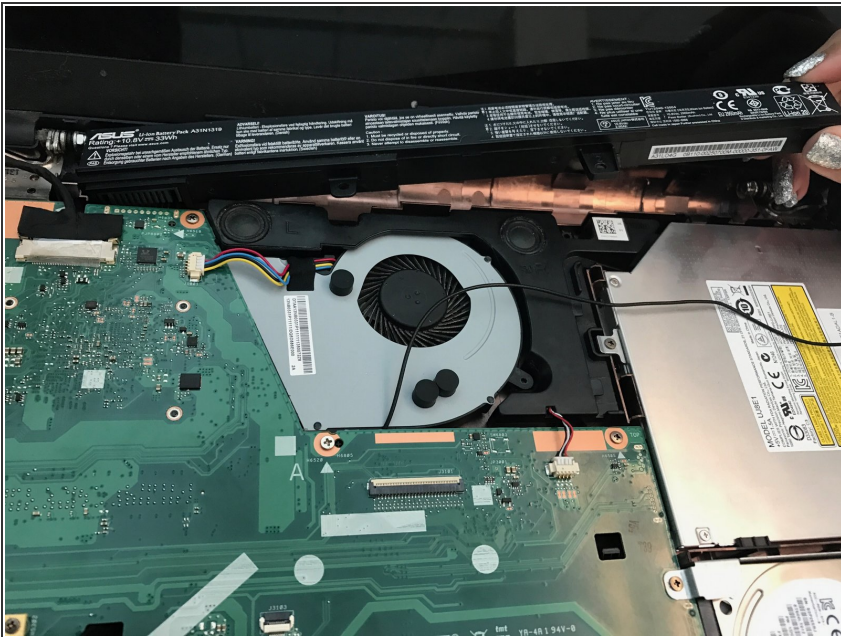

- Set the keyboard plate aside. Gently lift up battery to remove it.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2020-11-27 08:42:59 PM (MST).

