



# HP Photosmart M547 Screen Replacement

How to replace the screen on a HP Photosmart M547.

Written By: Jason Curran



---

## INTRODUCTION

This guide will show you how to replace the screen on a HP Photosmart M547 in order to fix your device.

---

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Screen



- Disconnect from all power sources. (Remove batteries, chargers, etc.)

## Step 2

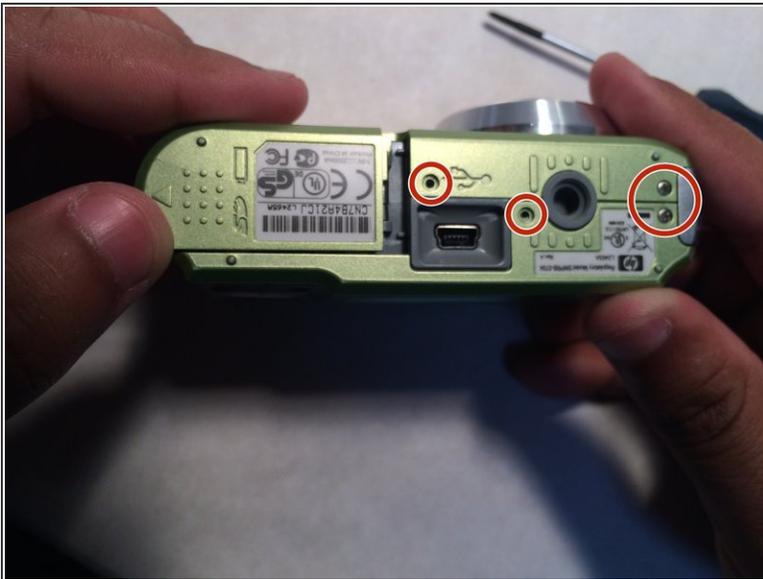


- Remove the five 5mm screws from the bottom of the camera with a PH00 screwdriver.

### Step 3




- Pop the silver siding off of the camera. Proceed carefully as to not break the plastic.

### Step 4

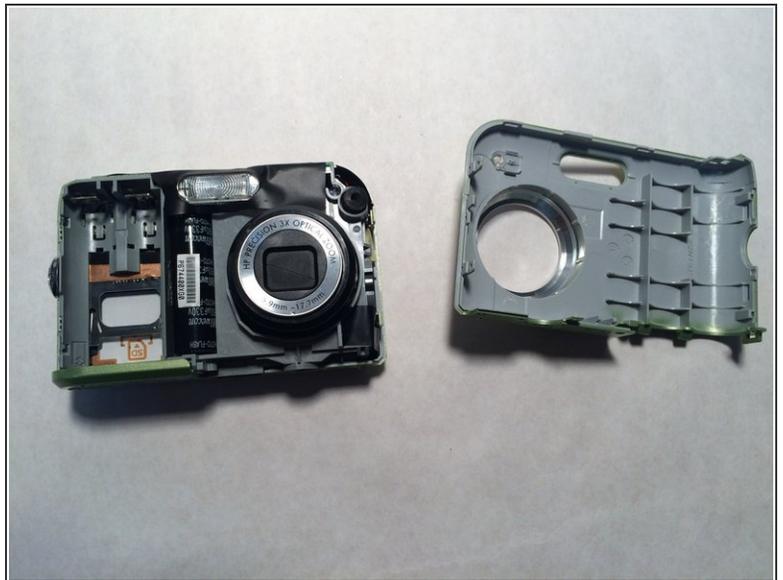

- Make sure that the siding is fully removed and the battery dock is open. Carefully pry the top off of the camera.

## Step 5

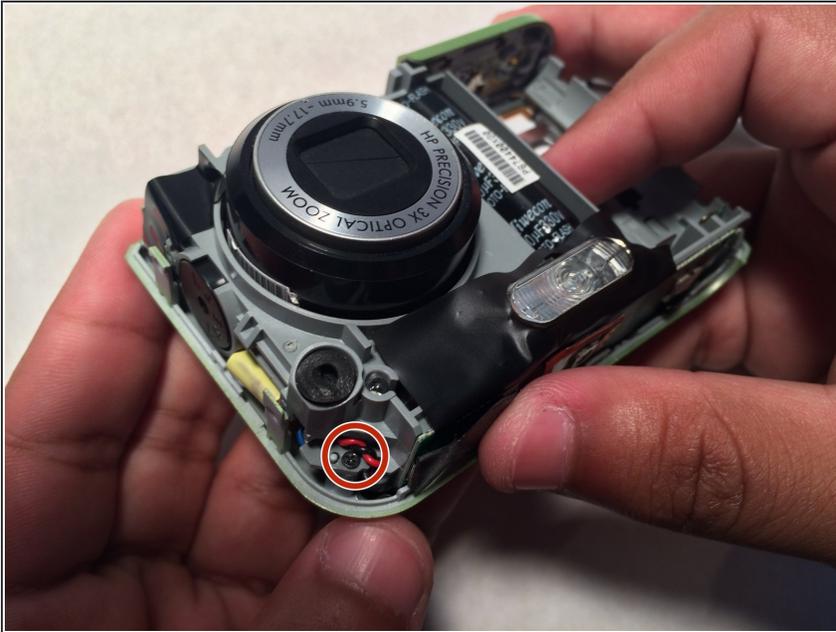


- Approach from the front of the camera, make sure that the black/red wires are not covering the screw.
- Carefully remove the black 5mm screw from the camera with a PH00 screwdriver.

## Step 6




- Flip the camera over and pop off the plastic siding.

## Step 7

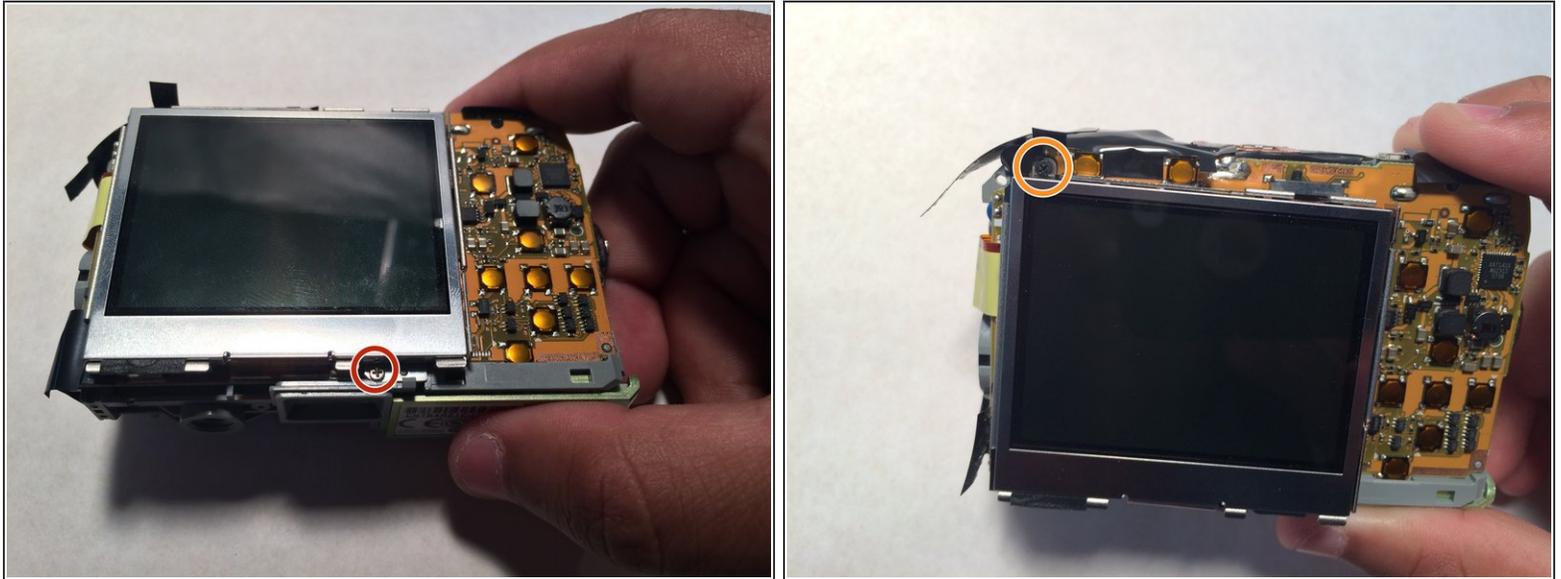


- Look for the silver 5mm screw connecting the screen to the circuit board. Then carefully remove it using a PH00 screwdriver.
- On the opposite corner of the screen there is a similar screw. Carefully remove that one as well.
- ⓘ You may need to peel back thin, black plastic to get to the screw. The plastic is purely there for dust protection.

## Step 8

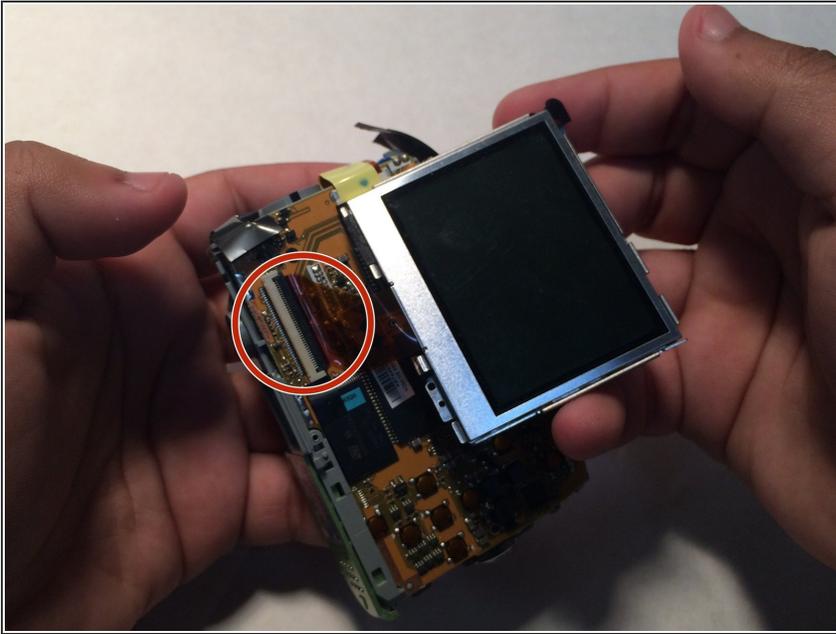

- ⓘ When you lift the screen off of the rest of the camera, you will see a small piece of ribbon wire connecting the screen and circuit board.
- To remove this connection, you must lift the black bar at the base of the ribbon wire (on the circuit board), then slide the ribbon wire out.

## Step 9

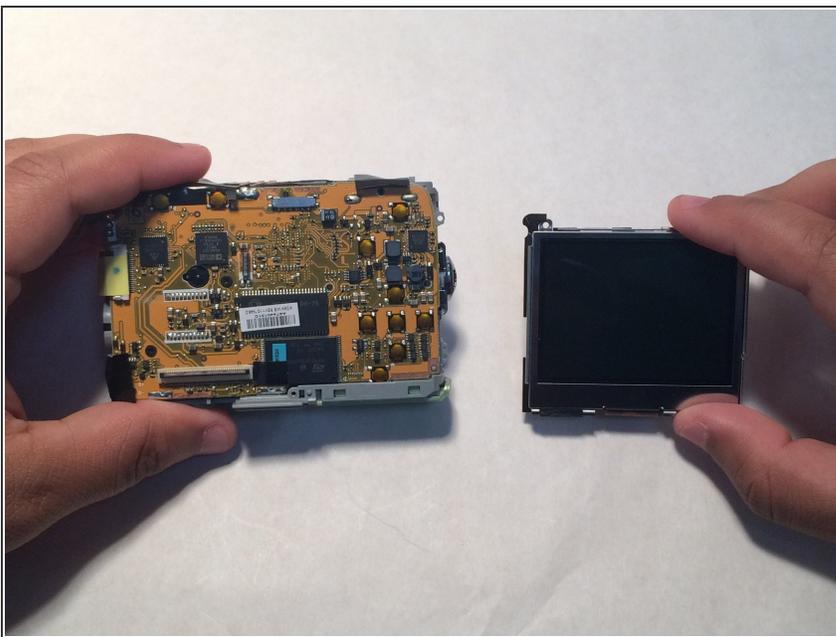

- Congratulations! You have removed the screen, you can now replace it and reassemble your camera.

To reassemble your device, follow these instructions in reverse order.