



Sony Vaio VPCEB11FM Keyboard Replacement

Written By: Maxine Filcher



TOOLS:

Phillips #1 Screwdriver (1)
iFixit Opening Tool (1)

PARTS:

keyboard panel (1)

Step 1 — Battery



 Power down and disconnect the laptop from power supply.

- Using your fingers, unlock the tab by pushing on the slide.

Step 2





- While holding the release slide, use your thumb to lift the lip of the battery to pull it out.

Step 3



- Pull the battery out.

Step 4 — DVD Drive

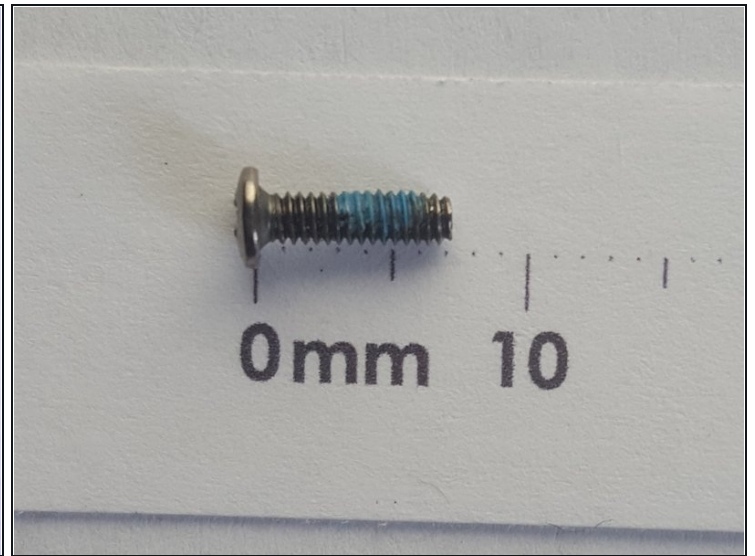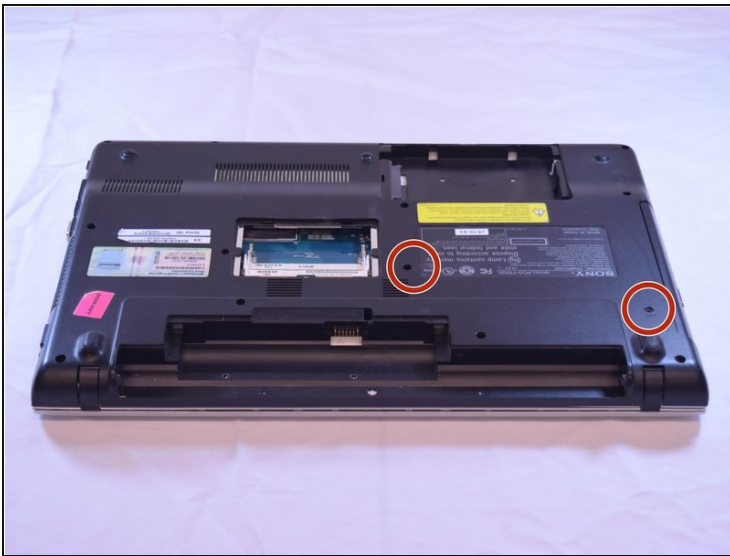



- Remove the 7mm screws with the Phillips #1 Screwdriver.

Step 5




- Grasp the DVD drive's face plate with your fingers and pull out.

Step 6 — Keyboard

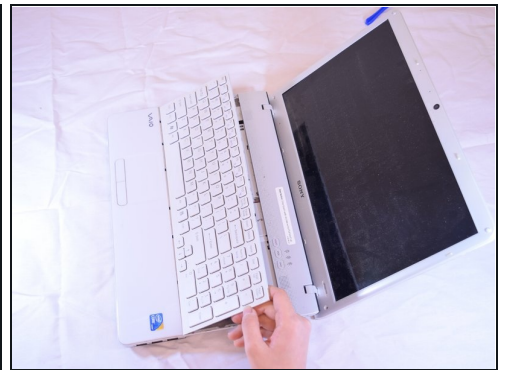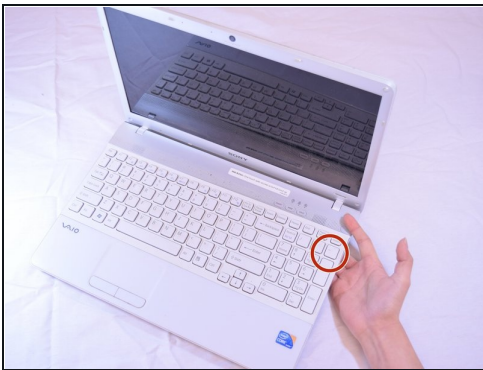

- Within the DVD drive compartment, press on the hole to push the keyboard out of its placement.
- The keyboard may need to be loosened on its edges with a plastic spudger.

Step 7

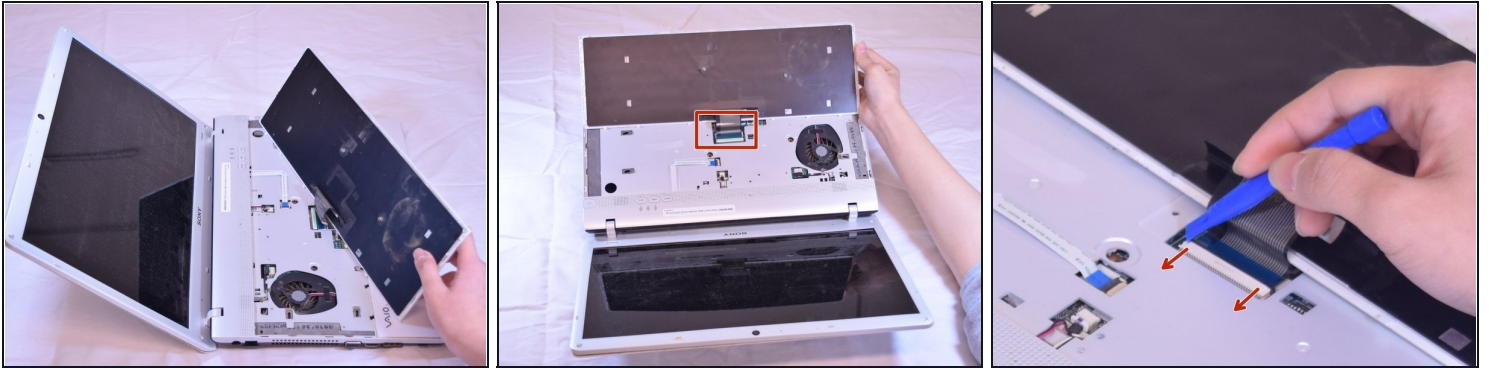

⚠ Carefully pull the keyboard back to expose ribbon connector.

- Using a spudger, or your finger tips, carefully slide the the ribbon keeper open.

To reassemble your device, follow these instructions in reverse order.