




# Sony Vaio VPCEB11FM DVD Drive Replacement

Written By: Maxine Filcher

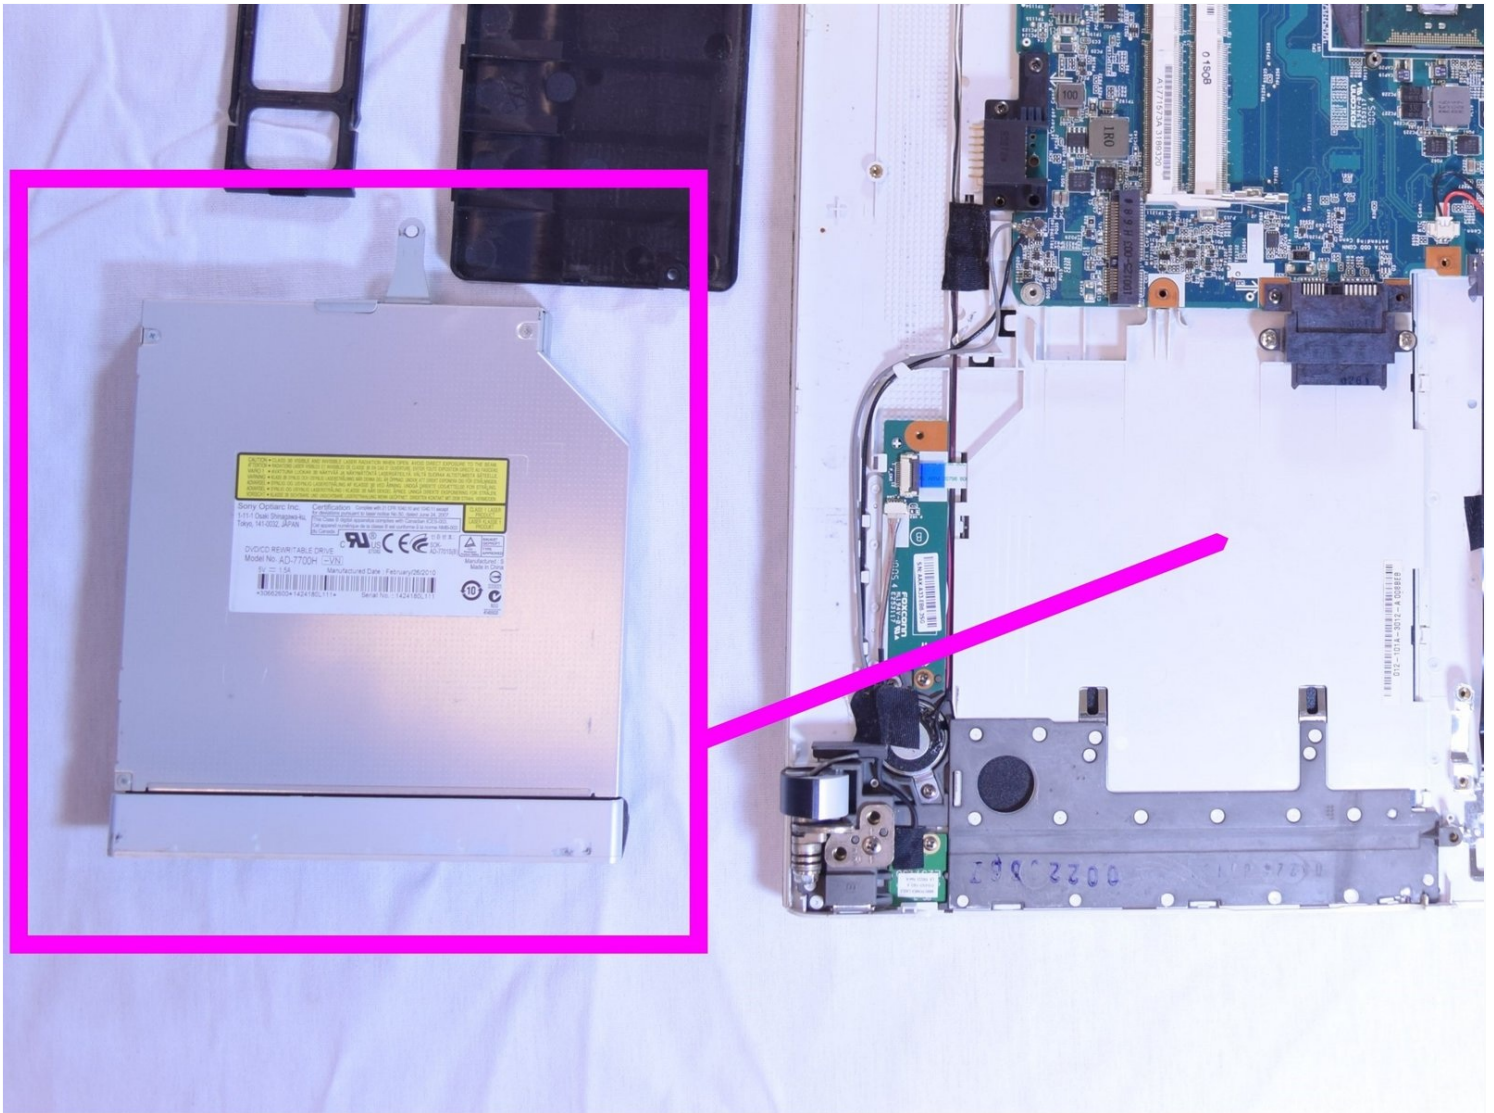

## TOOLS:

Phillips #1 Screwdriver (1)

### Step 1 — Battery



 Power down and disconnect the laptop from power supply.

- Using your fingers, unlock the tab by pushing on the slide.

### Step 2





- While holding the release slide, use your thumb to lift the lip of the battery to pull it out.

### Step 3



- Pull the battery out.

### Step 4 — DVD Drive

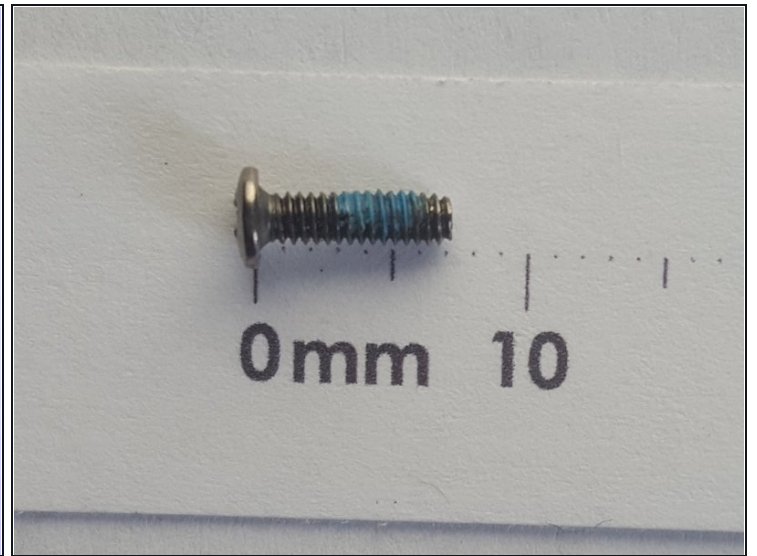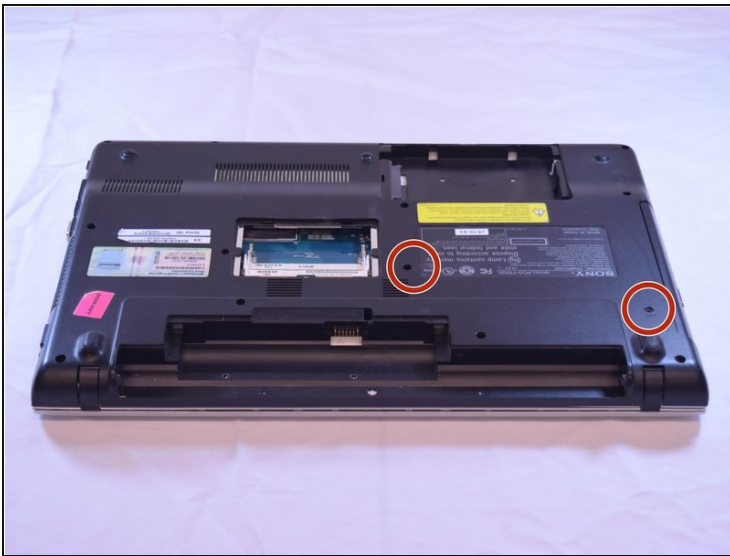

- Remove the 7mm screws with the Phillips #1 Screwdriver.



## Step 5



- Grasp the DVD drive's face plate with your fingers and pull out.

---

To reassemble your device, follow these instructions in reverse order.