


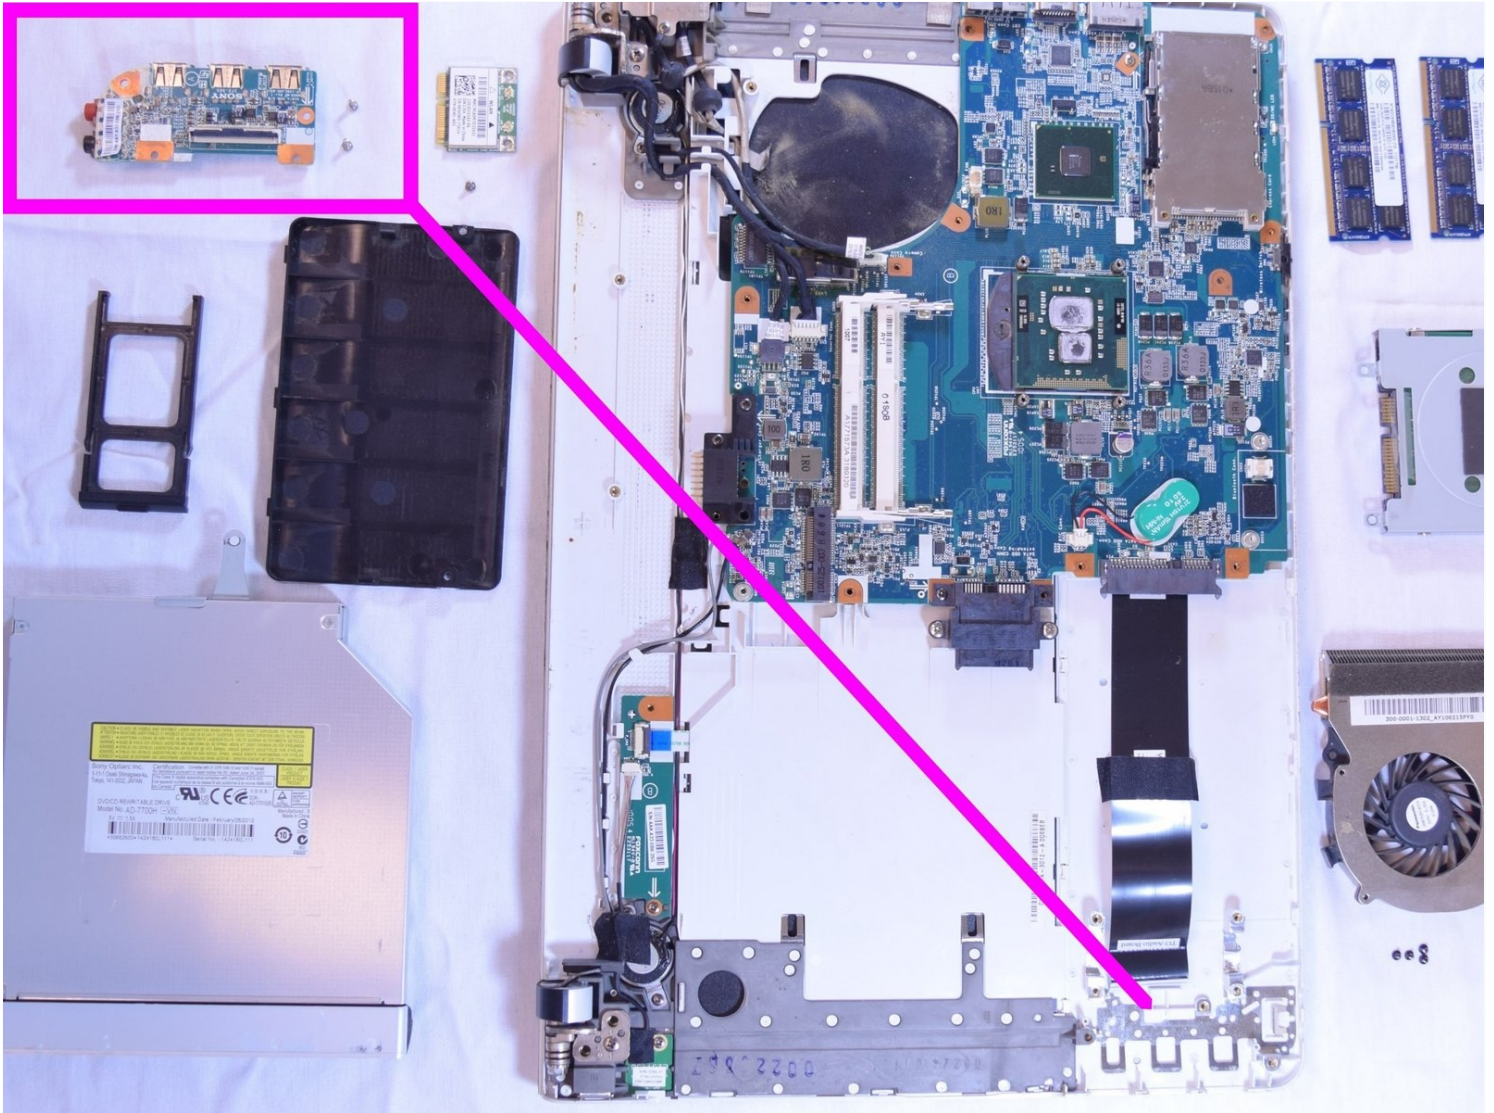

Sony Vaio VPCEB11FM Audio Card Replacement

Written By: Maxine Filcher




TOOLS:

Phillips #000 Screwdriver (1)

Phillips #1 Screwdriver (1)

Step 1 — Battery



 Power down and disconnect the laptop from power supply.

- Using your fingers, unlock the tab by pushing on the slide.

Step 2




- While holding the release slide, use your thumb to lift the lip of the battery to pull it out.

Step 3



- Pull the battery out.

Step 4 — RAM

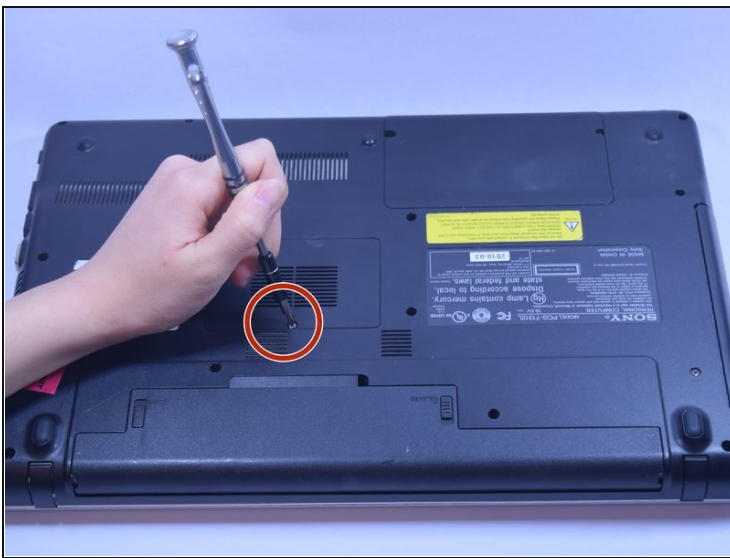


- Unscrew the RAM cover plate using the Phillips #1 Screwdriver.
- Once the cover has been loosened, pry the cover with your finger for it to come off.

Step 5




- Use your fingers to gently pull the white plastic strip outward on both sides.
- Once you pull the strip, the strip of RAM will loosen up. Once loose the strip of RAM should lift out.
- Once done with the top strip of RAM continue for all continuous strips.

Step 6 — Hard Drive

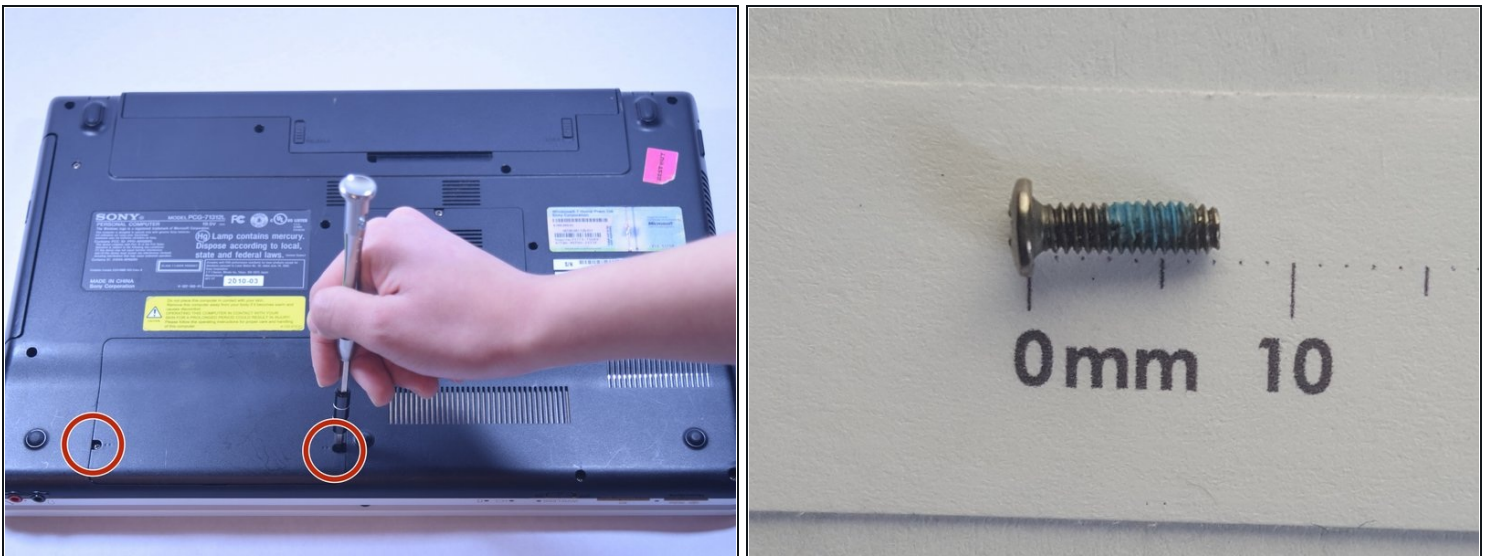


- Using the Phillips #01 Screwdriver, remove the two 7mm screws.

Step 7

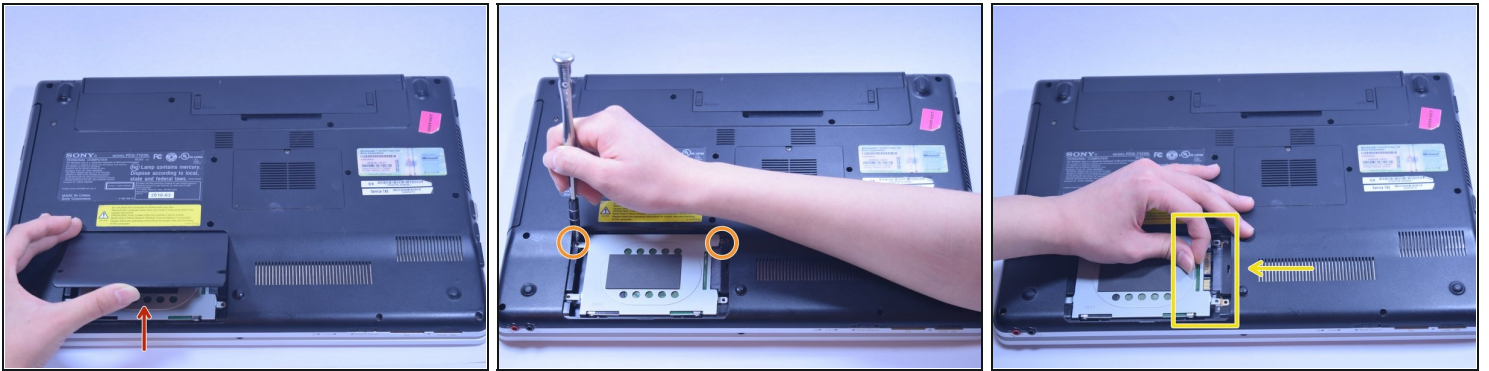



- Use your fingers to pry the cover upward.
- Unscrew the two 7mm screws.
- Pull the plastic tab in the direction of the arrow to take out.

Step 8

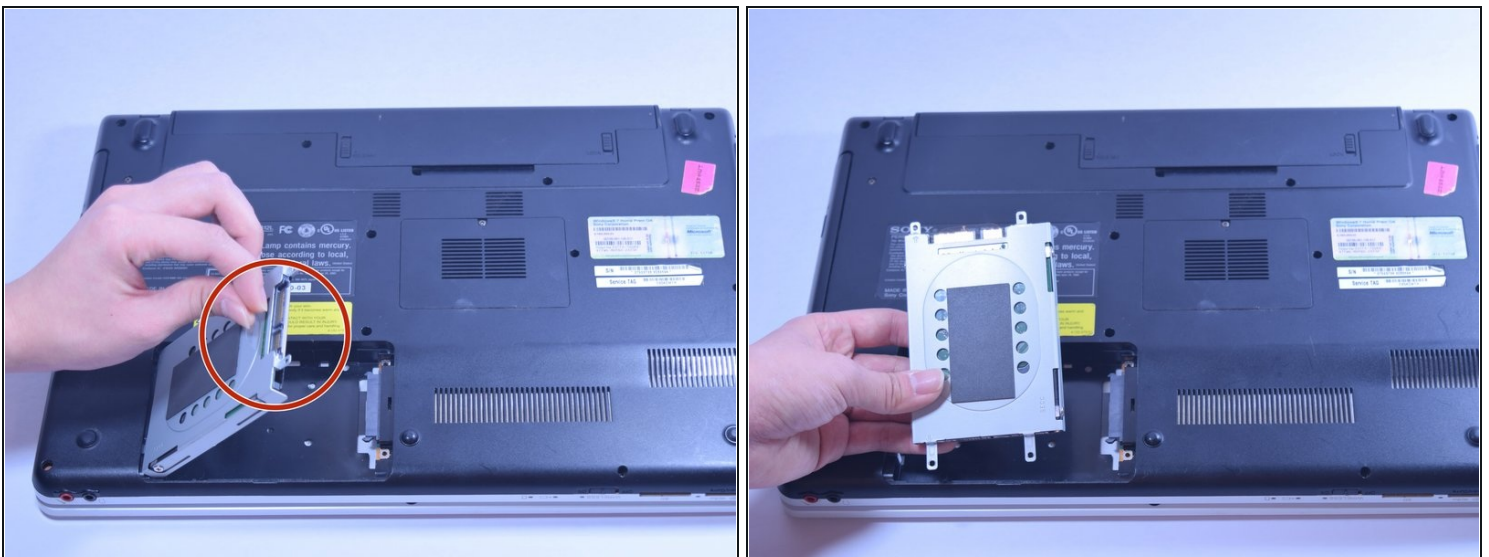

- Lift plug side first.
- Remove all the way.




Step 9

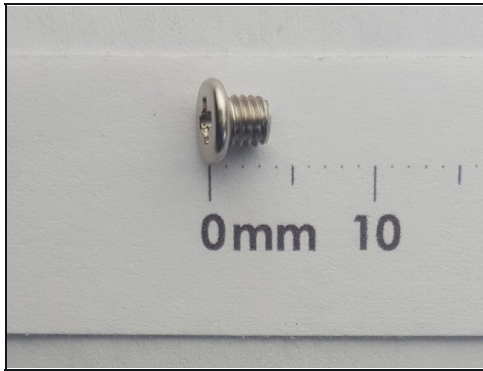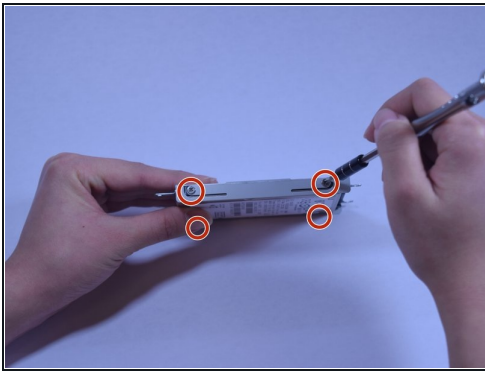

i Skip to next step if accessing other components.




- Remove the 3mm screws with the Phillips #1 Screwdriver from hard drive bracket.

Step 10 — Audio Card

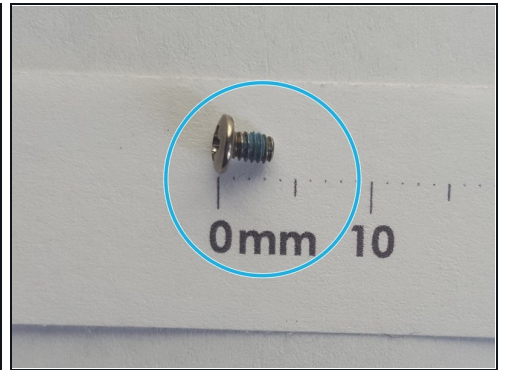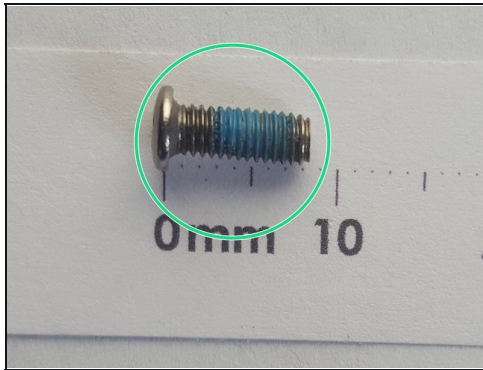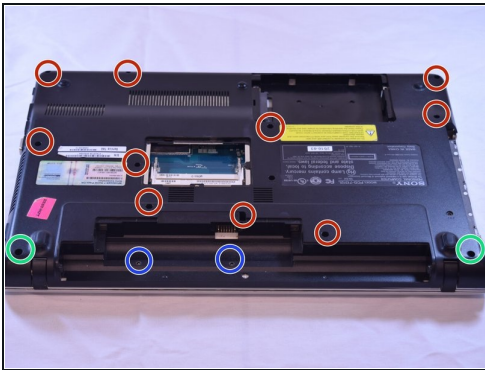

- #1 Unscrew the back panel
- #2 Then work the tool around the sides to release cover. You may need a second tool to help keep your loose corner open.

Step 11

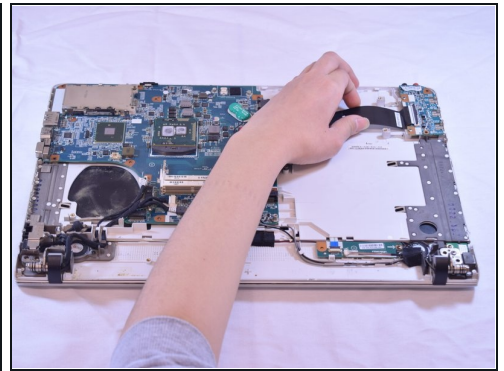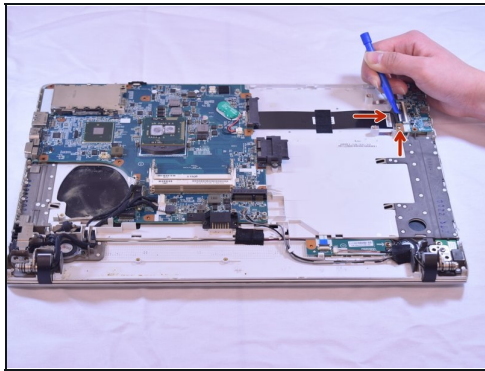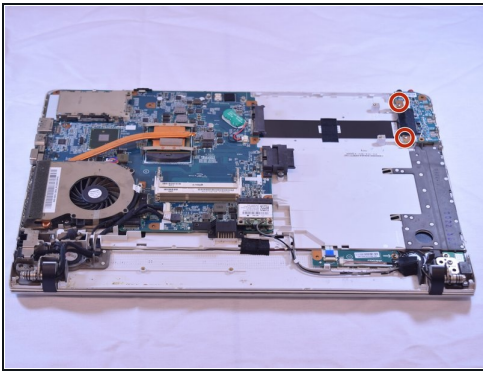

- Unscrew the screw with the size of * screw driver
- Left up the case holder
- Gently pull the connective cable

To reassemble your device, follow these instructions in reverse order.