




# Panasonic KX-TGA600M Keypad Replacement

This guide will cover how to replace your Panasonic KX-TGA600M keypad.

Written By: Lauren Bowman

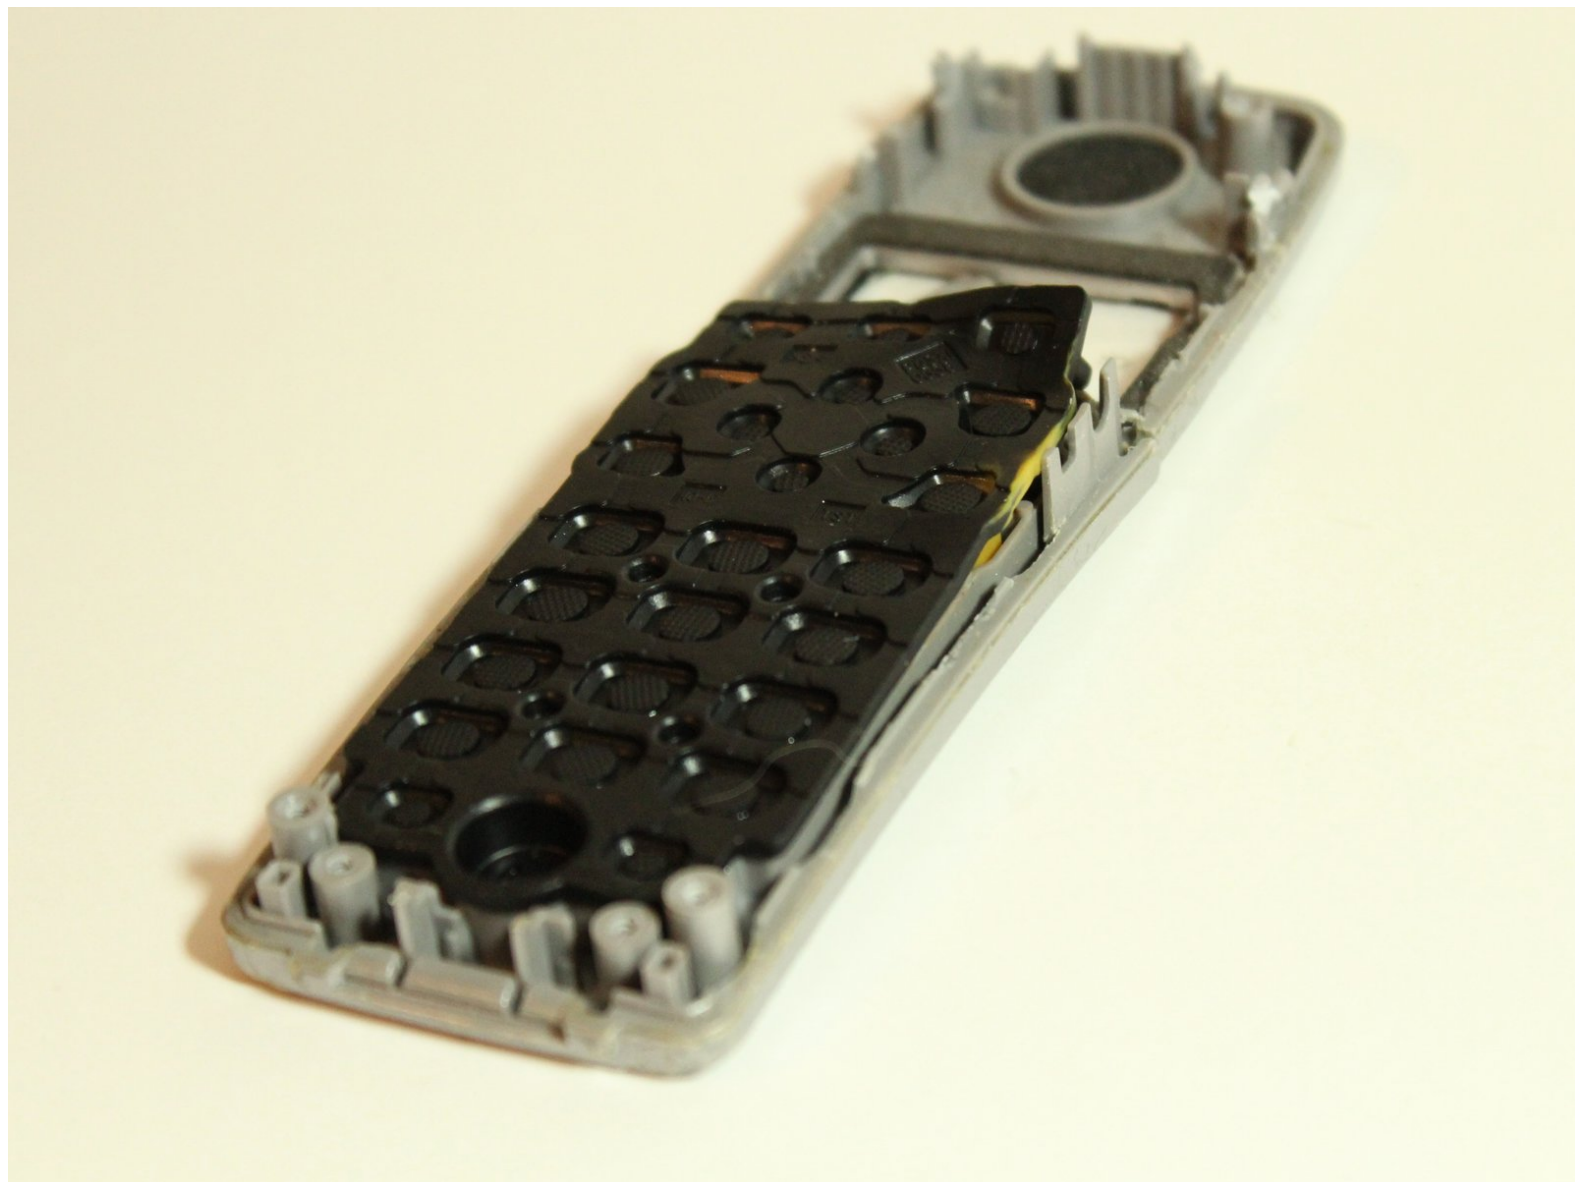



---

## INTRODUCTION

Use this guide to replace the keypad on your phone.



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-



## Step 1 — Battery



- On the back of the phone, remove battery cover.
- Push down on the marked indentation and pull downwards.


## Step 2



- Pull out to remove the battery.




## Step 3 — Keypad

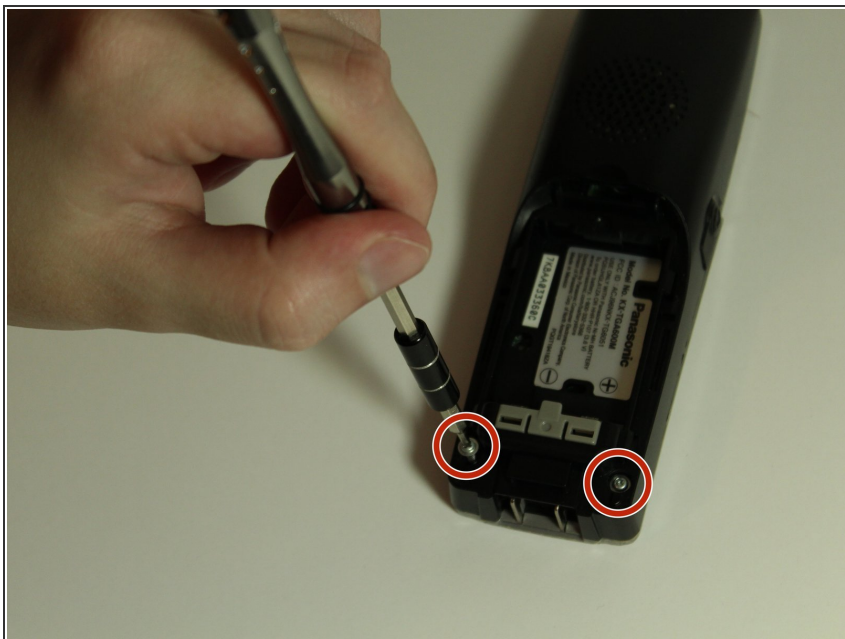

- Once battery is removed, use the Phillips #00 screwdriver to remove the two silver screws at the bottom left and right corners on the back of the phone.




## Step 4

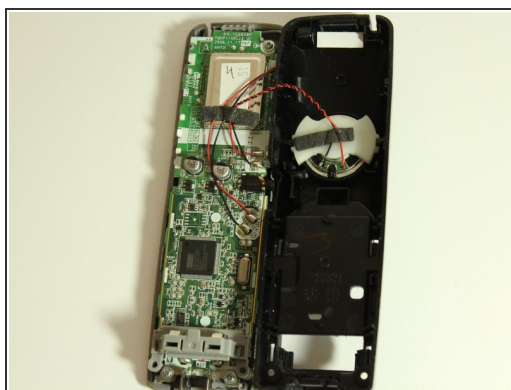

- Pull the phone apart. The plastic opening tool may be needed.
- ⓘ The clear light piece will fall out, so make sure you place it next to the screws.




## Step 5

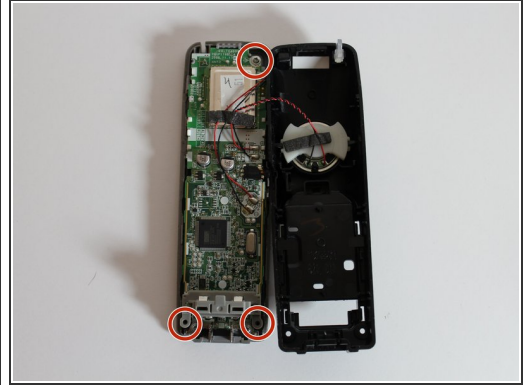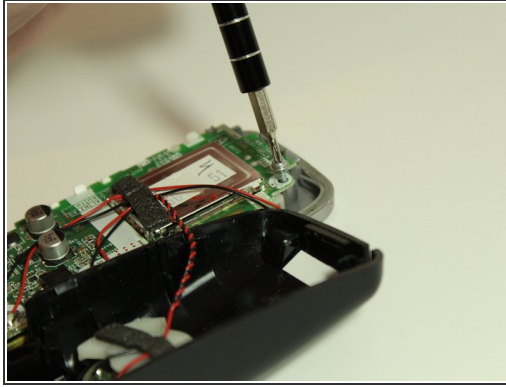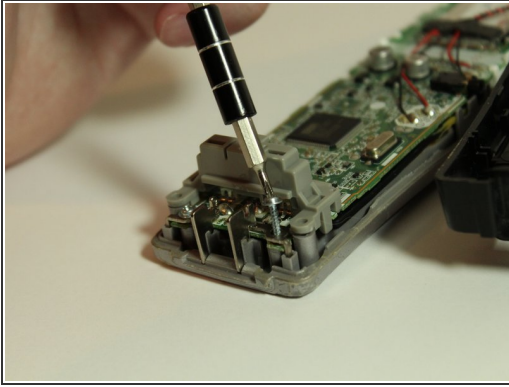

- Use the Phillips #00 screwdriver to remove the three screws holding the circuit-board in place.

**i** The screws are located in the top right corner, bottom left corner, and bottom right corner.

## Step 6

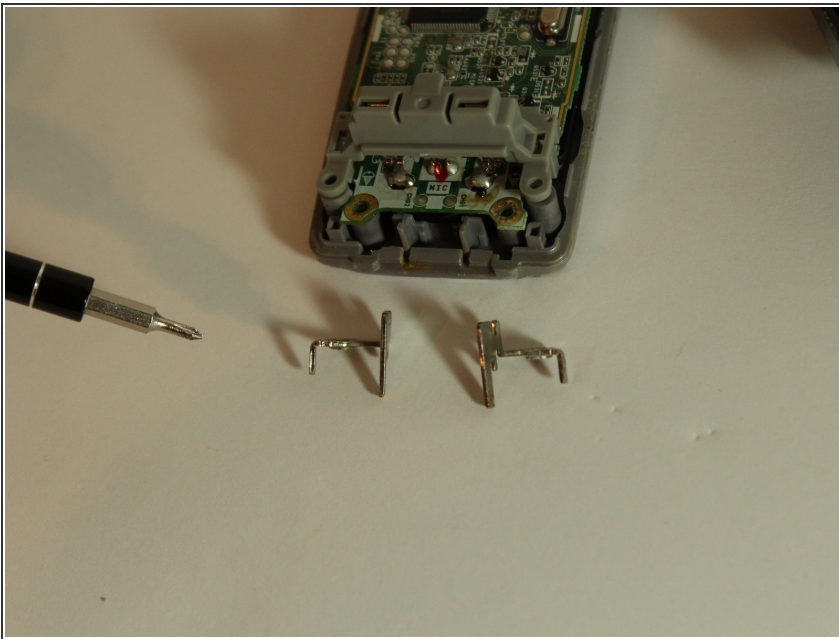

- Once the screws are out, remove the charging contacts beneath the two bottom corner screws.




## Step 7



- Remove the circuit board.

## Step 8

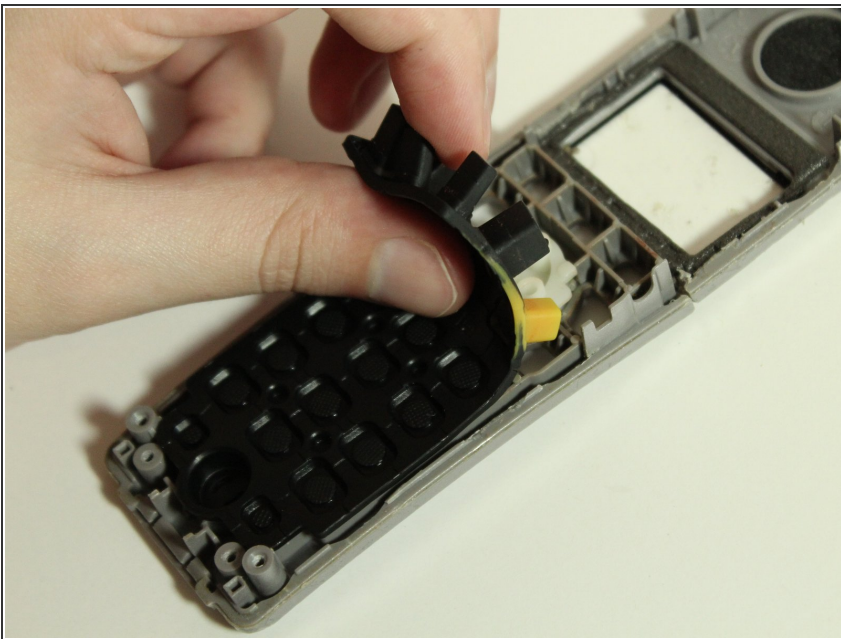

- Pull back the black silicone keypad.

To reassemble your device, follow these instructions in reverse order.