



# Dyson DC28 Animal Sole Plate Replacement

Replace your damaged sole plate if your vacuum is having trouble picking up debris.

Written By: Jake Walejko



---

## INTRODUCTION


This guide will show you how to remove the soleplate on the bottom of the vacuum. This is easily done by removing 3 plastic fasteners that lock the soleplate in place. Follow the steps below to see how this is done.

---

### TOOLS:



- [Coin](#) (1)
-

## Step 1 — Sole Plate

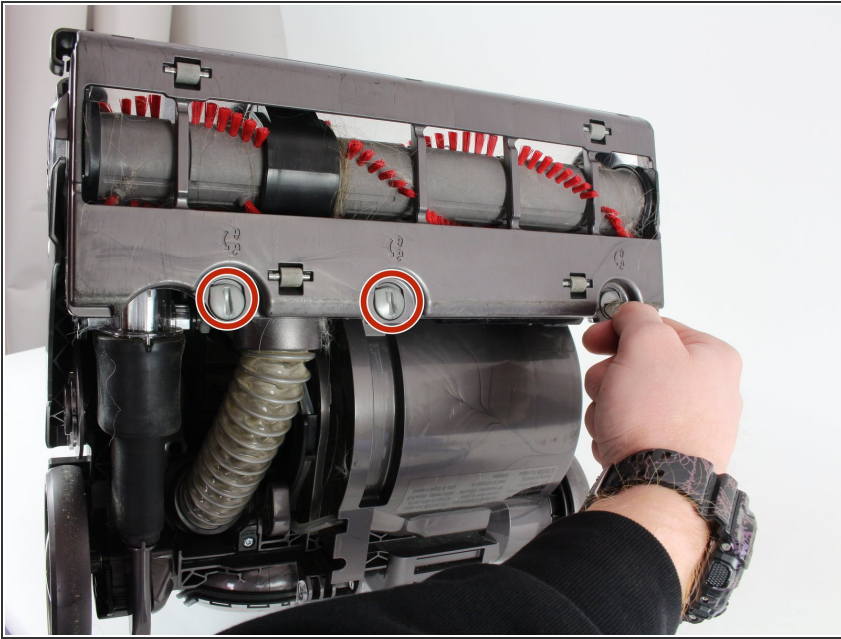

- Lay the vacuum on its side to allow for easy access to the bottom of the cleaner head.
  - Unlock the sole plate by using [a quarter](#) or other flat tool to turn the three plastic bolts counter-clockwise, as indicated on the sole plate.
- ⚠ The plastic fasteners can be damaged when using a metal tool to turn them.

## Step 2

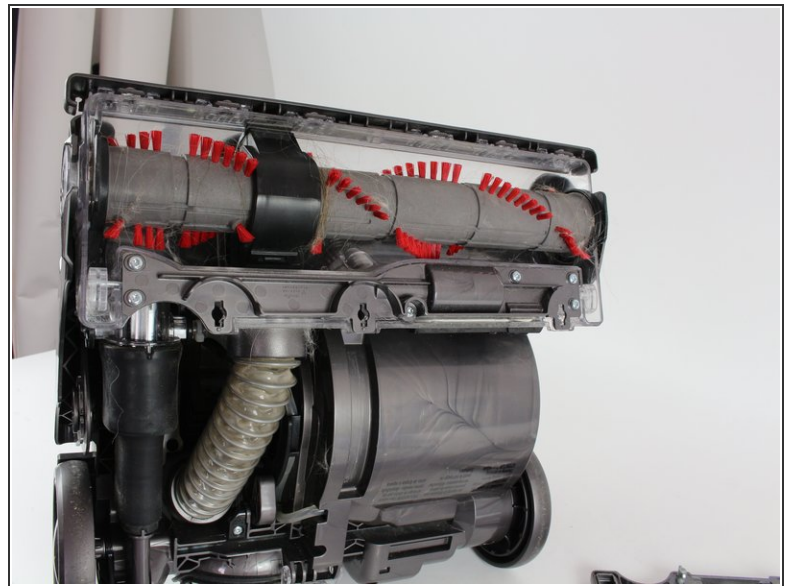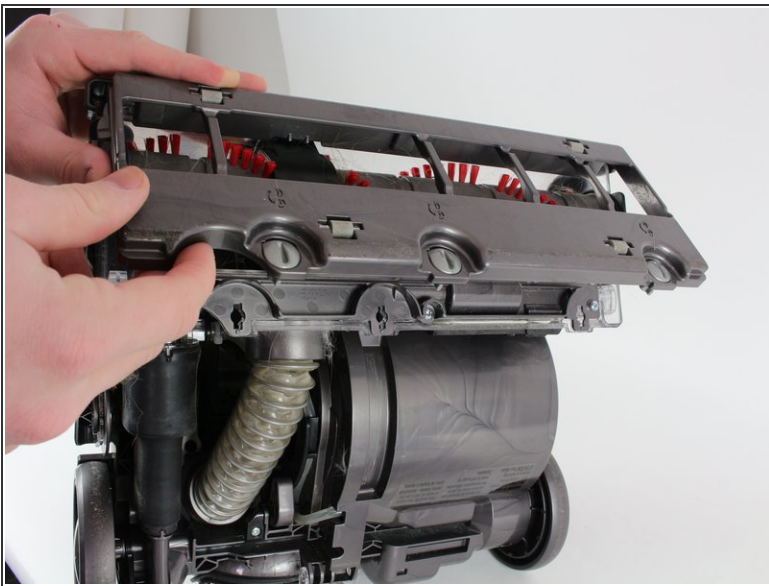

- Gently pull off the sole plate

To reassemble your device, follow these instructions in reverse order.