



# Canon EOS Rebel XSi LCD Screen Replacement

Use this guide to replace a broken or faulty LCD screen.

Written By: Erik Mork



---

## INTRODUCTION

This replacement guide shows how to remove the camera's LCD screen. The back panel must be removed before hand.

---

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
  - [Phillips #000 Screwdriver](#) (1)
  - [iFixit Opening Tool](#) (1)
-

## Step 1 — Back Panel



- Squeeze the eyepiece between your index finger and thumb and lift up and off.

## Step 2



- Using the PH000 screwdriver head, remove the four 4 mm screws on the bottom of the camera.

### Step 3



- Using the PH000 screwdriver head, remove the two 3mm screws on the right side of the camera (from the LCD screen).


### Step 4



- Remove grip by slowly peeling off.



## Step 5

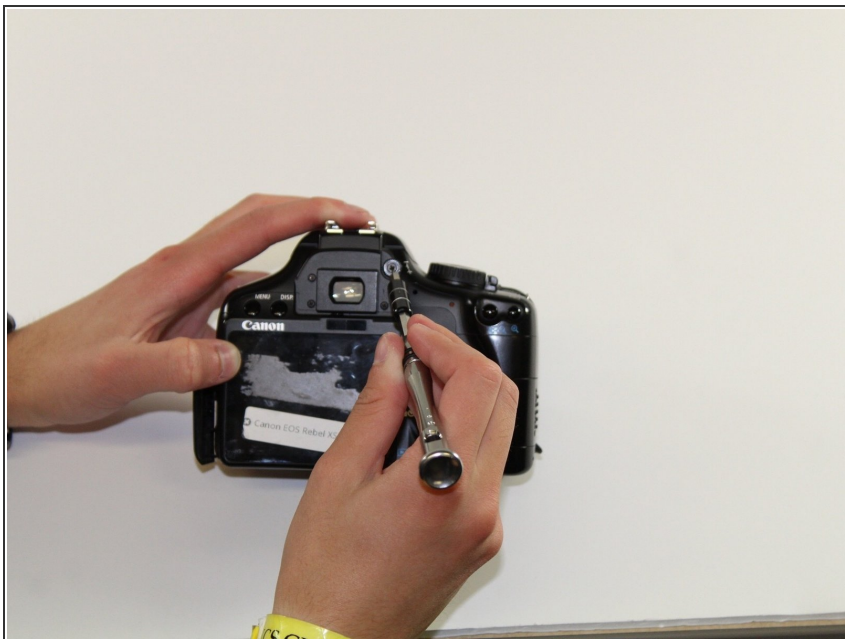

- Using the PH000 screwdriver, remove the four 4mm screws behind the eyepiece.

## Step 6




- Using the PH000 screwdriver head, remove one 4 mm screw on the left side of the camera (from the LCD screen).

## Step 7




- Remove the side panel by lifting off with fingers.

## Step 8

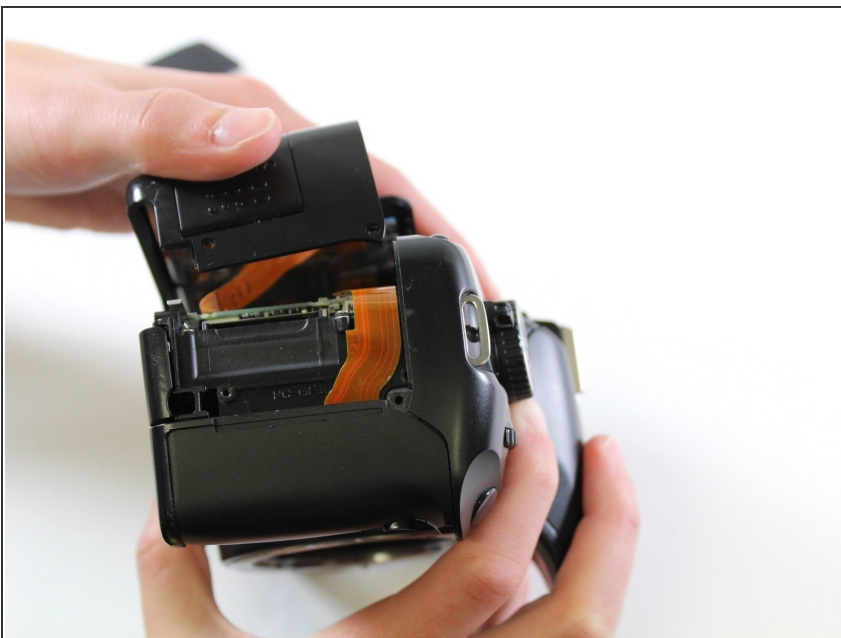



- Use hands to pry off the back panel.

## Step 9 — LCD Screen

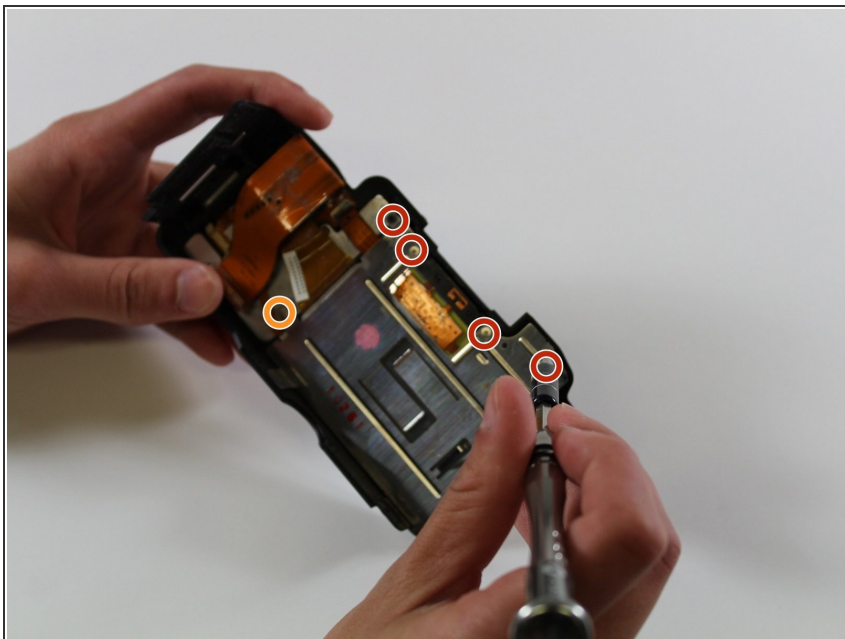

- Using the PH00 screwdriver head, unscrew four 4 mm screws and one 2 mm screw


## Step 10

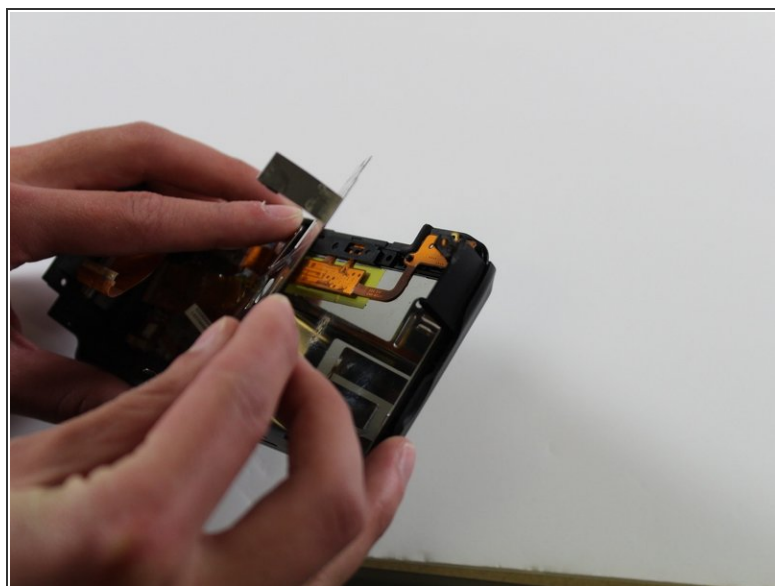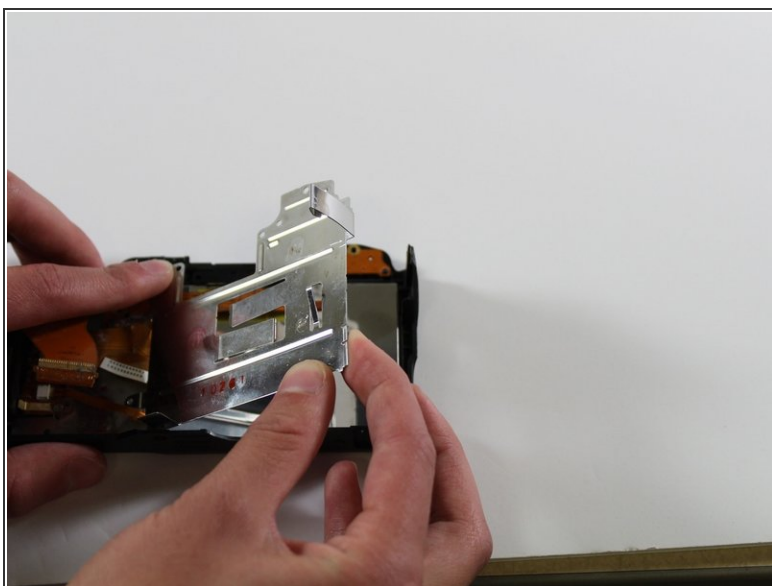

- Remove the metal plate covering inside of the LCD screen



## Step 11

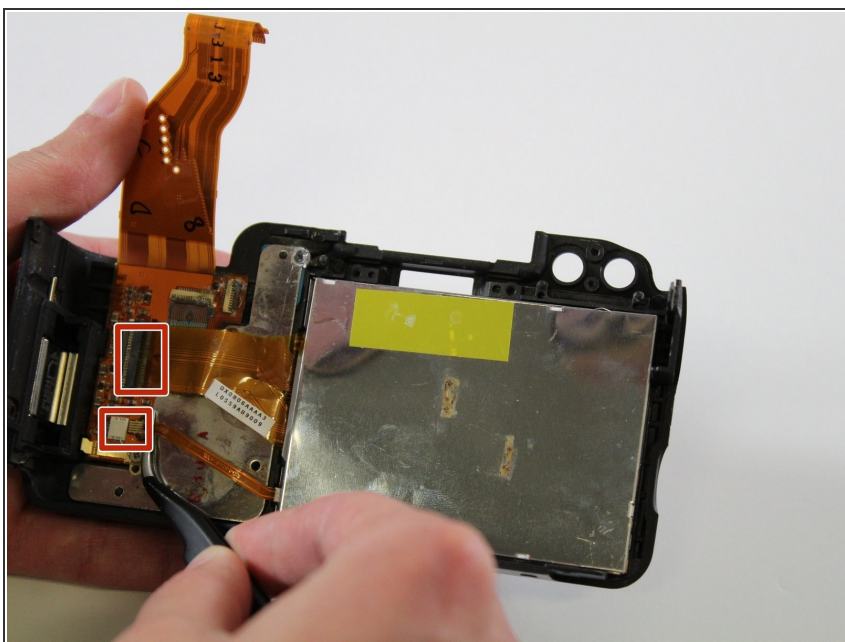

- Carefully disconnect the circuitry sheets from the white plastic bases

## Step 12



- Using the plastic spudger, carefully pry out the LCD screen from the back panel

To reassemble your device, follow these instructions in reverse order.