




Canon EOS Rebel XSi Back Panel Replacement

Remove and replace the back panel on the Rebel XSi

Written By: Erik Mork

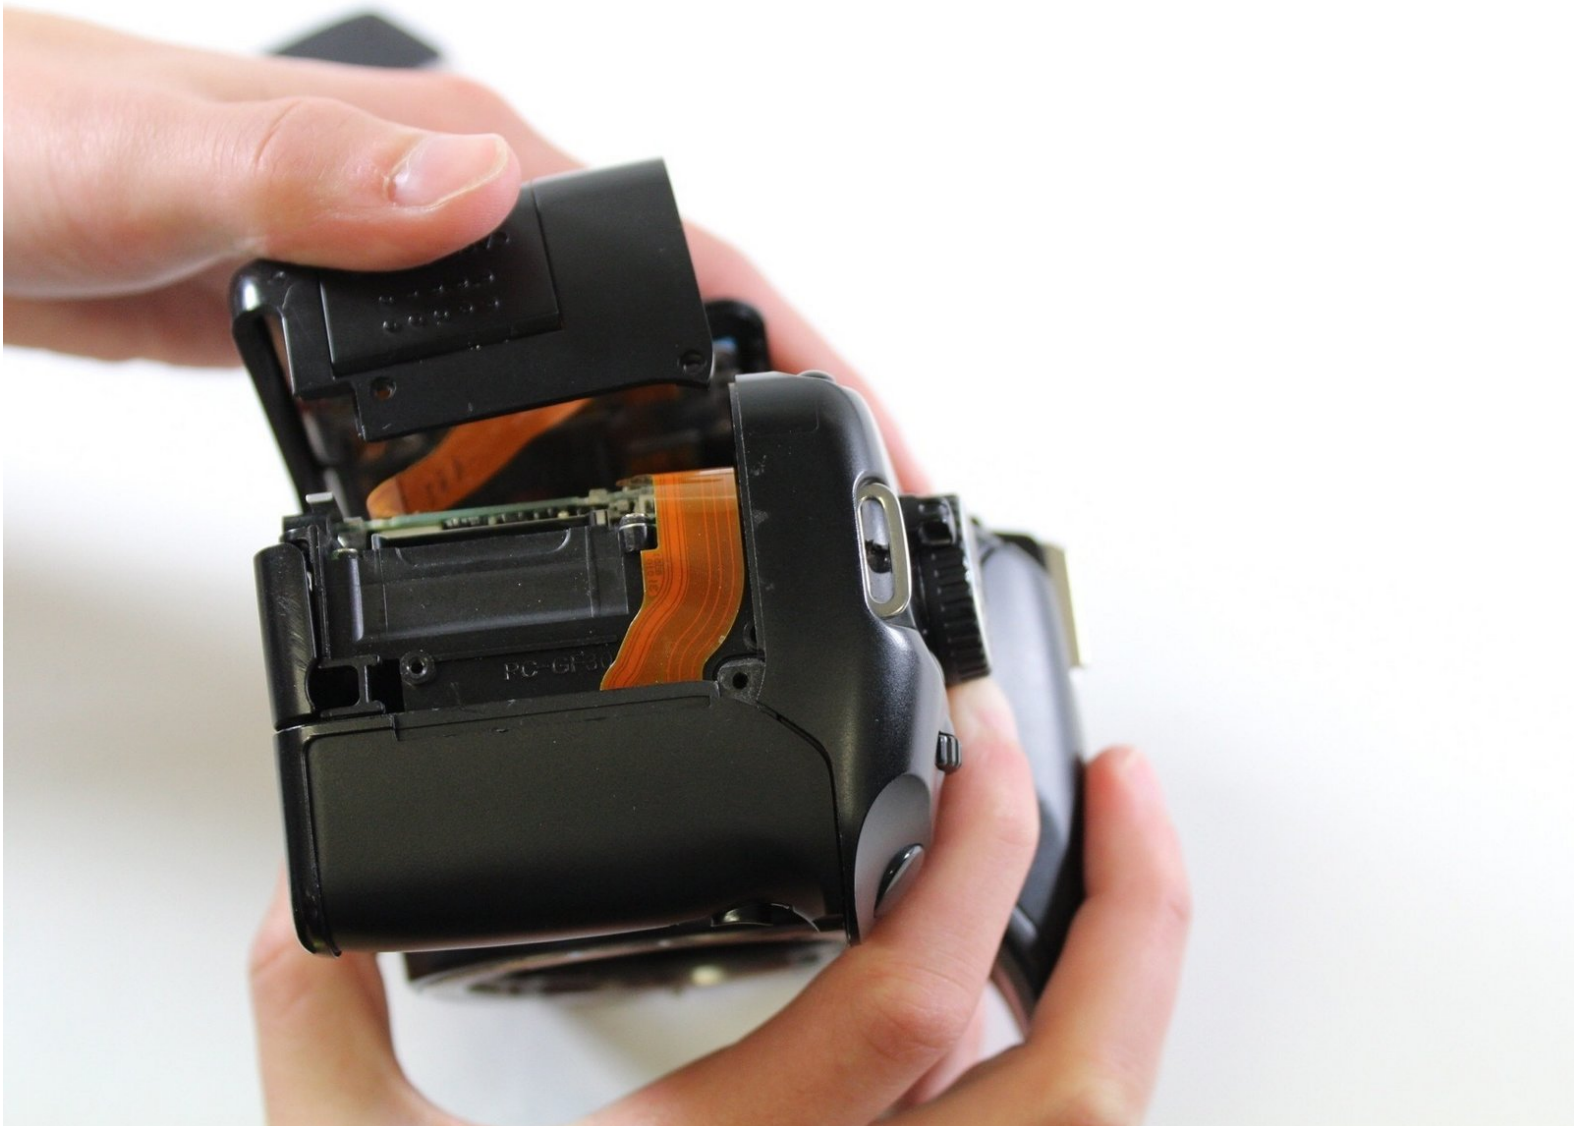

INTRODUCTION

This replacement guide shows how to remove this device's back panel. This step is necessary to replace many internal components of the camera.



TOOLS:

- [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Back Panel



- Squeeze the eyepiece between your index finger and thumb and lift up and off.

Step 2



- Using the PH000 screwdriver head, remove the four 4 mm screws on the bottom of the camera.

Step 3




- Using the PH000 screwdriver head, remove the two 3mm screws on the right side of the camera (from the LCD screen).

Step 4




- Remove grip by slowly peeling off.

Step 5

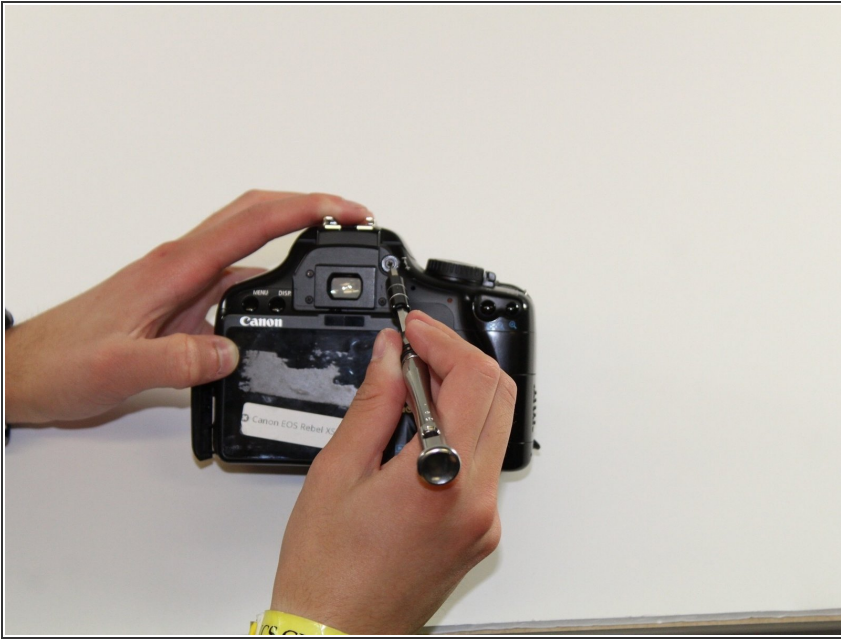

- Using the PH000 screwdriver, remove the four 4mm screws behind the eyepiece.

Step 6

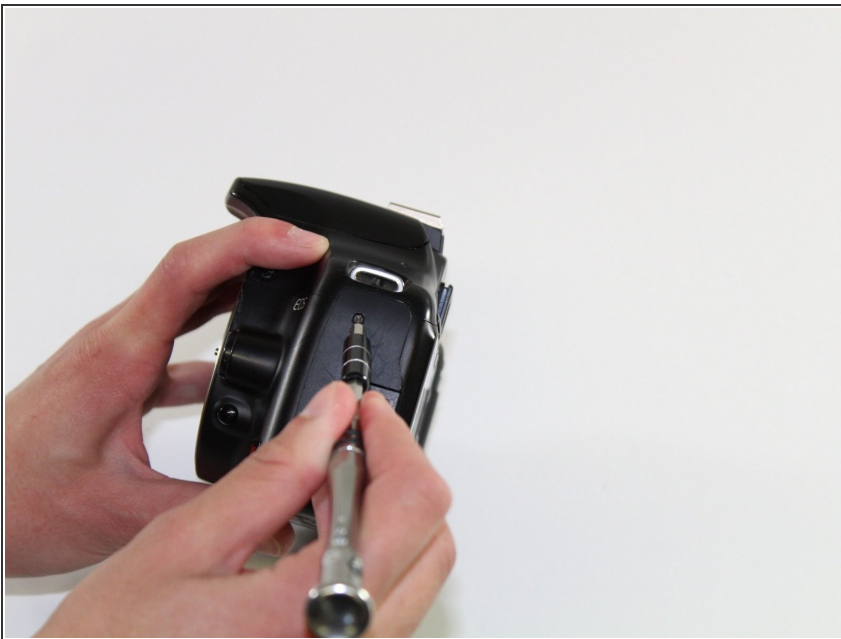


- Using the PH000 screwdriver head, remove one 4 mm screw on the left side of the camera (from the LCD screen).

Step 7



- Remove the side panel by lifting off with fingers.

Step 8

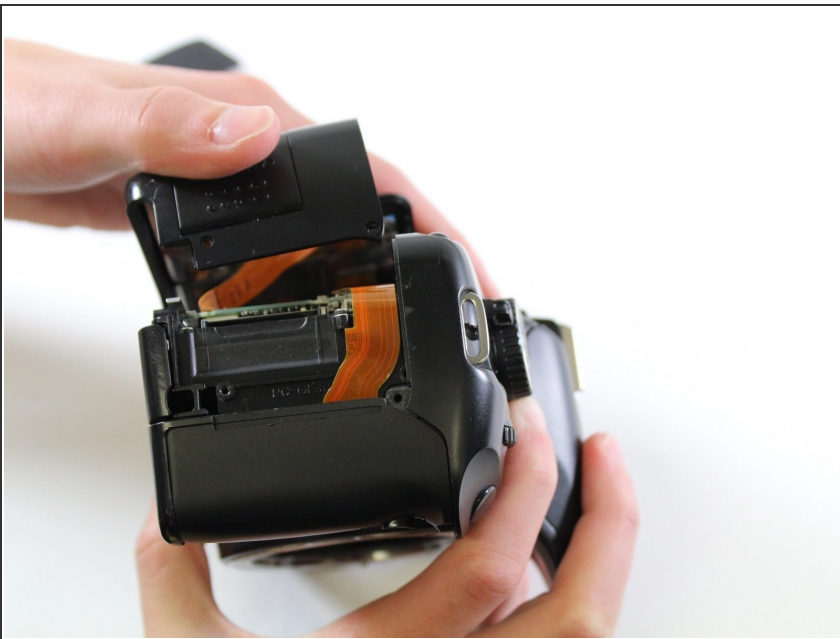

- Use hands to pry off the back panel.

To reassemble your device, follow these instructions in reverse order.