



CrystalView NB4-35788 Auxiliary Speakers Replacement

This guide will demonstrate how to replace the speakers of the CrystalView NB4-35788.

Written By: Alex Stokes



INTRODUCTION

Replace the speakers to improve the sound quality of your device.



TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Soldering Iron](#) (1)



PARTS:

- [Solder](#) (1)

Step 1 — Auxiliary Speakers



⚠ Power off the device before beginning disassembly.

● Using a Phillips #00 Screwdriver, take out the following screws:

- Two 6 mm screws
- Three 4 mm screws
- Four 3 mm screws

 
i These screws can be taken out in any order.

Step 2



- Using a Phillips #00 Screwdriver, remove the screws located under the top two standoffs.

Step 3

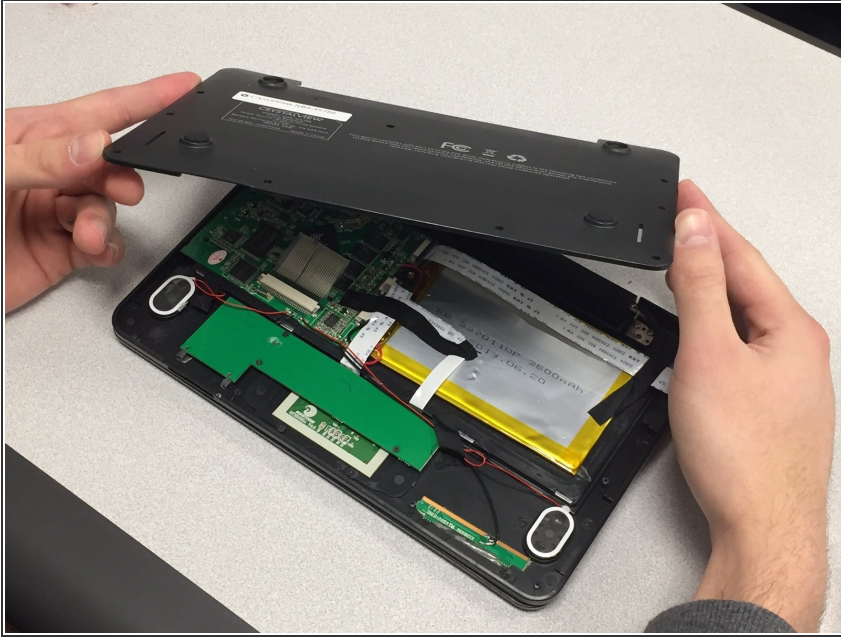

- Remove the cover off the back of the device.

Step 4



 
- Two speakers can be found on the device, one in the lower-right corner and one in the lower left-corner.

Step 5



- Gently pull up on the speaker to remove it. Repeat this for the other speaker.

Step 6

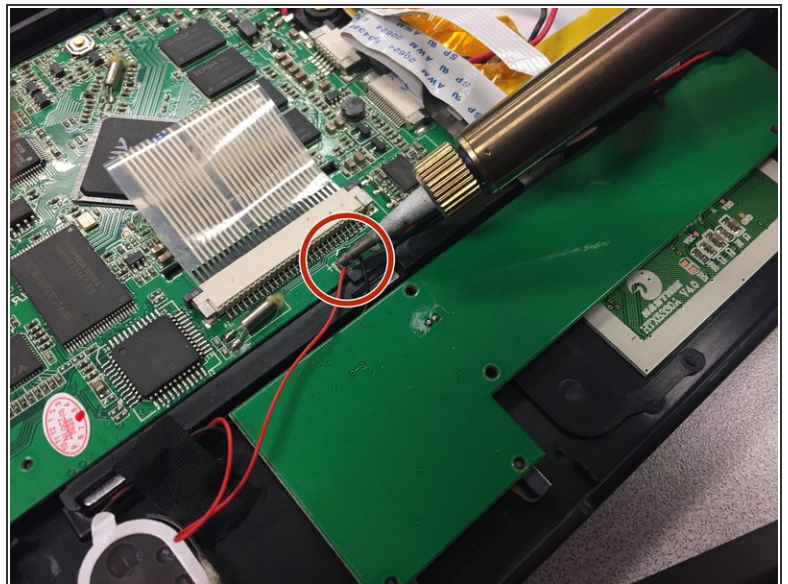

- De-solder the red and black wires to disconnect the old speaker.

⚠ Be careful while using a soldering iron as it is extremely hot.

- Follow the [How To Solder and Desolder Connections](#) guide for help.

To reassemble your device, follow these instructions in reverse order.