



# ASUS UX50V-RX05 Keyboard Replacement

Replace the broken keyboard on your Asus Laptop

Written By: James



---

## INTRODUCTION


This is how you remove the keyboard on an Asus UX50V-RX05 Laptop.




### TOOLS:

- [iFixit Opening Tools](#) (1)
-


## Step 1 — Keyboard

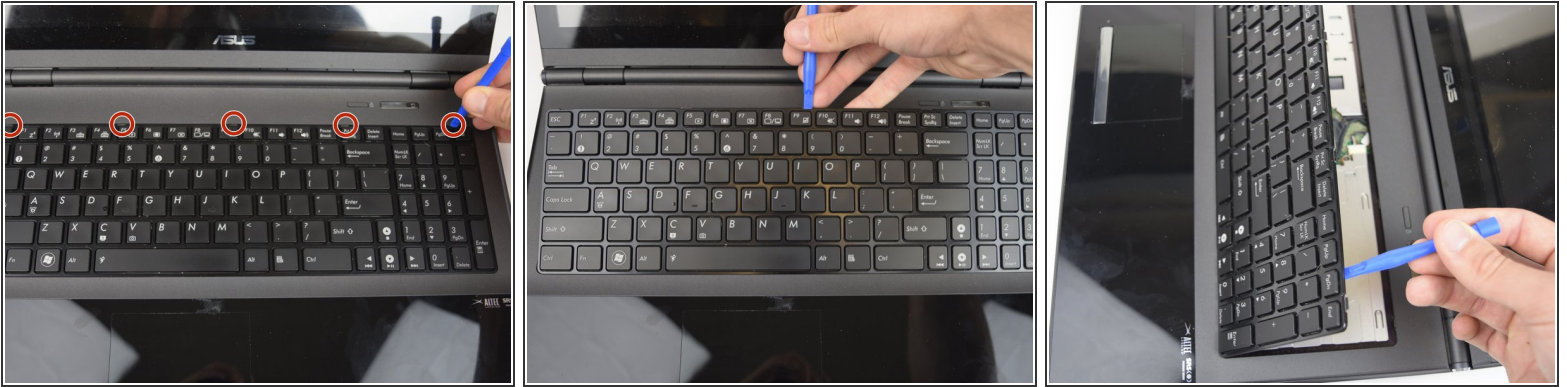

 Make sure the device is powered off and the battery is removed before beginning.


- Use the Plastic Opening tool to pry the five slots up at the top of the keyboard.

## Step 2

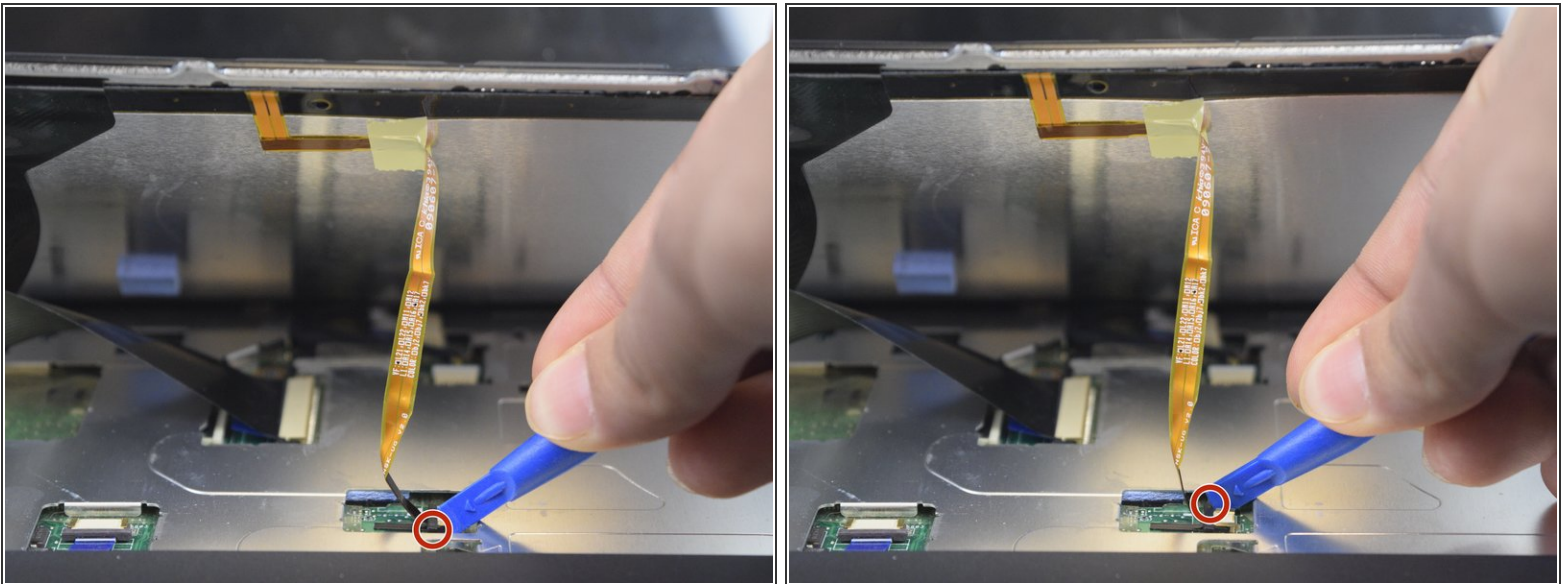

- Lift the keyboard enough to expose the two ribbon connectors (LCD flex cable and flex band).
- Use the Plastic Opening tool to push open the two black clips on each side of the connecting cords.
- Remove the cable after pushing out the two black clips.

## Step 3

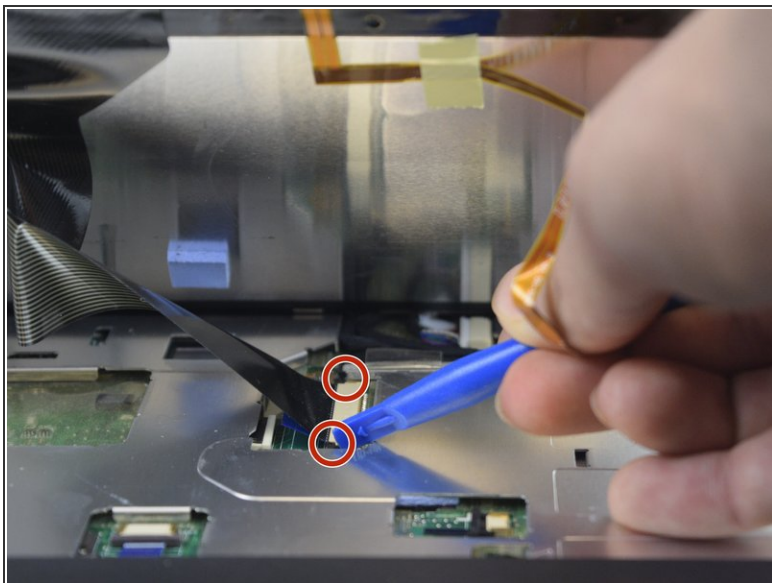

- Push out each end of the black clip with a plastic opening tool or nylon spudger to remove the ribbon cable.
- Remove the cable after pushing out both black clips.
- Remove the keyboard.

To reassemble your device, follow these instructions in reverse order.