



DeWalt DW936 Black Cap Replacement

This guide will show you how to replace the black air filter cap located on the top of the motor.

Written By: Scott Weinhardt



INTRODUCTION

This guide will show you how to replace the black air filter cap located on the top of the motor.



TOOLS:

- [T20 Torx Screwdriver](#) (1)
-

Step 1 — Black Air Filter



- Using a T-20 hex head screw, unscrew the two screws located at the top and bottom of the black air filter. The screws are directly above and below the yellow lettering.

Step 2



- Use your hands to pull the black air filter away from the body of the saw to detach.

To reassemble your device, follow these instructions in reverse order.