



# 1994-2004 Ford Mustang Oil and Oil Filter Replacement

A video tutorial on how to change the oil and filter on a 1994-2004 Ford Mustang V6 engine.

Written By: eCuration



## INTRODUCTION

The engine oil and oil filter should be replaced every 5,000 miles.

Follow this video tutorial by YouTuber [Pet Rock's Garage](#) to complete the replacement yourself.

## Safety

If this is your first time working on a vehicle read our [safety tips](#) before proceeding.



### TOOLS:

- [Hydraulic Floor Jack](#) (1)
- [Jack Stand](#) (1)
- [Oil Drain Pan](#) (1)
- [Oil Filter Wrench](#) (1)
- [Long Neck Funnel](#) (1)
- [3/8" Drive Ratchet](#) (1)
- [3/8-Inch Drive Extension Bar](#) (1)
- [15mm Socket](#) (1)
- [Paper Towels](#) (1)



### PARTS:

- [5W-30 Motor Oil](#) (5)
- [Oil Filter](#) (1)

To reassemble your device, follow these instructions in reverse order.