


Insignia NS-HTMC01-B Fan Replacement

This guide will help you replace a broken or...

Written By: Jack Casey

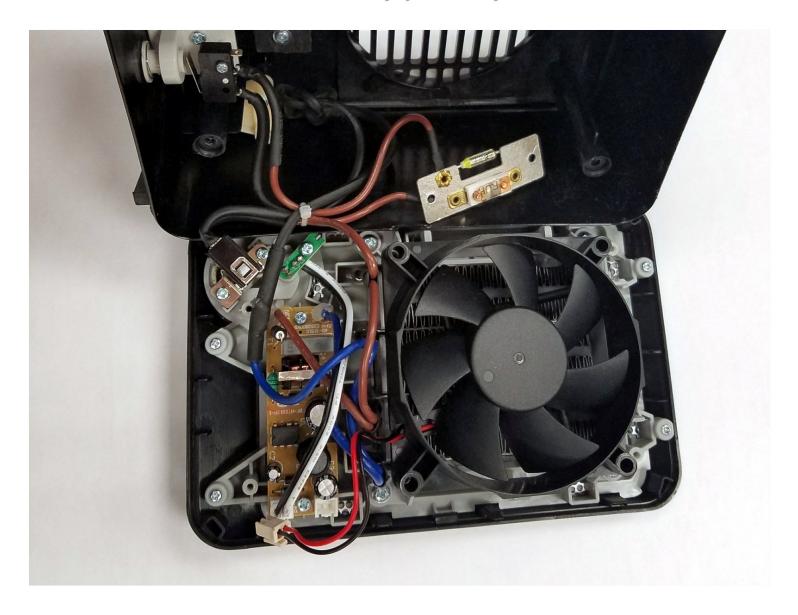

INTRODUCTION

This guide will help you replace a broken or damaged internal fan within your Insignia NS-HTMC01-B ceramic heater. A broken or damaged fan can cause your heater to put out lower amounts of heat, or no heat at all.




Phillips #1 Screwdriver (1) Tweezers (1)

Step 1 — Fan



- Flip your device over so the back panel faces you. You should see a hole containing a screw in each corner of the device.
- Insert a 4-inch Phillips #1 screwdriver into each hole until connected with the 20 millimeter, sharp-point screw.

Step 2

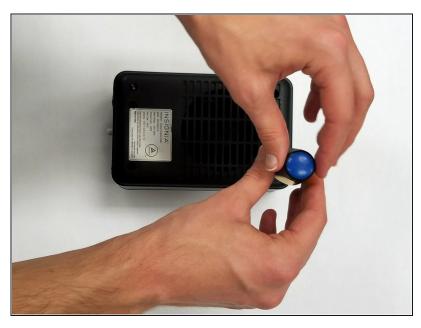

- Rotate the screwdriver counter-clockwise until screws are removed.
- ⚠ Make sure to firmly connect your screwdriver with the head of the screw. A loose connection can strip the screw head, making the screws impossible to remove.
- Remove the back panel.


Step 3



 Unscrew the four 9 millimeter, sharp-point screws holding the fan in place.

Step 4



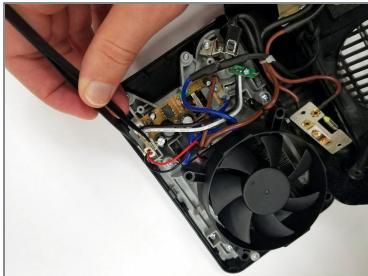

- Use <u>tweezers</u> to disconnect the red and black wires.
- Remove the fan.

To reassemble your device, follow these instructions in reverse order.