

Insignia NS-HTMC01-B Fan Replacement

Use this guide to replace the fan inside of a Insignia NS-HTMC01-B ceramic heater.

Written By: Jack Casey



INTRODUCTION

This guide will help you replace a broken or damaged internal fan within your Insignia NS-HTMC01-B ceramic heater. A broken or damaged fan can cause your heater to put out lower amounts of heat, or no heat at all.



TOOLS:


- Phillips #1 Screwdriver (1)
- Tweezers (1)

Step 1 — Fan




- Flip your device over so the back panel faces you. You should see a hole containing a screw in each corner of the device.
- Insert a 4-inch Phillips #1
 screwdriver into each hole until
 connected with the 20 millimeter,
 sharp-point screw.

Step 2

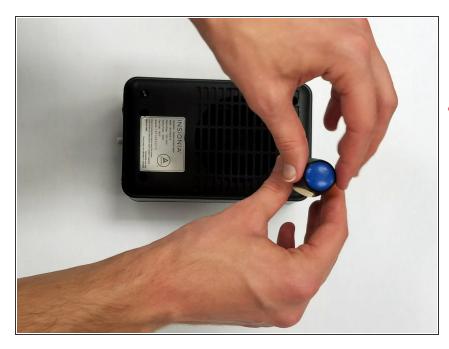

- Rotate the screwdriver counterclockwise until screws are removed.
- Make sure to firmly connect your screwdriver with the head of the screw. A loose connection can strip the screw head, making the screws impossible to remove.
 - Remove the back panel.

Step 3

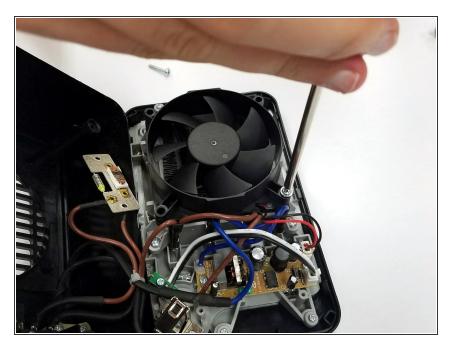

 Unscrew the four 9 millimeter, sharp-point screws holding the fan in place.

Step 4





- Use tweezers to disconnect the red and black wires.
- Remove the fan.

To reassemble your device, follow these instructions in reverse order.