



# Canon PowerShot SX530 HS Battery Replacement

The guide will help you replace the battery in your device.

Written By: Kovar cole



# INTRODUCTION

This guide will show how to replace the battery of the Canon PowerShot SX530 HS.

## Step 1 — Battery



- Flip the camera upside down to find the battery compartment (marked CARD/ BATT. OPEN).
- Press into the grooves of the battery door and slide the panel in the direction of the arrow.

## Step 2



- Gently press down on the orange release button found inside.
- After pressing the release button, pull the battery out of the camera.

To reassemble your device, follow these instructions in reverse order.