


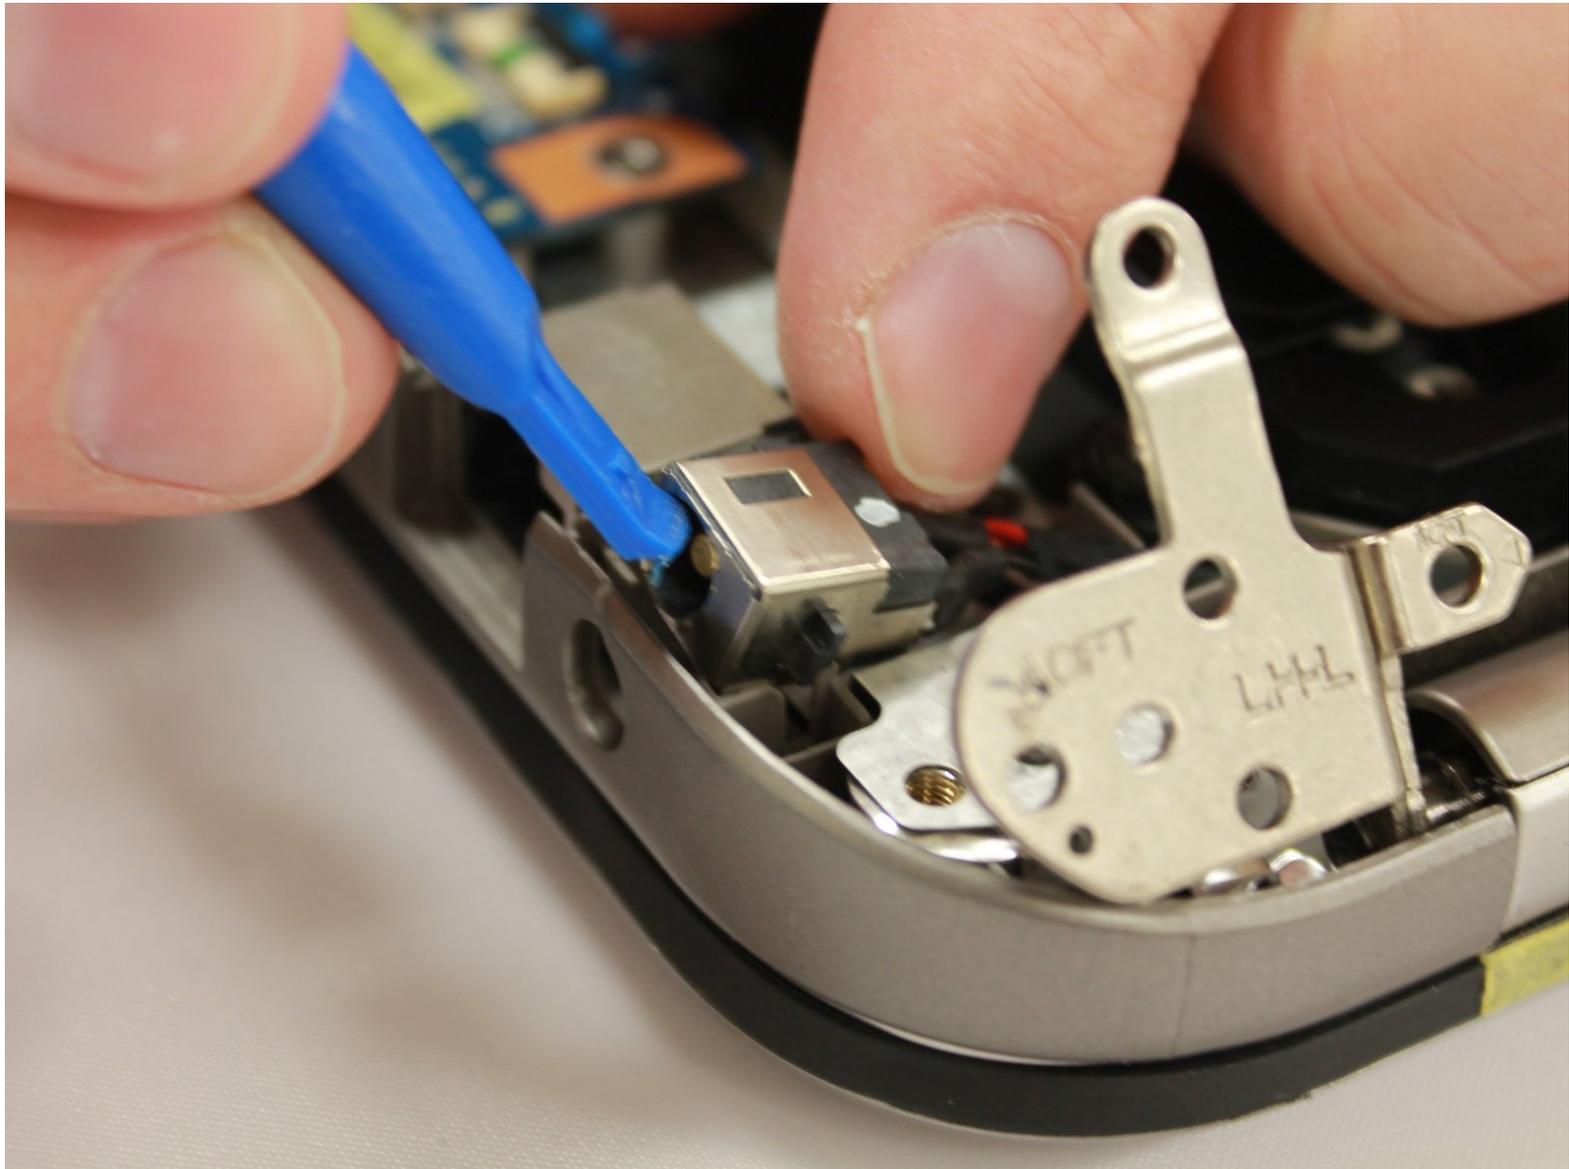

Toshiba Satellite P55t-A5116 Power Jack Replacement

Use this guide to remove the Toshiba Satellite P55t-A5116 Power Jack.

Written By: Rachael Ferry



INTRODUCTION

Use this guide to remove the Toshiba Satellite P55t-A5116 Power Jack.



TOOLS:


- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)
- [Phillips #00 Screwdriver](#) (1)



PARTS:


- [Power Jack](#) (1)
Computer Part

Step 1 — Back Casing

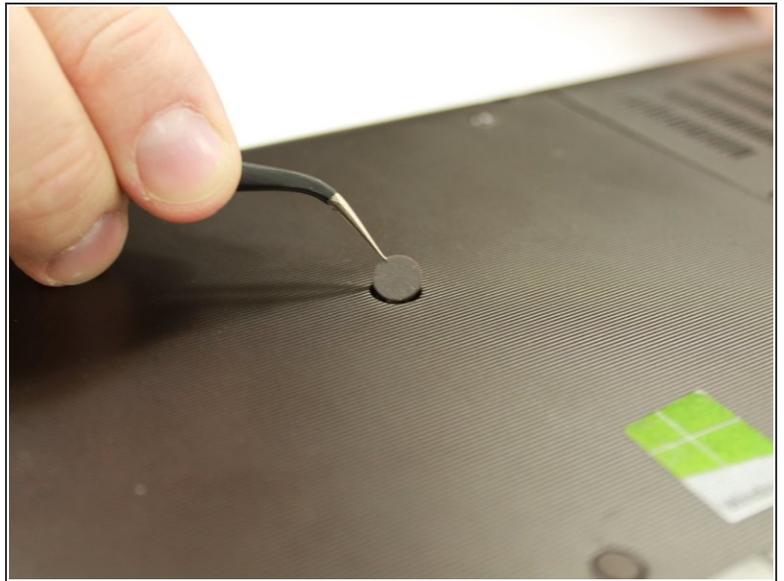

- Close laptop and turn it upside down
- Remove the 14 circular rubber covers with tweezers along with one smaller more cylindrical rubber cover.

Step 2

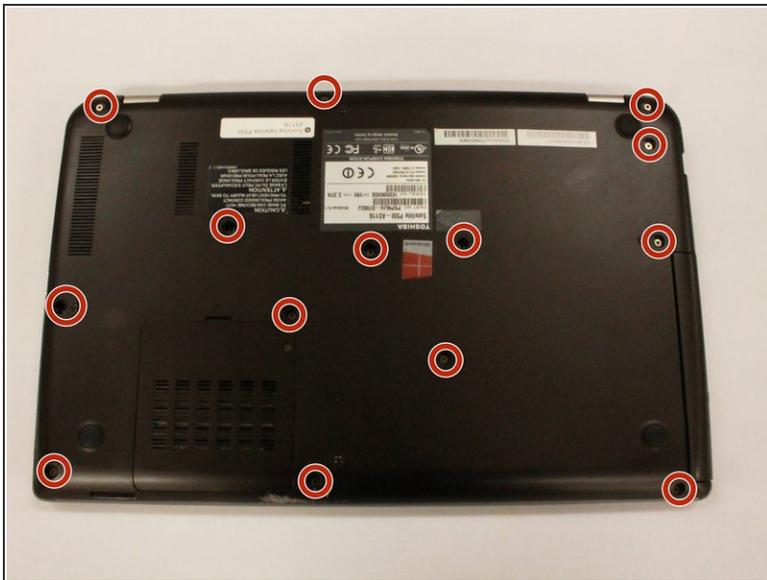


- Using the #PH0 screw head, remove 14 (5.7 mm) screws from the back casing.

Step 3




- Gently pry off the bottom case with the plastic opening tools.
- Find the seam between the back case and the rest of the laptop casing.

Step 4 — Battery

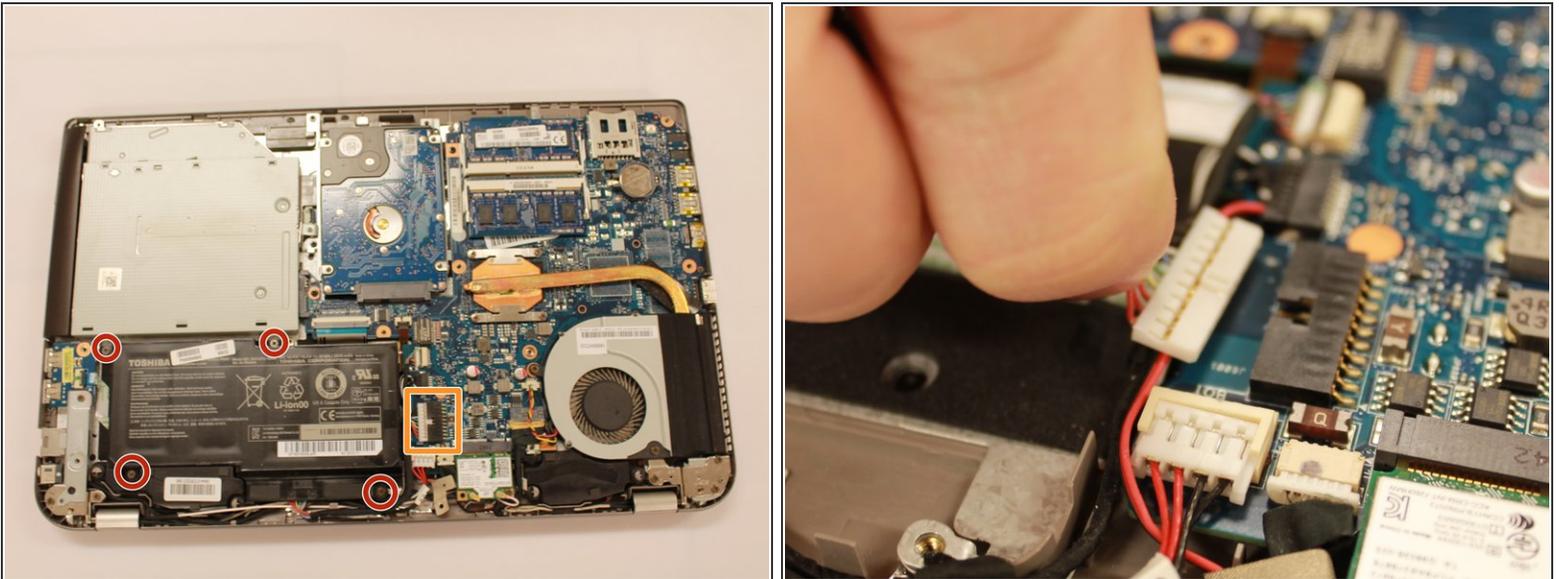


- Use the #PH0 screw head, remove 4 (5.7mm) screws.
- Unplug the battery's 10 pin connector and gently lift the battery out of the laptop.

Step 5

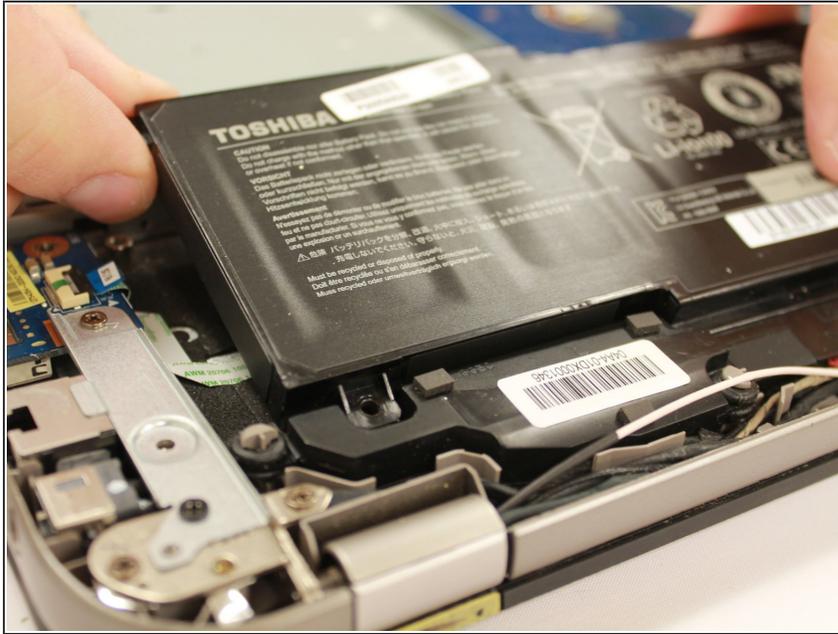

- Gently remove battery from the laptop.

Step 6 — Power Jack

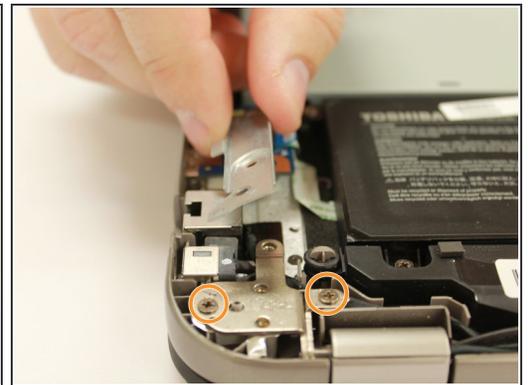


- Using the #PH0 screw head, remove 2 (5.7 mm) screws.
- Remove metal plate.
- Using the #PH0 screw head remove 1 (5.7mm) screw and 1 (4.15mm) screw.

Step 7



- Use the plastic opening tool to push the left hinge up.

Step 8

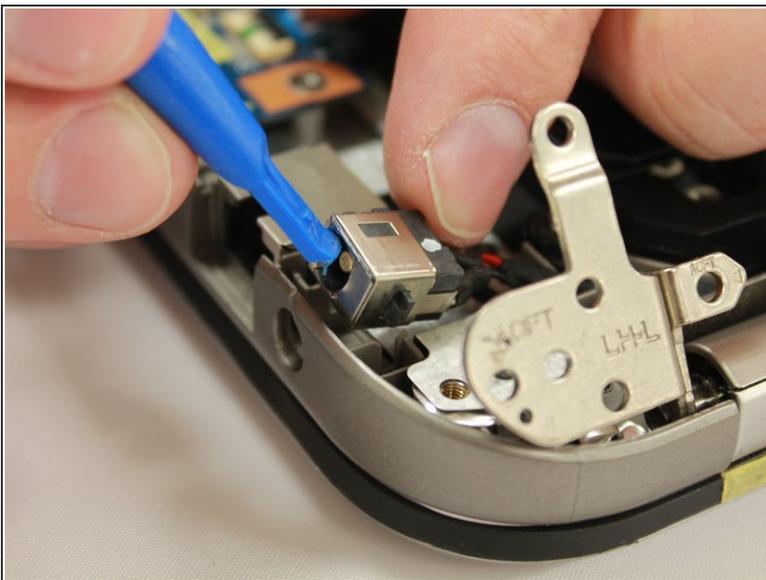

- Gently pull up the power jack. Follow the cord until you reach the connector.
- Unplug the 4 pin connector and remove from laptop

To reassemble your device, follow these instructions in reverse order.