




# ProScan PLT7050 Speaker Replacement

Is the speaker producing static or no sound at all? It's time to replace the speaker.

Written By: Jazmine Jackson

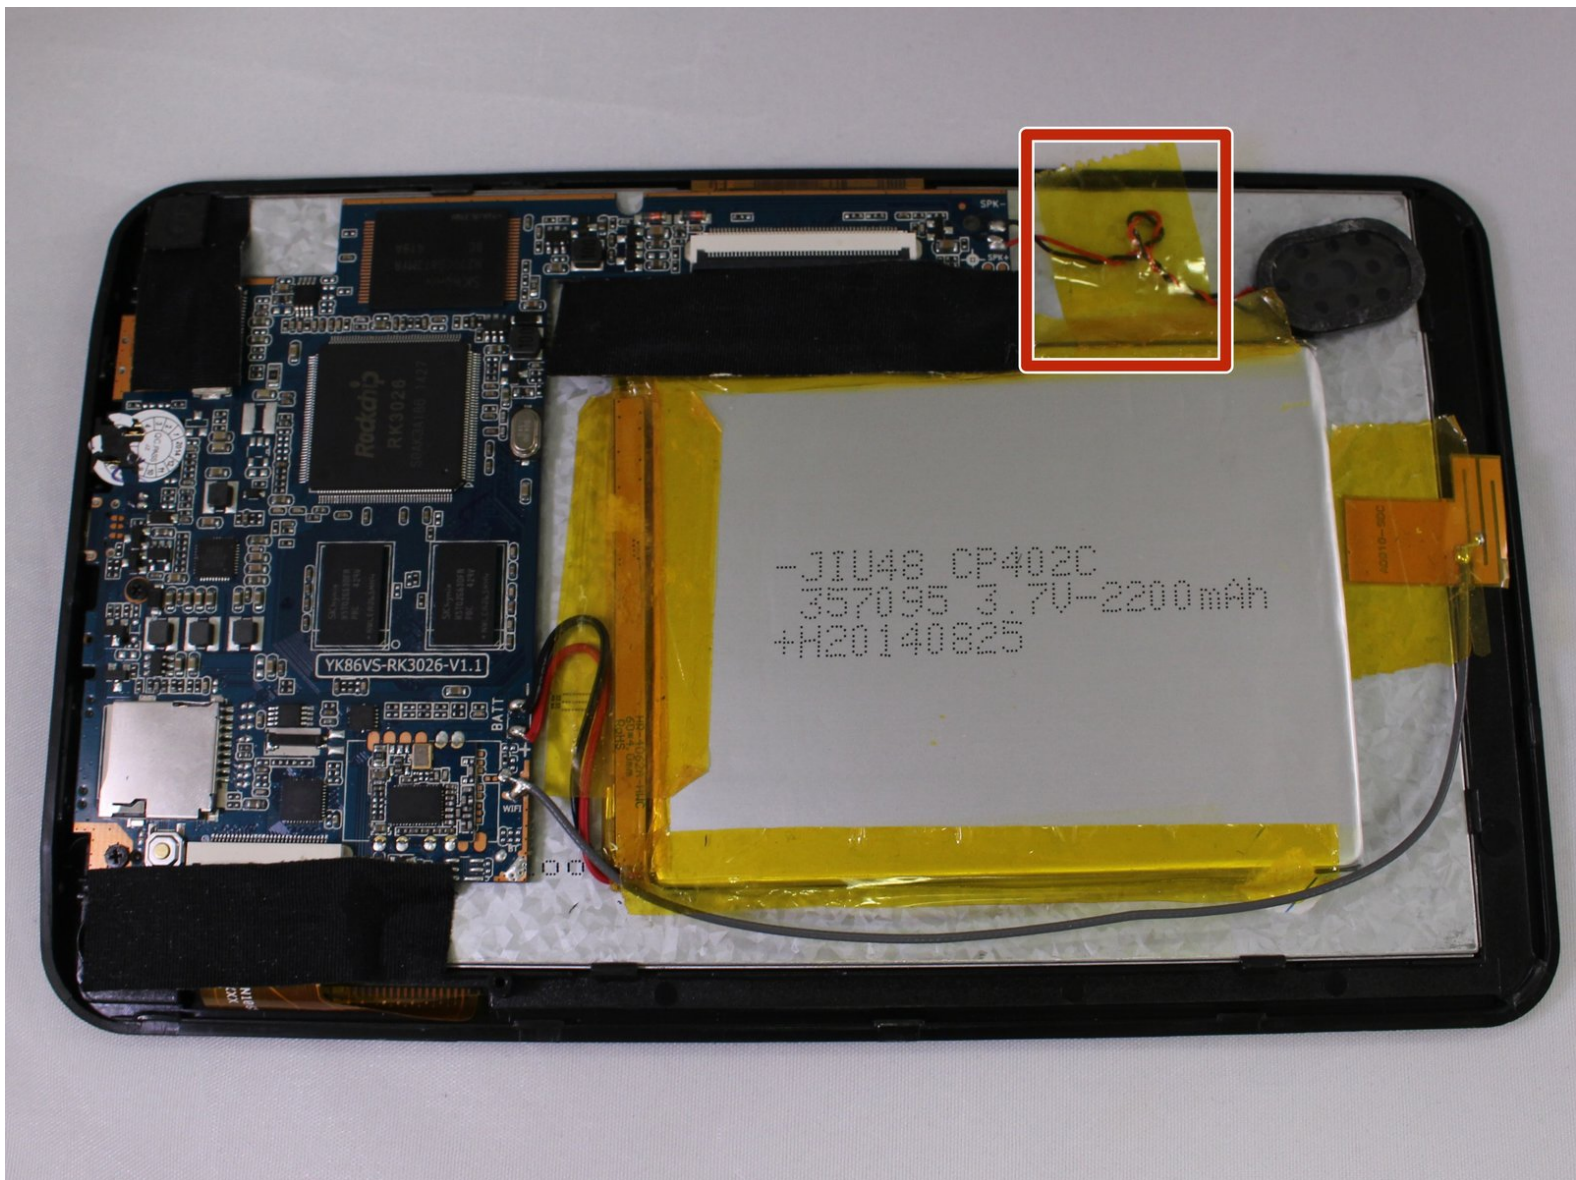

---

## INTRODUCTION

This is the speaker replacement guide. If the Proscan PLT 7050 tablet is producing static or no sound at all, follow these steps to replace the speaker.

---

### TOOLS:

- [iFixit Opening Tools](#) (1)
  - [Soldering Iron](#) (1)
  - [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Open Device



- Make sure device is unplugged and turned off while working on the device.
- Remove 2 Phillips head, 4.3 mm screws from the bottom side of the tablet with a PH00 screwdriver.

## Step 2



- Use the plastic opening tools to pry the back of the tablet open.
  - You may need to slide the tool along the sides of the device to get it to open. You might hear some popping noises, it is okay.
- i** May be helpful if you start by the microSD slot.




## Step 3 — Speaker



- Remove the yellow tape.

## Step 4

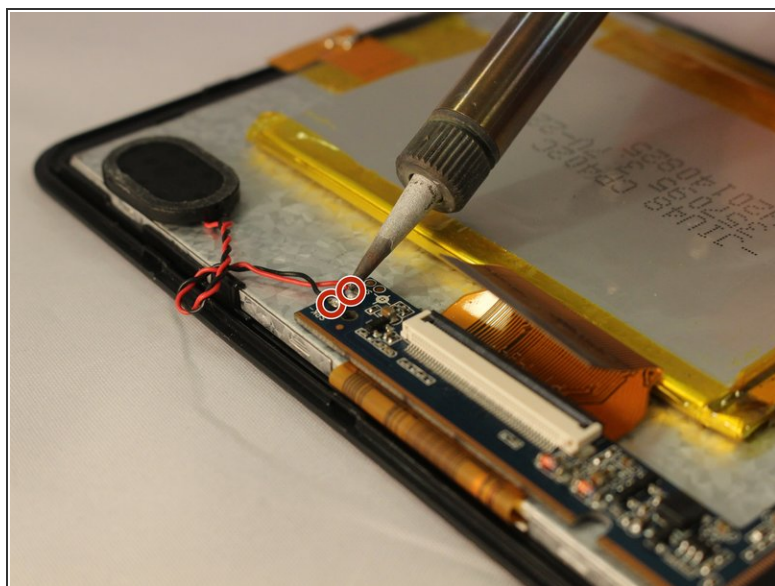

- Use the soldering tool to remove the two speaker wires from the motherboard.

- ⓘ Take note of where the wires are located.

- ⚠ Soldering tool will get hot.

To reassemble your device, follow these instructions in reverse order.