



# Dyson Cinetic Big Ball Animal Upright Filter Replacement

This guide demonstrates how to replace the filter of the Dyson.

Written By: Karla Sunjara



---

## INTRODUCTION

The Dyson filter is located in the ball-shaped base of the vacuum.



### TOOLS:

- [JIS Driver Set](#) (1)
-

## Step 1 — Filter



- Start on the left side of the Dyson Ball.

## Step 2



- Remove the center 18mm screw from the Dyson Ball, then remove the covering.



### Step 3




- Next, remove the upper right 18mm screw along the perimeter of the circle.

### Step 4



- Continuing clockwise along the path, remove the next 18mm screw.

## Step 5

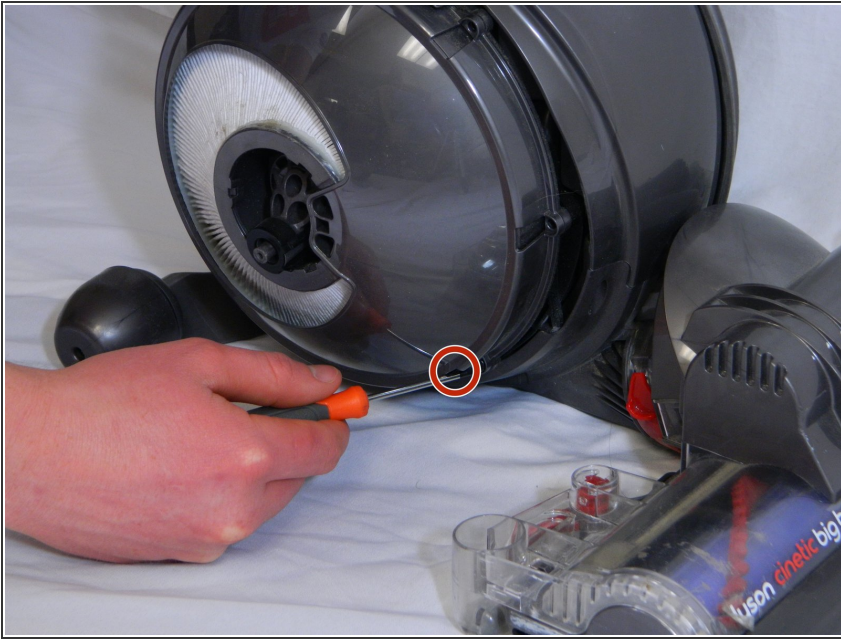

- Remove the next 18mm screw at the lower edge of the circle.

## Step 6



- Then remove the final 18mm screw in the center. Once these have all been unscrewed, remove the filter with the cover. The filter and the cover should be attached to each other.

## Step 7



- Gently unclip the cover from the filter.



## Step 8



- This is how it should look once the covering has been removed.

To reassemble your device, follow these instructions in reverse order. The Dyson has two filters, so if the problem has not been resolved, you may have to repeat this process on the other side.