



Dyson Cinetic Big Ball Animal Upright Hose Replacement

This guide demonstrates how to replace the hose of the Dyson.

Written By: Karla Sunjara



INTRODUCTION



The hose is located on the backside of the Dyson.



TOOLS:

- [JIS Driver Set](#) (1)
-

Step 1 — Hose

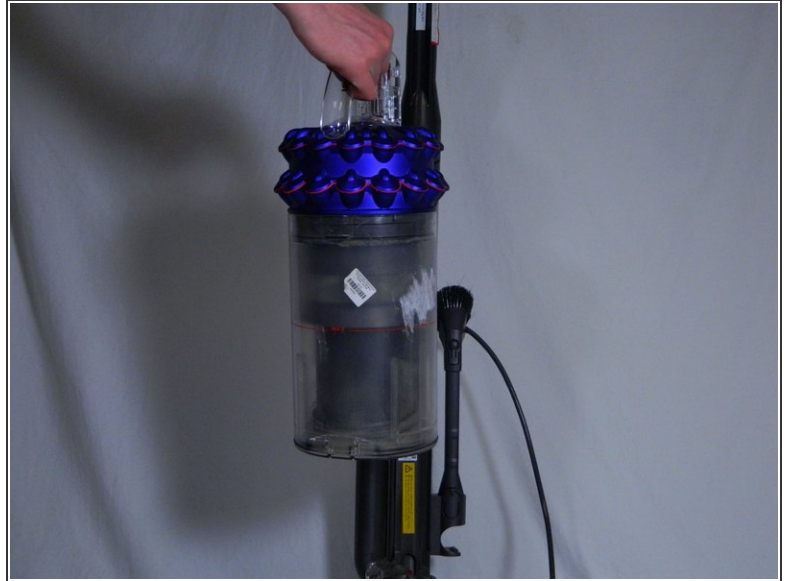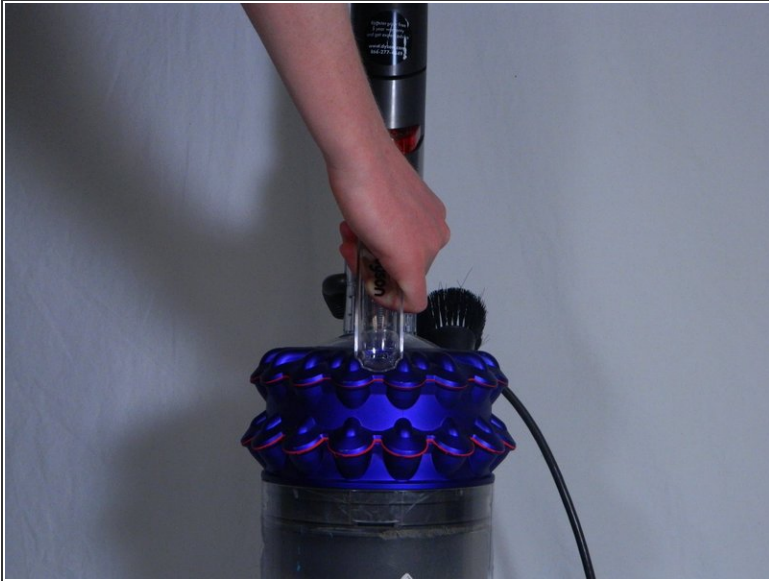

- Lift off the dust bin from the Dyson.

Step 2




- Locate the removable hose on the back of the Dyson.
- Pull up on the hose in order to remove the top half of the hose.

Step 3



- Locate the red tab on the frontside of Dyson.

Step 4

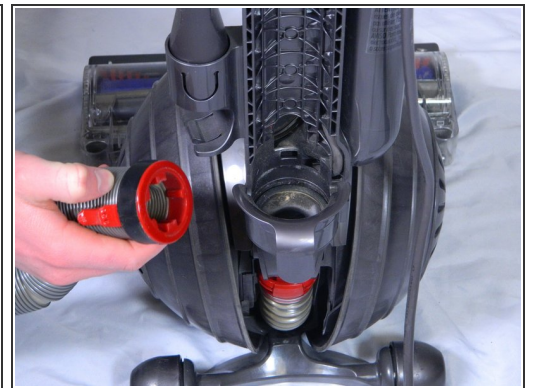

- Lift up the red tab with the screwdriver while simultaneously pulling on the back hose.

To reassemble your device, follow these instructions in reverse order.