



Dyson Cinetic Big Ball Animal Upright Bin Assembly Replacement

This guide will demonstrate how to replace the bin assembly.

Written By: Karla Sunjara



INTRODUCTION

The bin assembly plastic is the transparent compartment that holds all the dust and dirt that is collected while vacuuming. The bin assembly is within the purple bin.

Step 1 — Bin Assembly



- Push down the red button to remove the bin from the Dyson.

Step 2



- Press the red button again to open the bottom of the bin.

Step 3



- Press the grey button (where index finger is located) and slide the bin assembly out.

To reassemble your device, follow these instructions in reverse order.