


# Casio LK-170 Display Replacement

This guide will walk you through the steps to replace the display of the Casio LK-170.

Written By: Samantha Baker

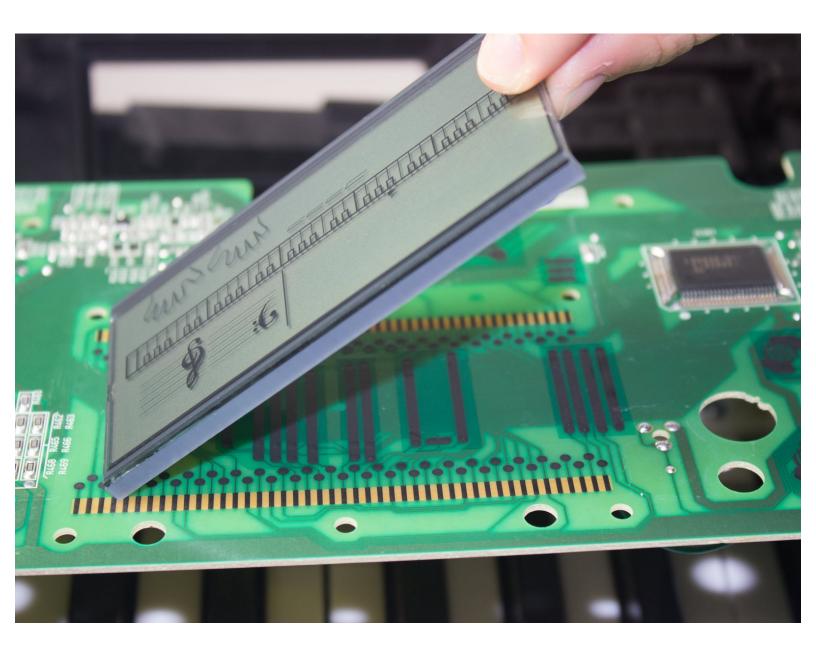

### **INTRODUCTION**


To see the notes you are playing, replace the screen by removing screws and opening up the keyboard to find a green panel with the display.



## **TOOLS:**

- JIS Driver Set (1)
- Phillips #1 Screwdriver (1)

#### Step 1 — Display

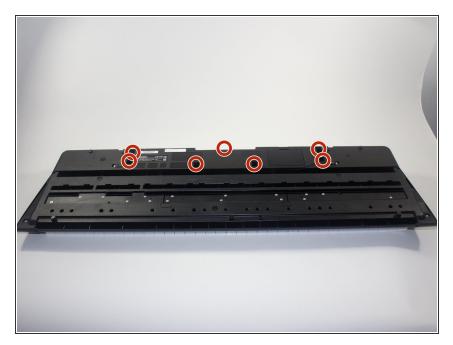


 Using JIS-1 screwdriver, remove the seven 11mm screws located on the back of the keyboard.


#### Step 2




- Once all the screws are out, flip the keyboard over and gently pull the middle panel out.
- Flip this panel up so that the component board can be seen.

#### Step 3

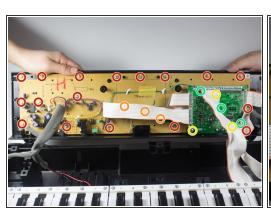

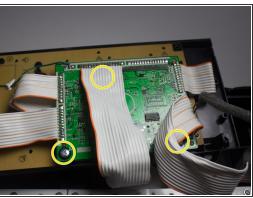

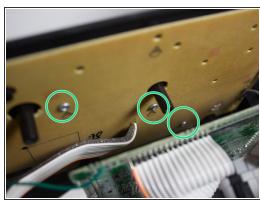

- We will be removing a total of 26 screws on the component board...
- First, you must use the PH-1 bit to remove the 17 8mm screws, circled in red.
- Second, using the same PH-1 bit, you will remove the three 8mm screws hidden under the white wire. These screws are circled in orange.
- Third, using the JIS-1 bit, remove the three 7mm screws on the circuit board.
- (i) After removing the circuit board, three more screws will be revealed.
- Using the PH-1 bit, remove the last three 8mm screws, circled in green.

#### Step 4




- Once all the screws have been removed, lift the component board and place it face down on the keys.
- The component board is connected to the keyboard, so do not try to remove it.

#### Step 5



 Flip over the component board to reveal the display that is currently connected to a green panel.

## Step 6

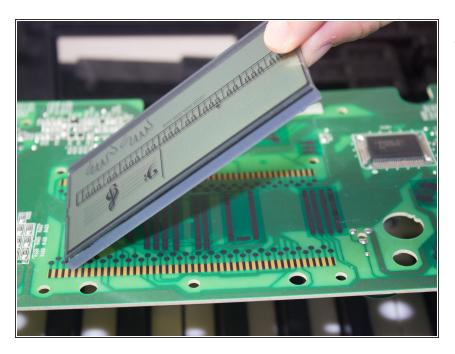

 Remove the display by carefully picking it up with your fingers from the green panel.

Guide ID: 78403 - Draft: 2017-03-30

To reassemble your device, follow these instructions in reverse order.