



Sony DSC-RX100MA SD Motherboard Replacement

This guide will show you how to replace the motherboard inside the camera.

Written By: Isaiah De Leon





TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Cover



- Remove battery by sliding the tab to open the cover

Step 2



- Using the screwdriver, remove all screws (black 2.5mm) from outermost layer of the assembly.


i All screws in the camera can be removed with the PH 0 driver head.

Step 3



- Also using the screwdriver, remove screws (black 1mm) underneath articulated LCD screen.
- Remove the marked 2.5 mm screws with the screwdriver

Step 4

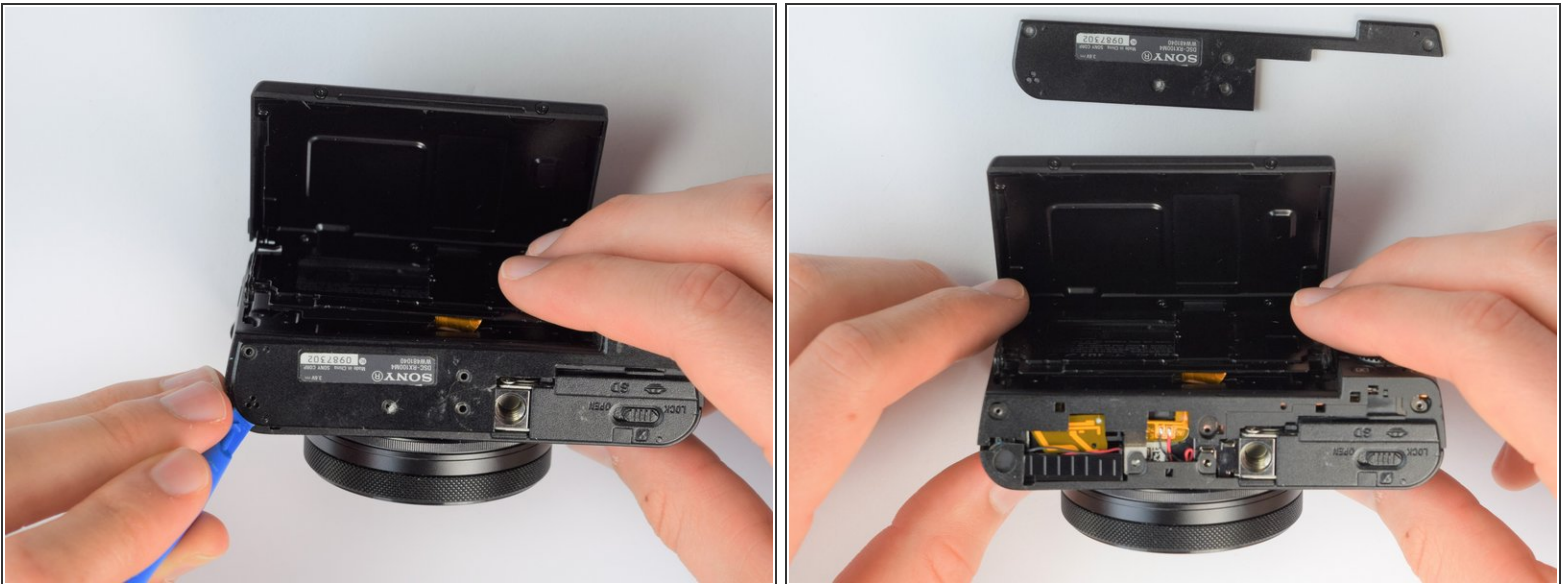

- Using the plastic opening tools, carefully pry off the bottom plate.


⚠ Do not pull too hard as you may break the plastic casing.

Step 5




- Using the same plastic opening tools, separate the screen and back assembly from the front portion of the camera
- Once the back assembly is slightly detached, pull the media covers for the HDMI and Multimedia ports

Step 6

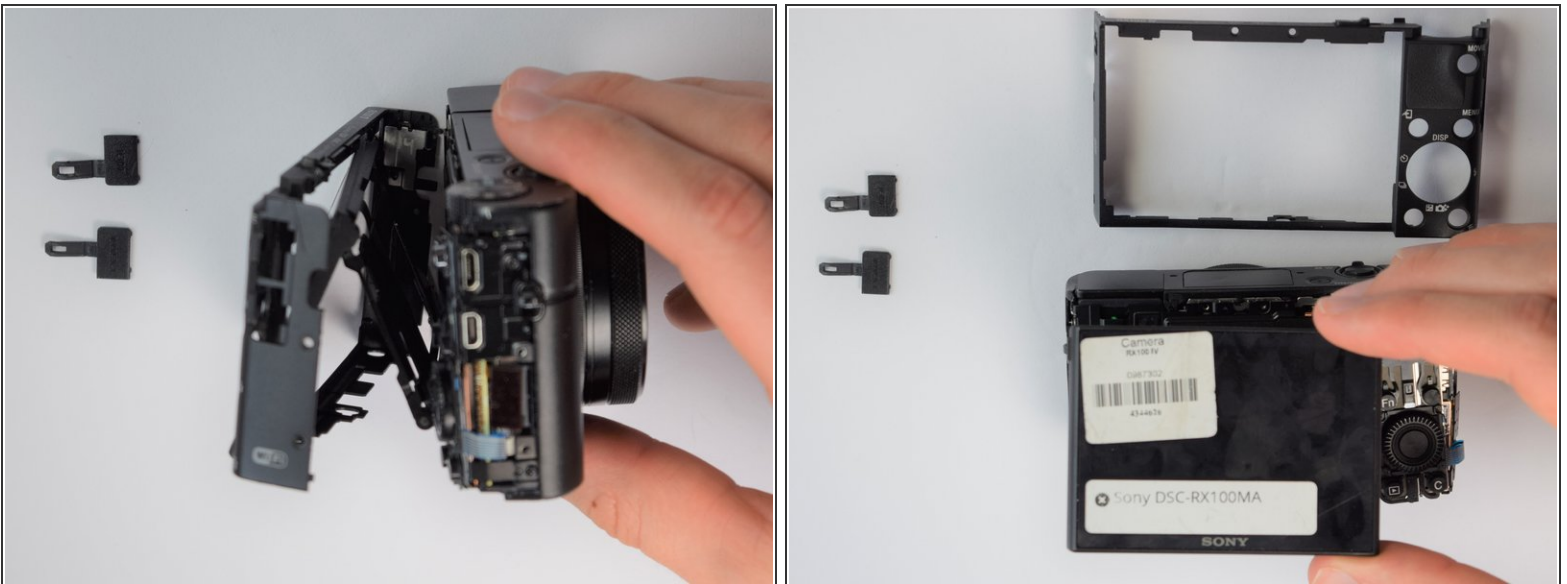


- Remove the back cover

Step 7 — Screen

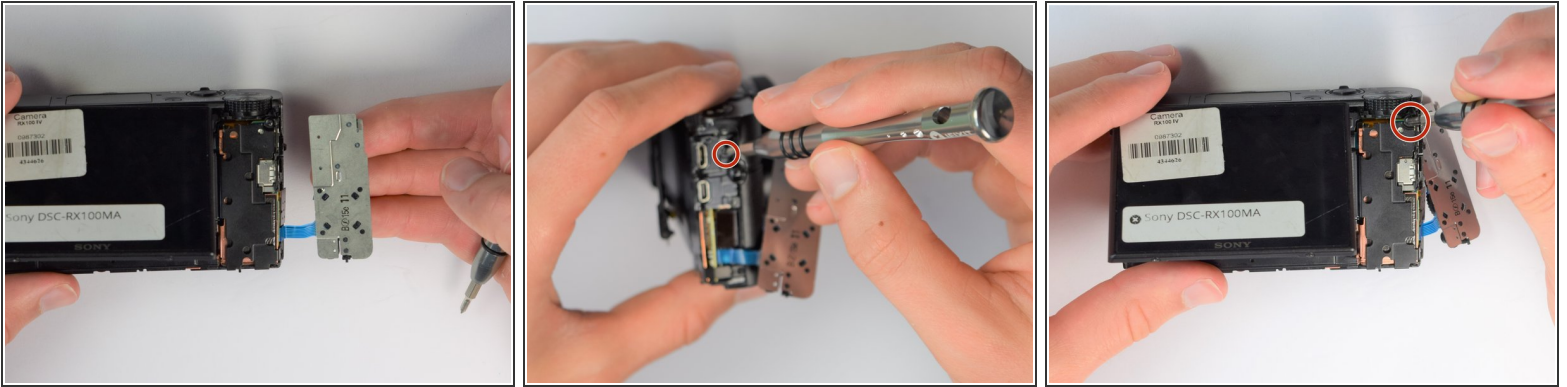

- Move side panel to get access to screws
- Remove two screws (black 2.5mm) with PH #0 screwdriver



Step 8

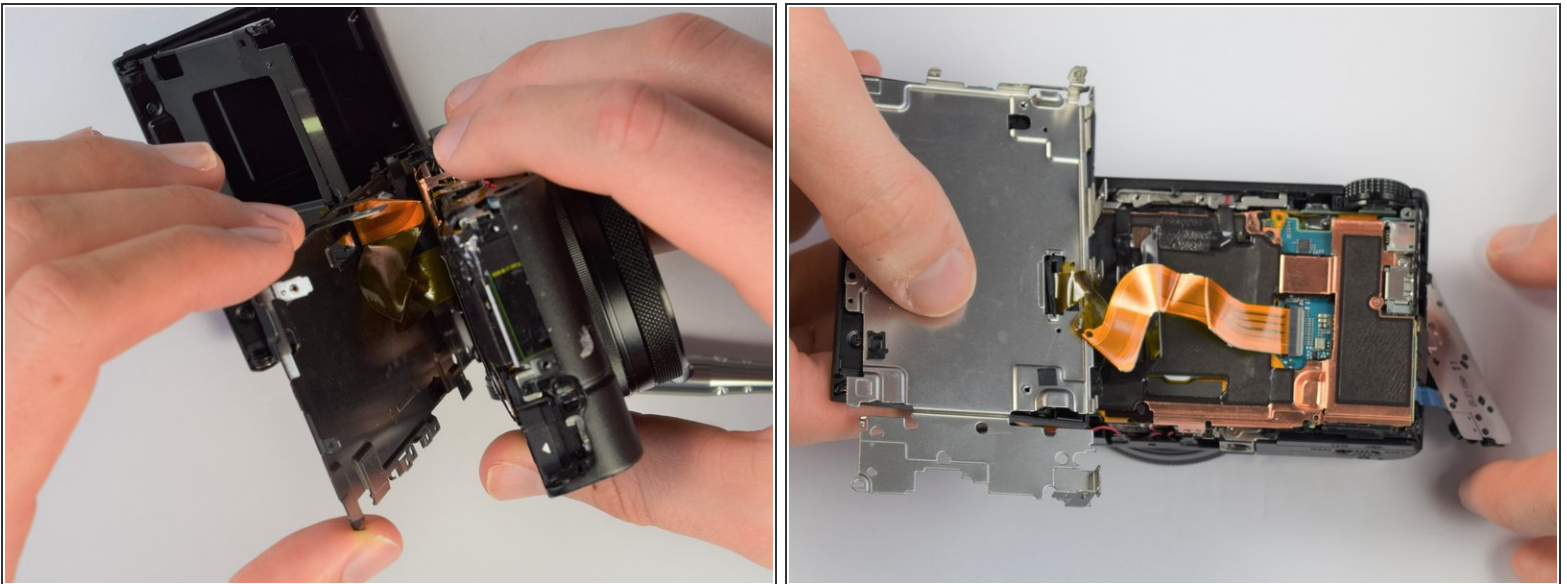

- Remove back panel assembly while still keeping ribbon cable attached



⚠ Be very gentle and care not to tear the gold ribbon cable. This will be a common theme throughout these replacement guides.

Step 9

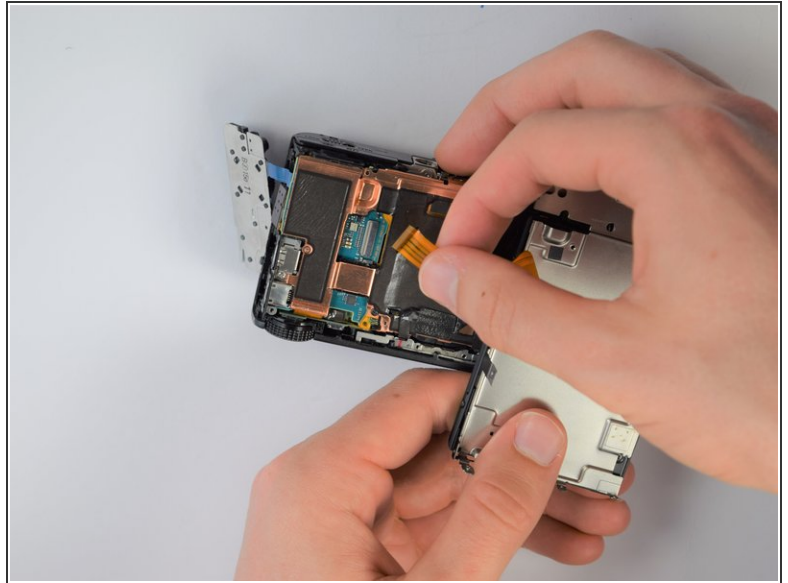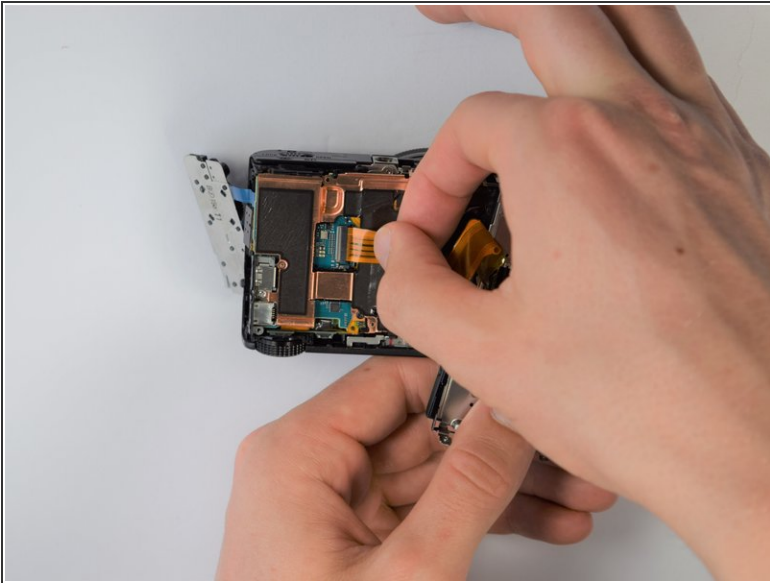


- Carefully unplug ribbon connector to fully detach LCD screen assembly from camera

Step 10 — SD Card Holder

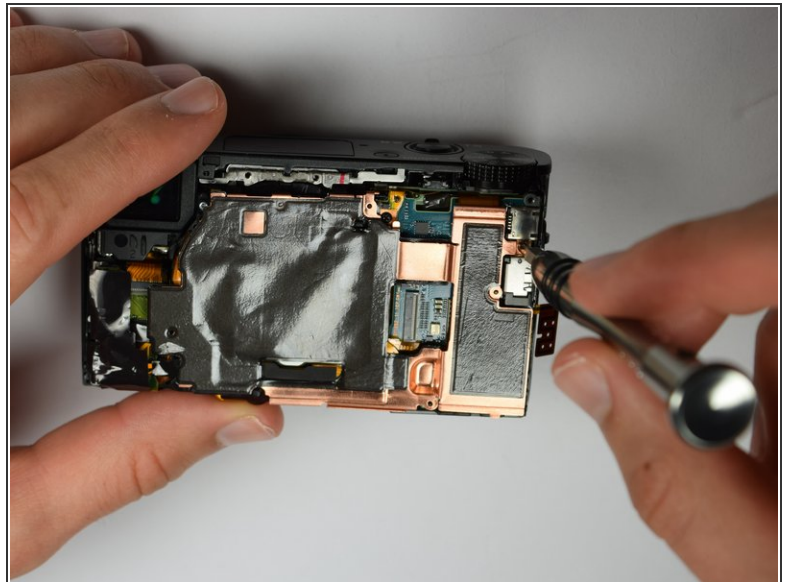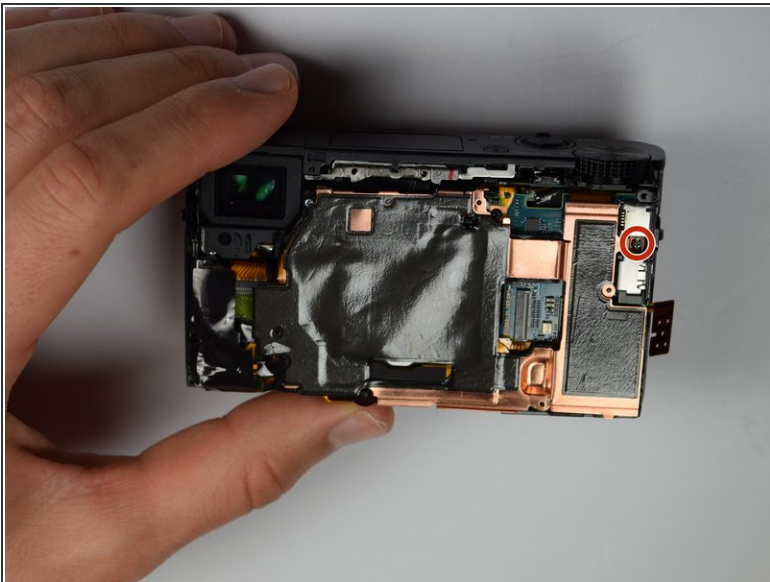


- Remove remaining screw which holds the copper casing in the camera

Step 11

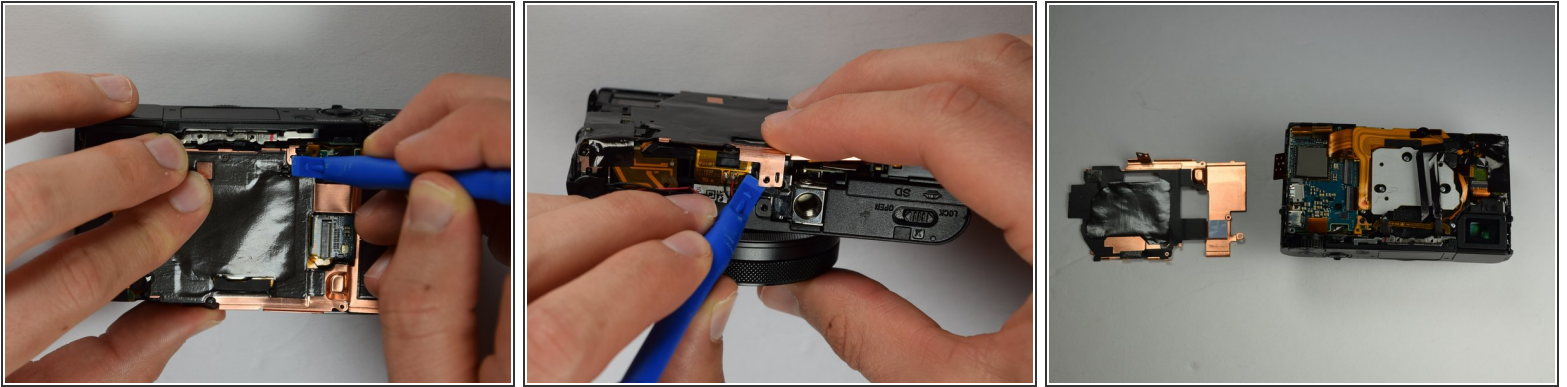




- Using the plastic opening tools, carefully pry off the copper casing at the two pictured points.
- Remove casing

Step 12

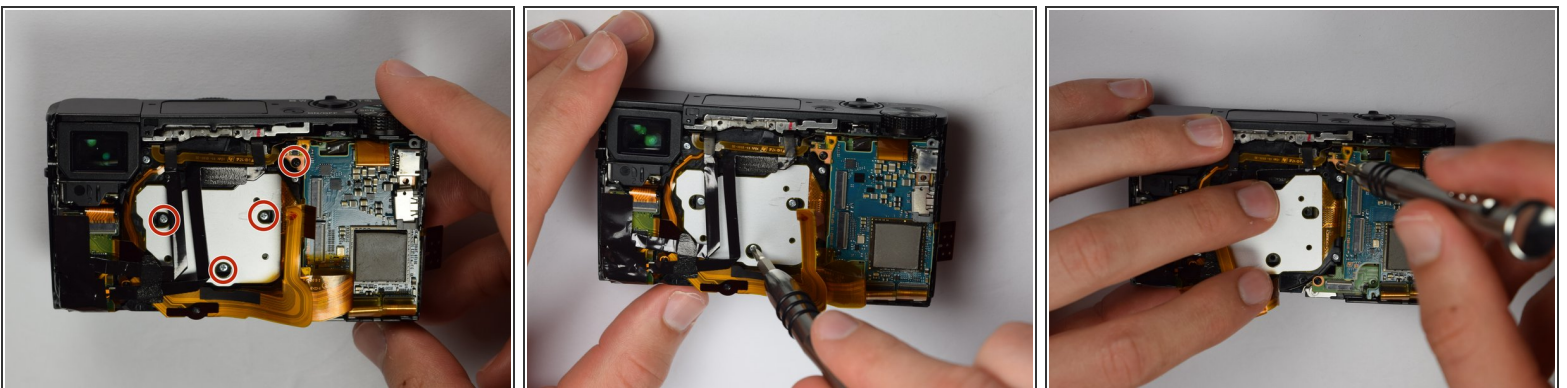


- Using Philips Screwdriver, remove the four screws as marked on the picture

Step 13

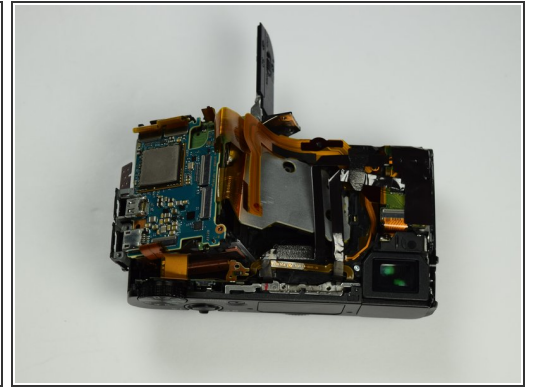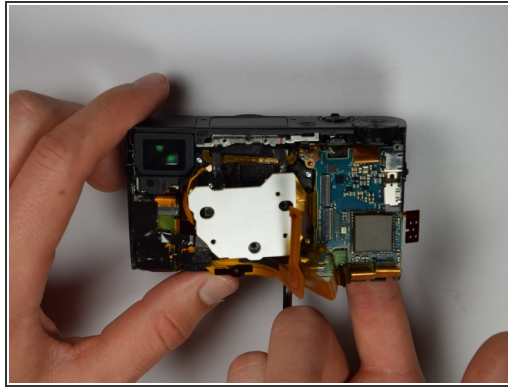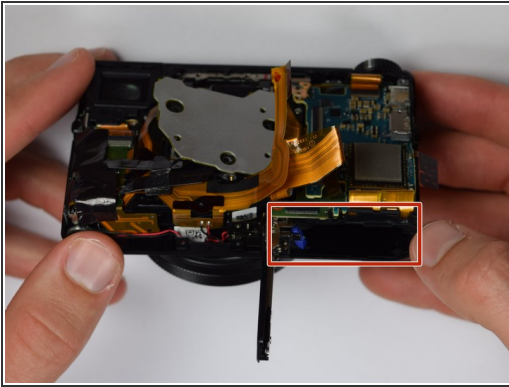


- Place your finger into the battery port and push up on the SD card holder to push it out of its socket.
- ⓘ Give it a little wiggle and you should feel the SD card holder come out.

Step 14

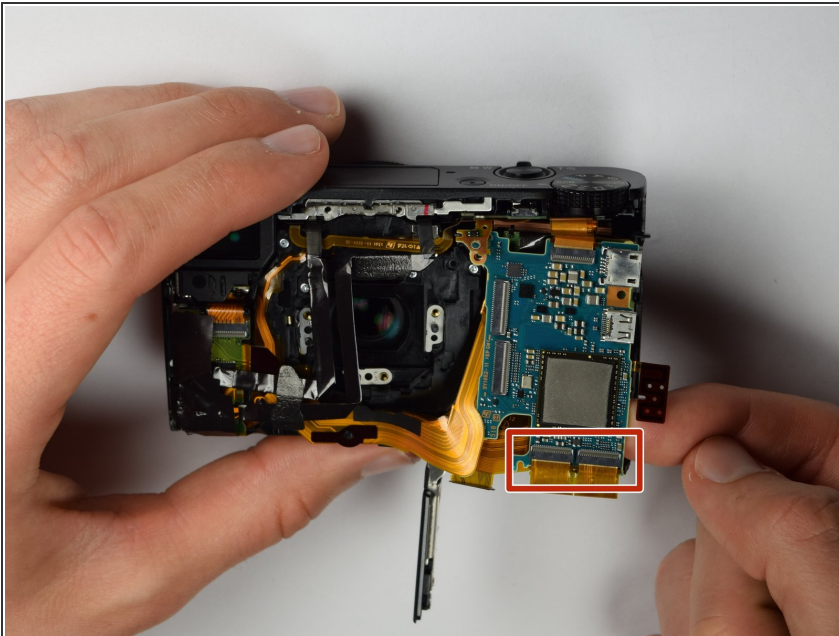


- Carefully remove the gold ribbons from the ports of the motherboard by lifting the gray tabs and pulling away the ribbon
 - You may want to use tweezers to remove the gold ribbons as a more delicate and safe approach, but this is not required
- ⚠ Do not pull away motherboard too hard as the ribbons are very fragile**

Step 15

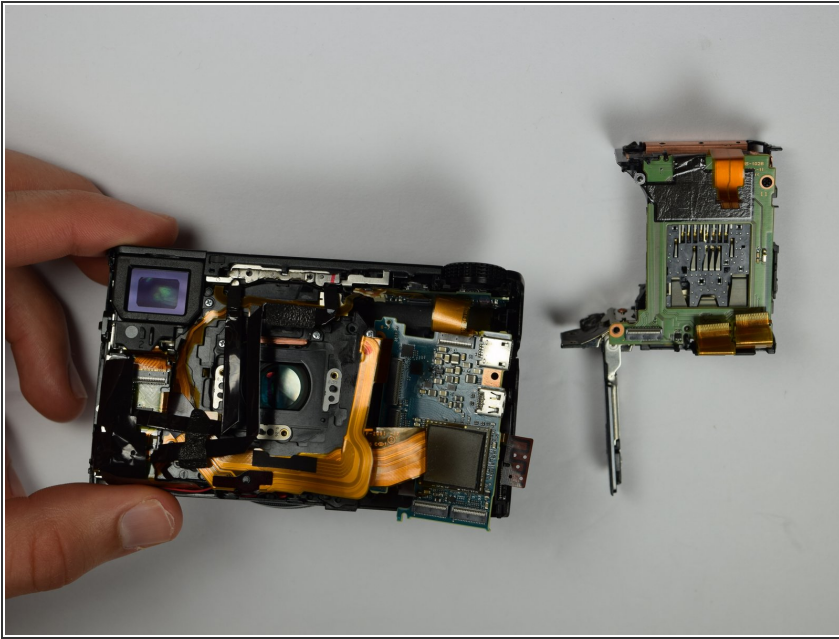


- Remove the SD card holder. It should easily come out because all of the prerequisite screws were already removed.

Step 16 — SD Motherboard

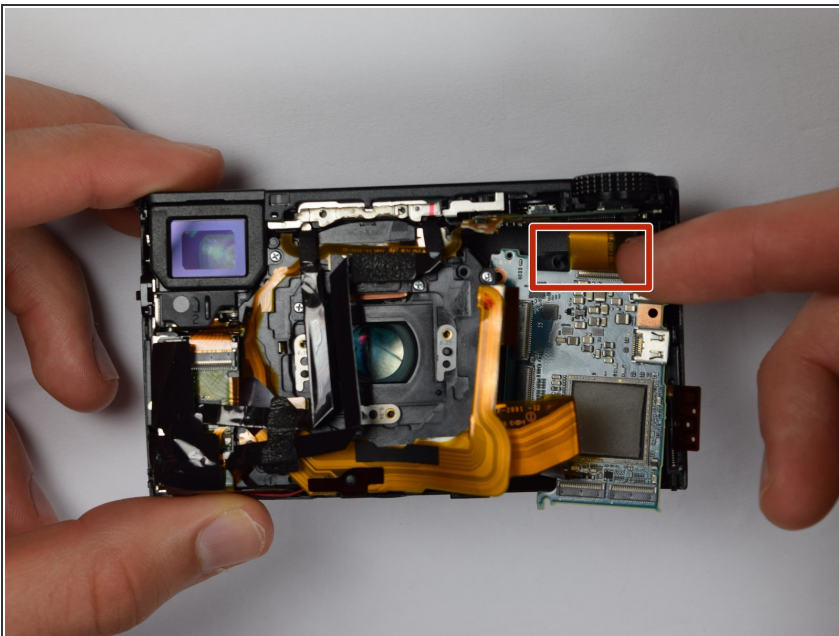

- Carefully remove the last gold ribbon by lifting the gray tab and sliding out the ribbon.
- ⚠ Be sure to use extreme caution because if this ribbon breaks, you will need to buy a new camera.

Step 17

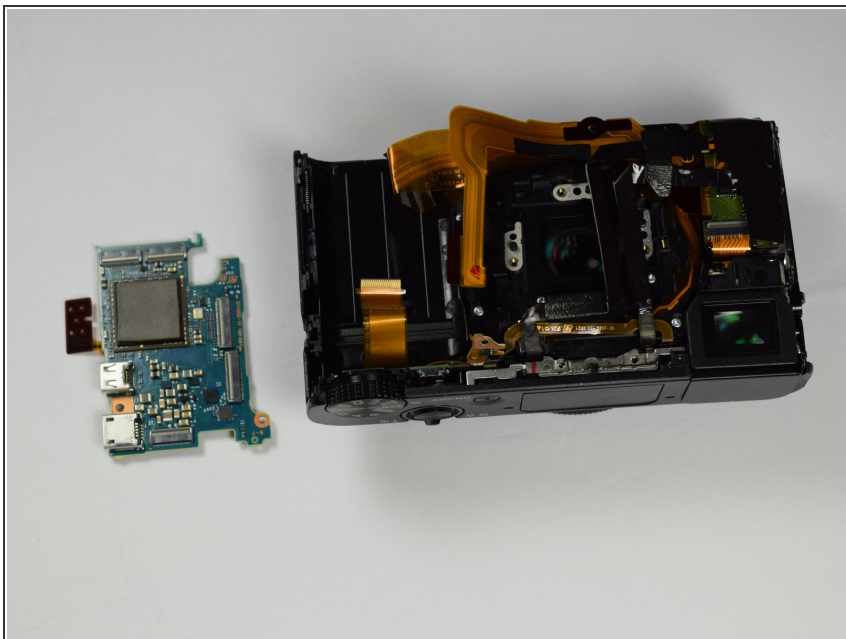

- Viola! The motherboard is now removed and can be replaced with a new one.

To reassemble your device, follow these instructions in reverse order.