




Asus Q501LA-BBI6T03 RAM Replacement

This guide will describe to users how to remove and replace the RAM on their Asus Q501LA-BBI6T03.

Written By: Tanner

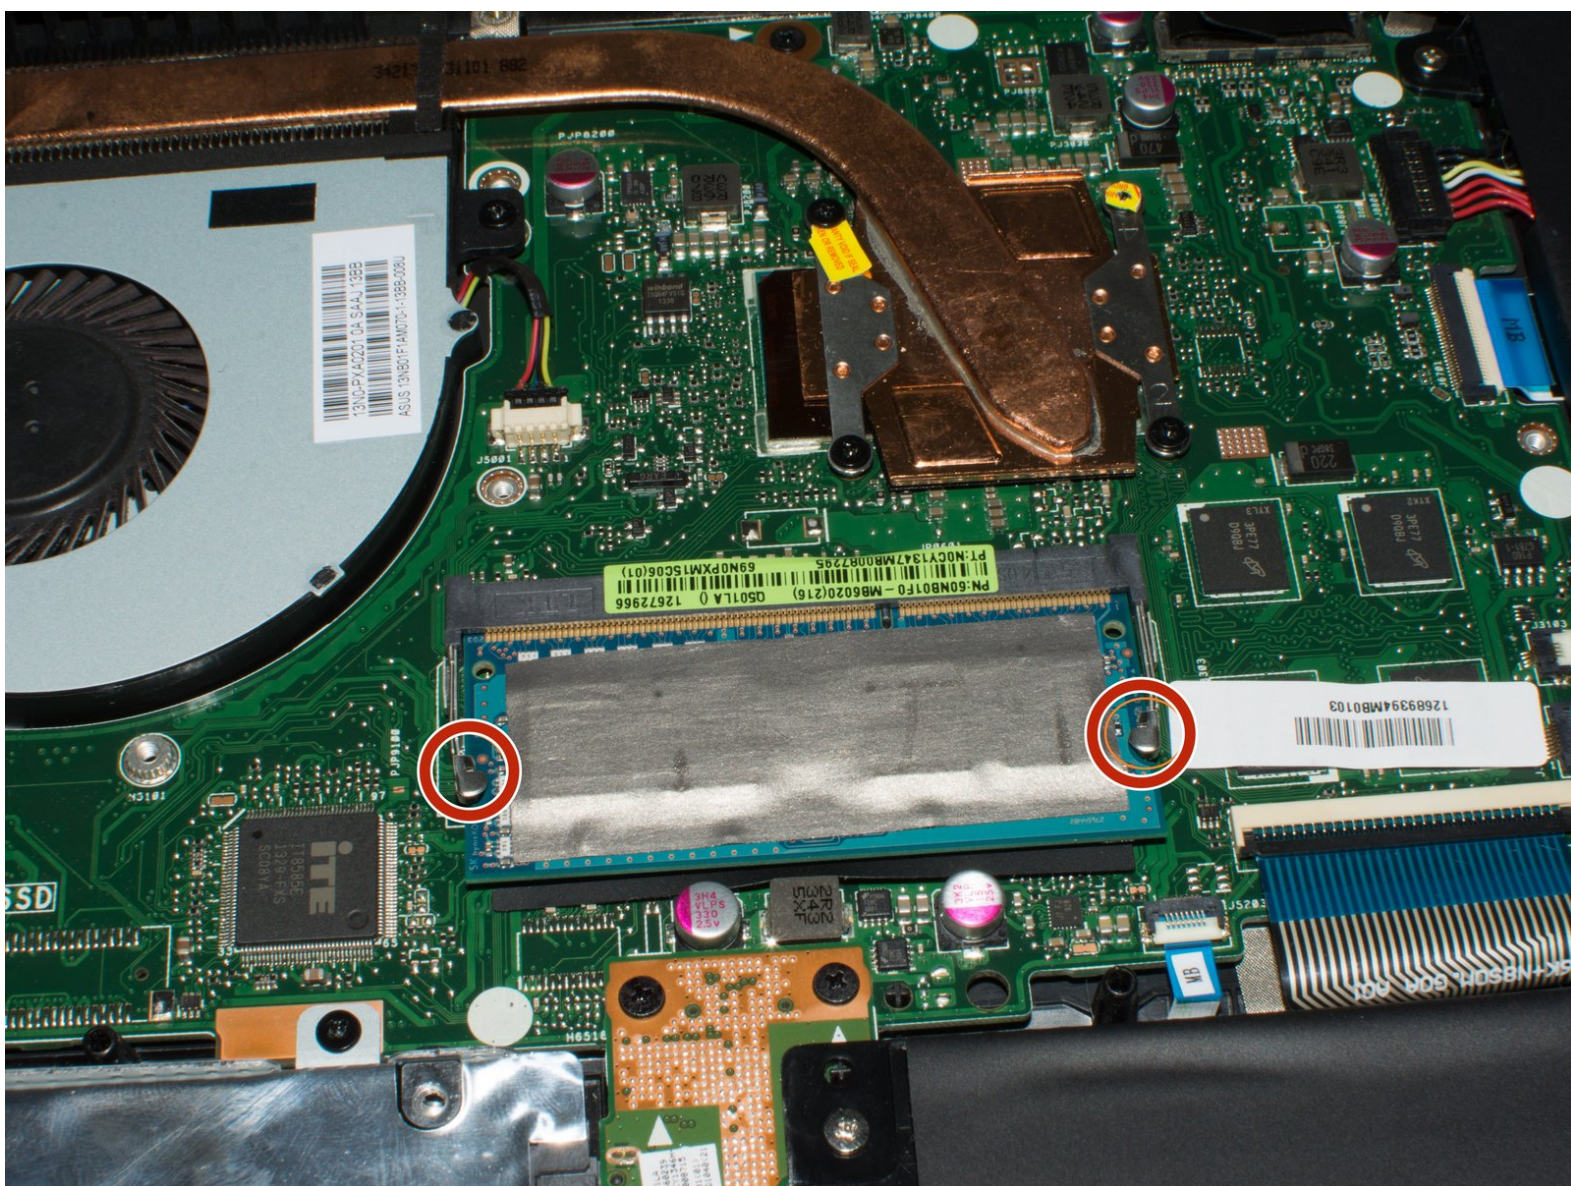

INTRODUCTION

If your RAM needs to be replaced then this guide will show you how to properly do so.



TOOLS:

- [Phillips #0 Screwdriver](#) (1)
- [Spudger](#) (1)



PARTS:

- [8GB \(DDR3-12800\) RAM Memory](#) (1)

Step 1 — Back Panel



⚠ Ensure the laptop is powered down before continuing.

- Use a Phillips #0 screwdriver to remove the ten 3mm Phillips head screws on the base of the laptop.

Step 2



- Use the spudger to pry open the rear cover at either hinge.



Step 3



- Grab the cover with your fingers and gently lift it away from the board.

i Be careful not to break any tabs on the cover when lifting it off.

Step 4 — RAM

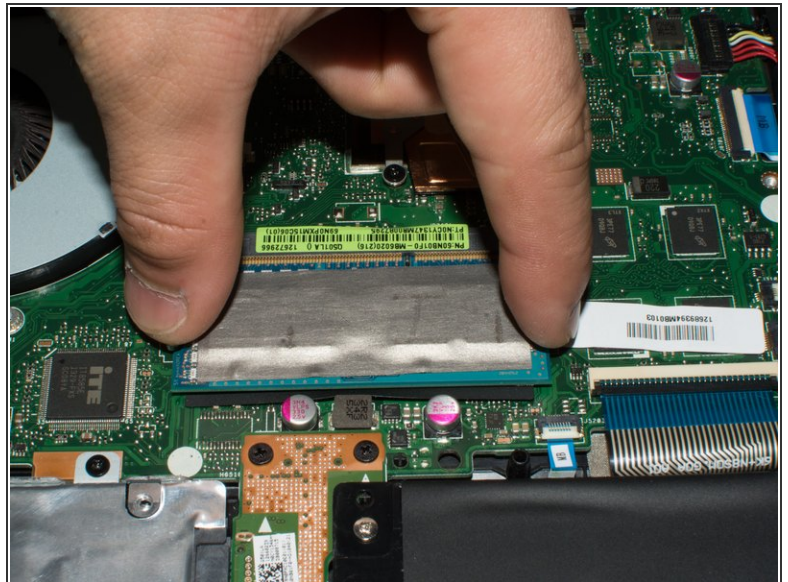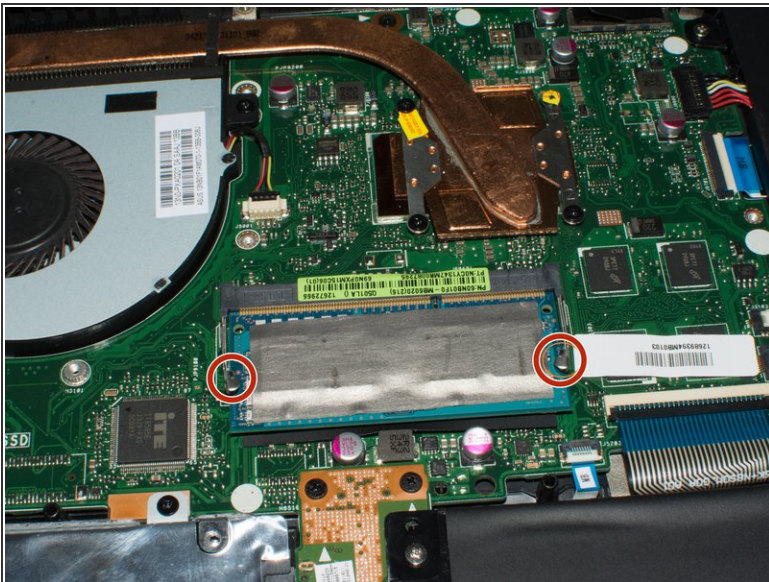

- Press down the metal tabs on both sides of the RAM.

i The tabs are spring loaded and the RAM will pop up immediately.

To reassemble your device, follow these instructions in reverse order.