




Cuisinart DLC-8F Power Cable Replacement

Use this guide to replace the power cable on your Cuisinart DLC-8F.

Written By: David Colman

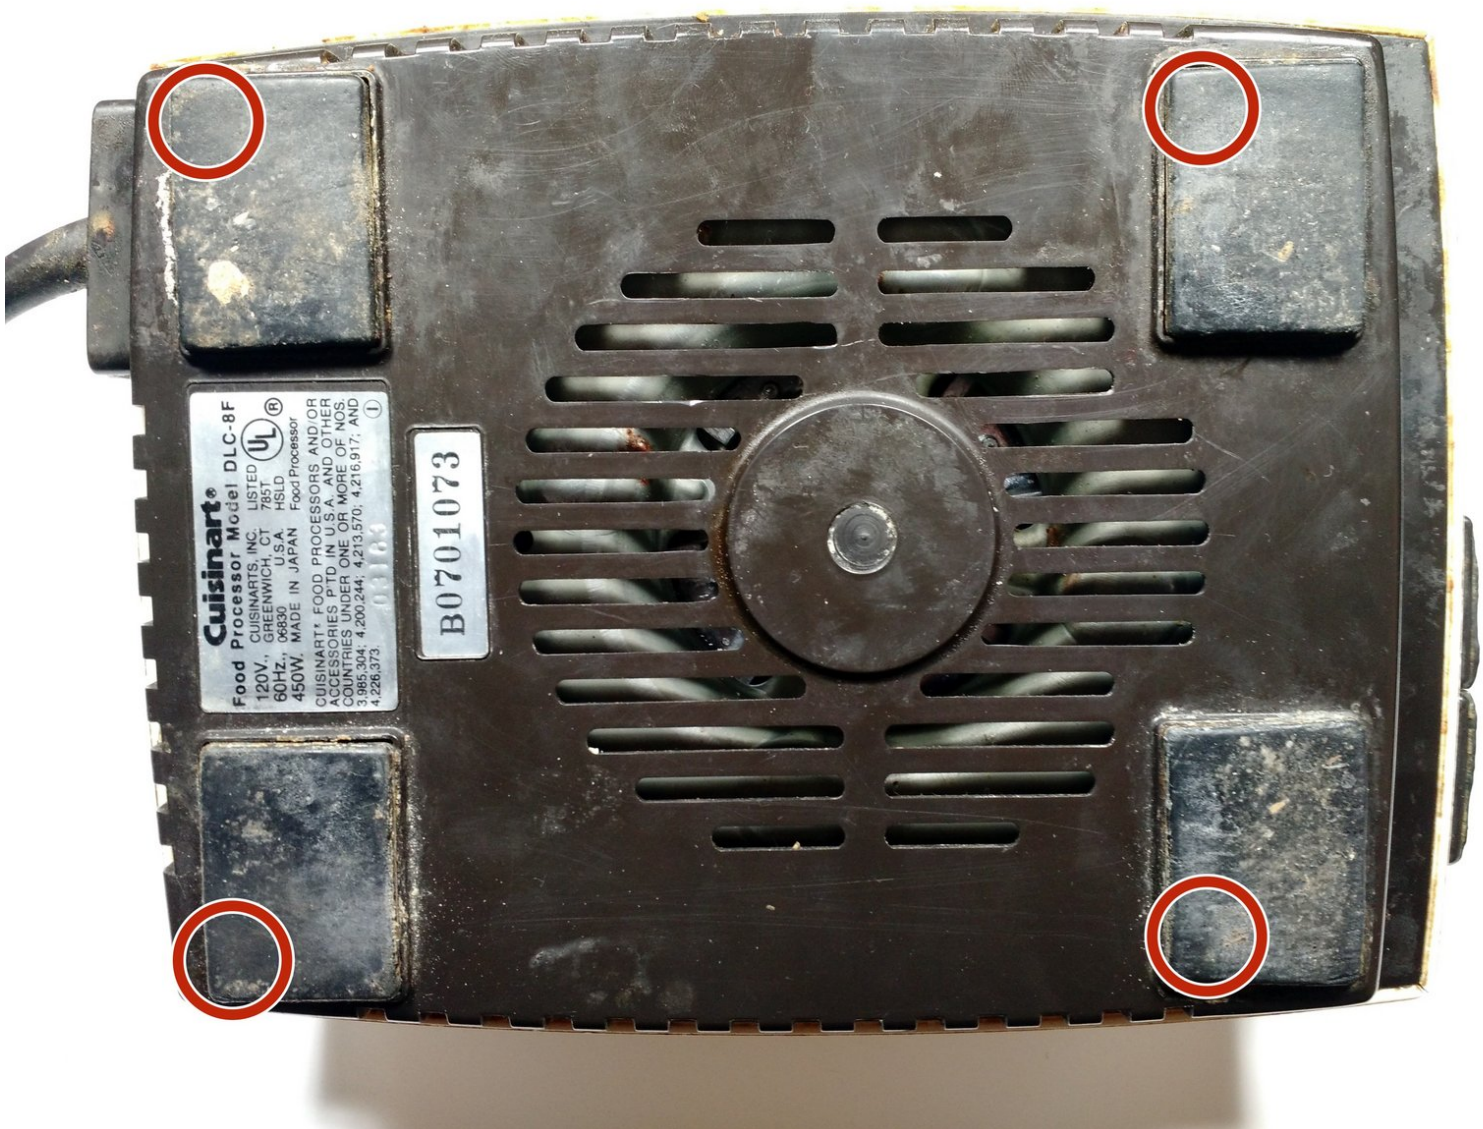

INTRODUCTION


This guide teaches the user how to replace the power cable in your Cuisinart DLC-8F. The removal of the power cable first requires the removal of the bottom hood and all of this can be done with just a Phillips #2 screwdriver. This is an easy process and should only take about 10 minutes.



TOOLS:

- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Power Cable

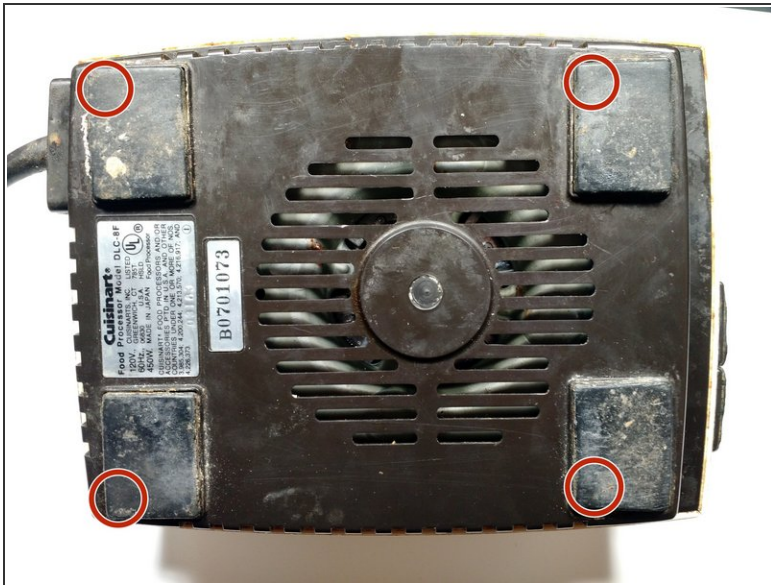


- Remove the four 18 mm Phillips #2 screws from the bottom by prying up the rubber feet to access the screw hole.

Step 2





- Gently lift the bottom cover from the main body.

Step 3

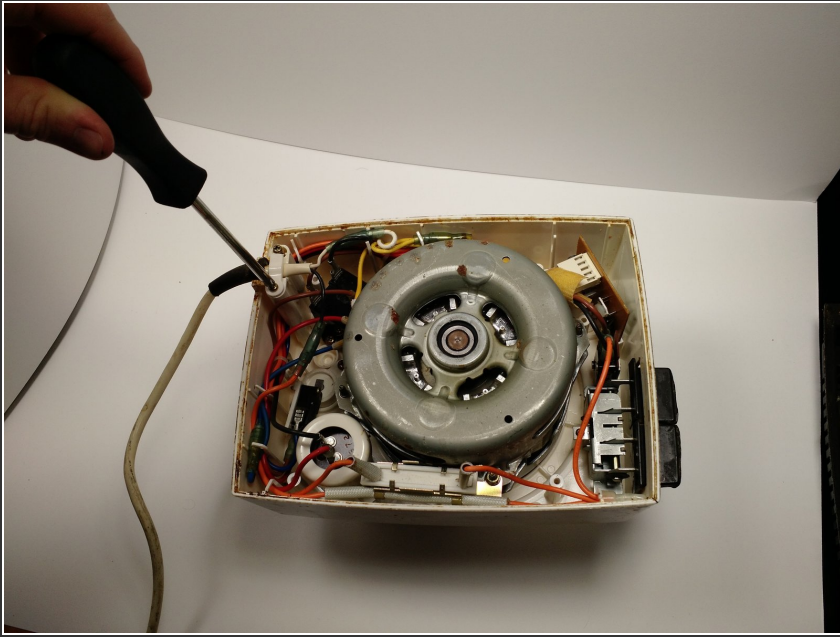



- Remove the two 62 mm Phillips #2 screws from the cable retaining clip.

Step 4

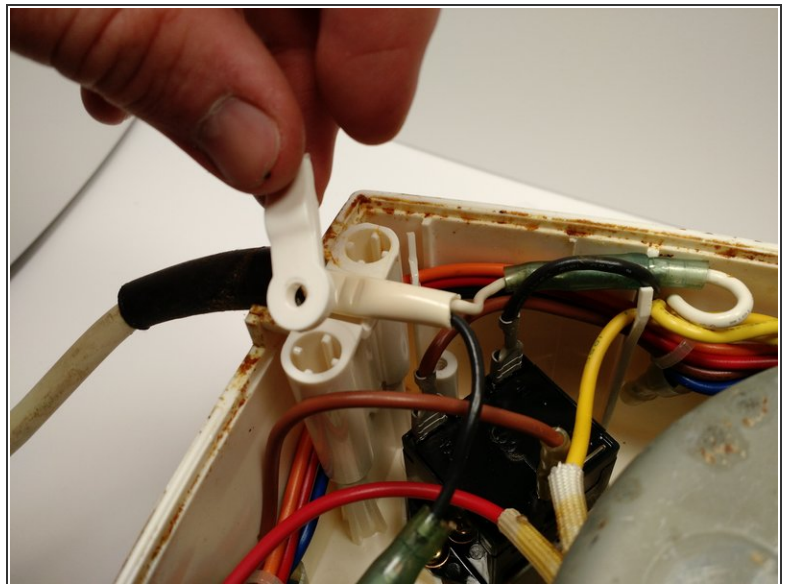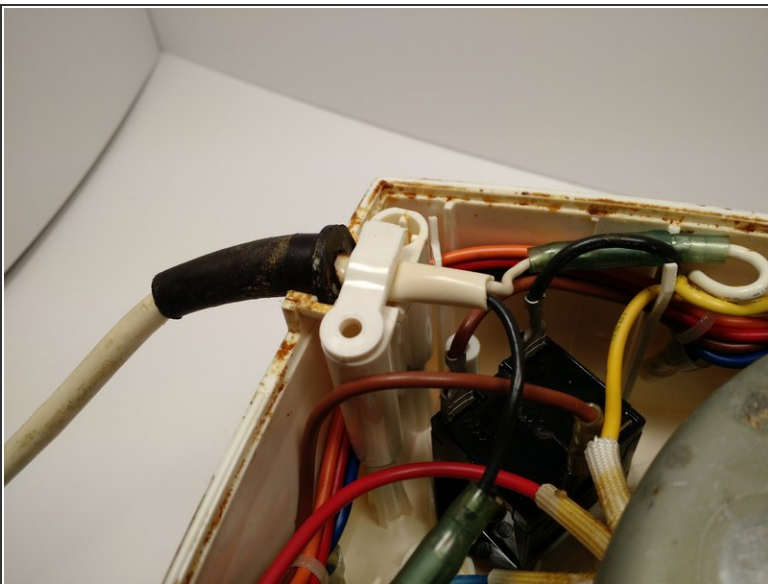



- Lift off the cable retaining

Step 5

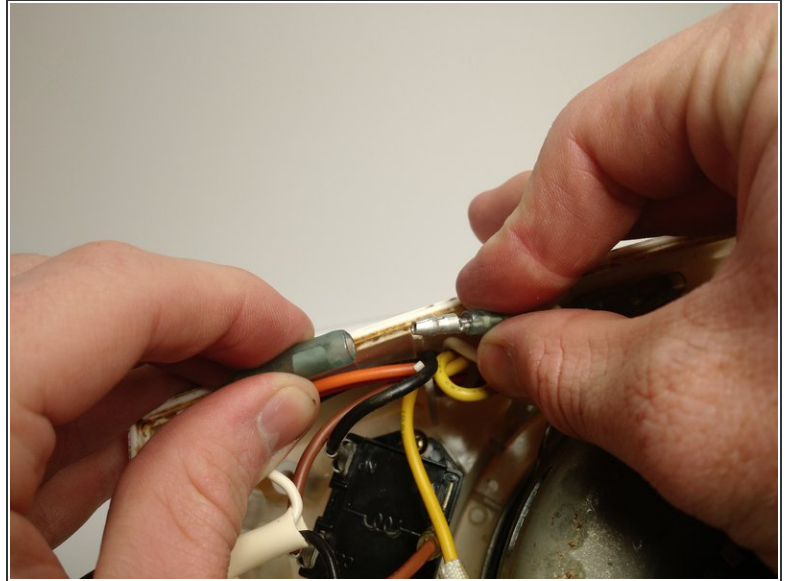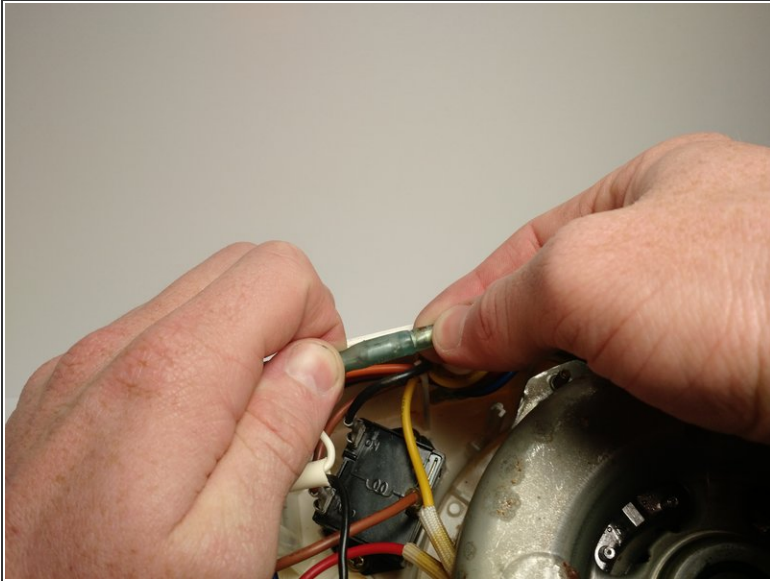

- Pull apart the two wires of the power cable at their connections as shown.

Step 6

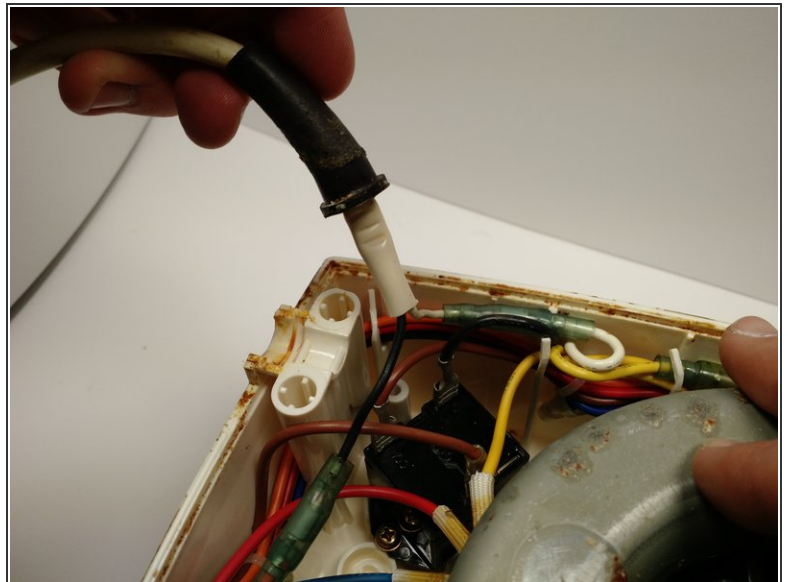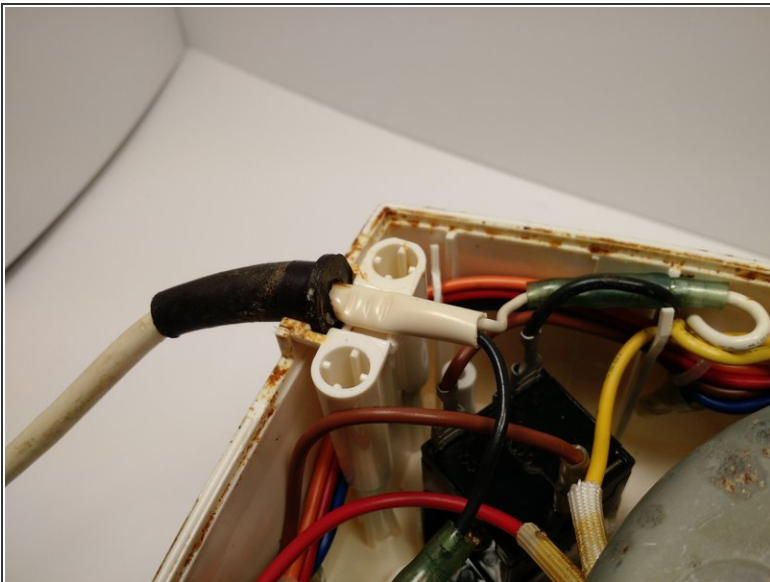

- Lift out the cable.

To reassemble your device, follow these instructions in reverse order.