



Asus Q500A Battery Replacement

This guide will demonstrate how to replace the battery in the Asus Q500A.

Written By: cameron



INTRODUCTION

This guide will demonstrate how to replace the battery in the Asus Q500A.

Step 1 — Battery



- Flip device onto backside.

Step 2



- Locate the two sliding locks.
- Slide the sliding lock 1 to the right to unlock it .
- ⓘ There should be a red marker to indicate that it is unlocked. This lock will stay unlocked until slid back into the locked position.

Step 3



- Slide the sliding lock 2 to the left to unlock it.
- ⓘ There will not be any indicator that it is unlocked. This lock will relock if you do not continue to push it to the left.

Step 4



- While the first and second lock are unlocked, slide the battery out to remove it.
- ★ When reinserting the replacement battery, make sure to slide sliding lock 1 back into the locked position. Otherwise the battery may come loose.

To reassemble your device, follow these instructions in reverse order.