




Panasonic HC-VX870 Side Cover Replacement

Replacing the left side cover of the camcorder.

Written By: Rebecca Maloney

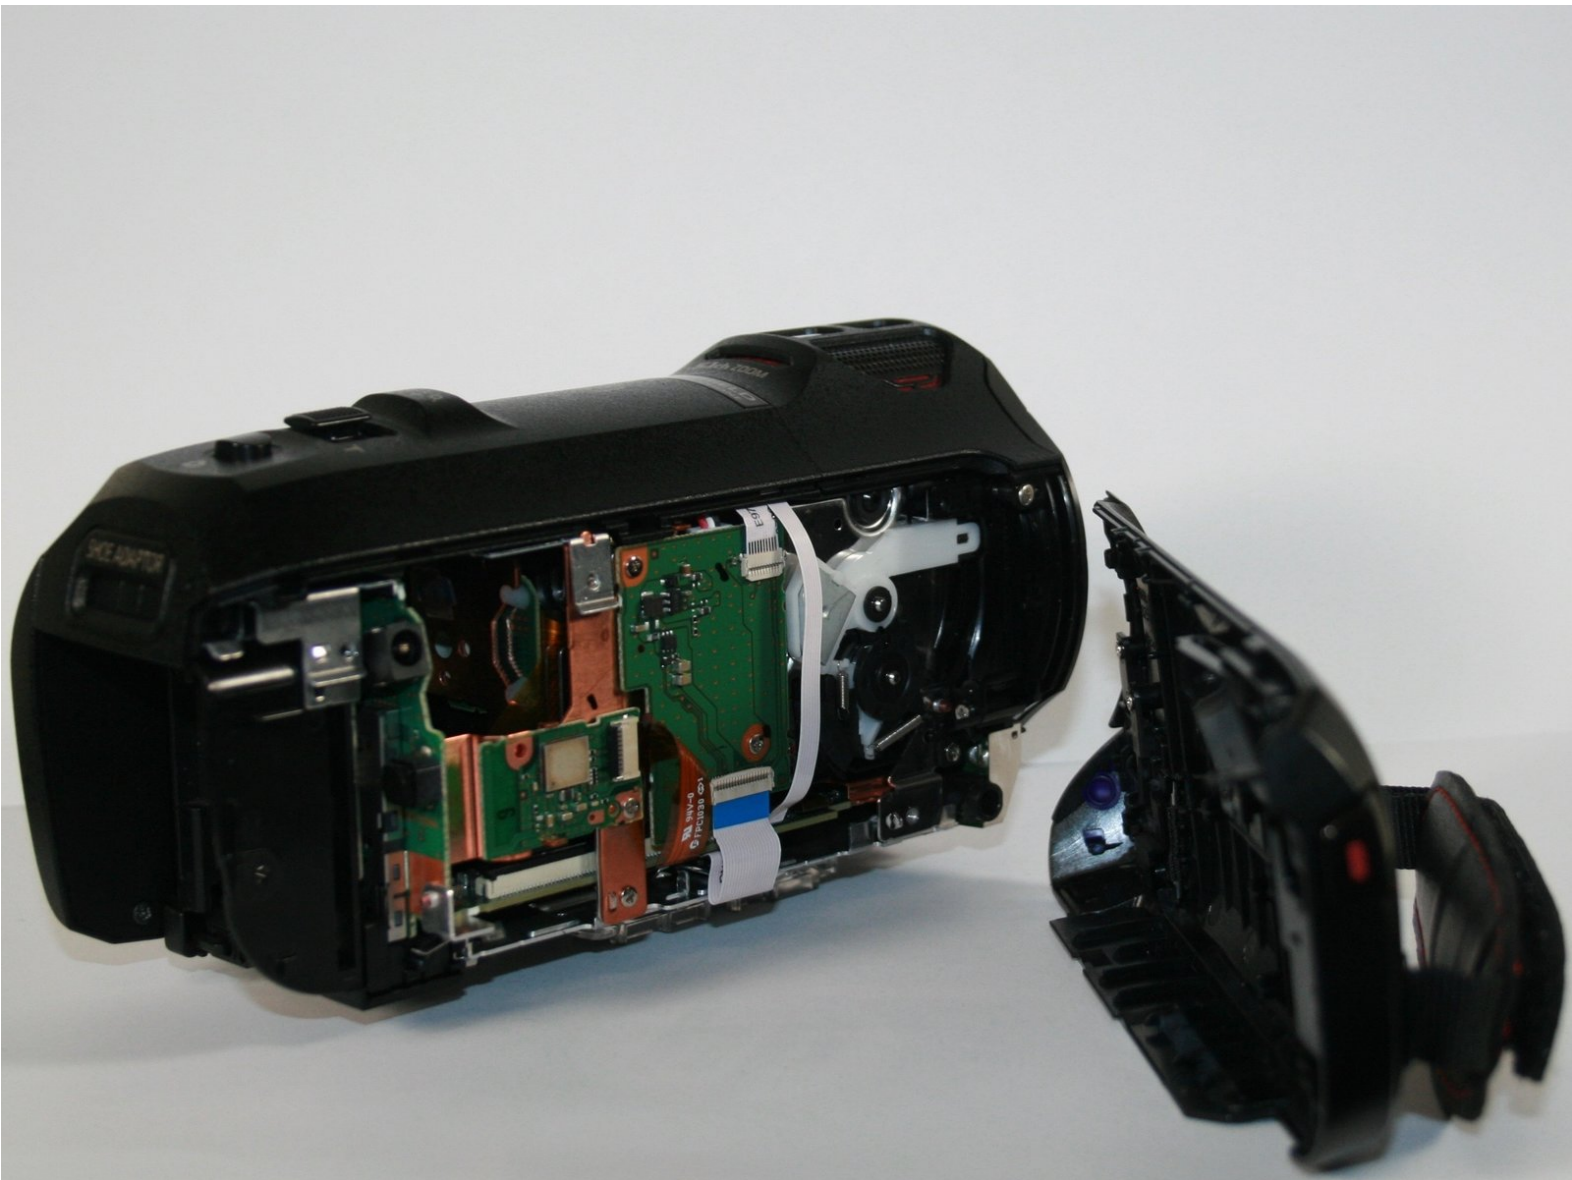

INTRODUCTION

Take off the the left side cover of the camcorder in order to replace it.



TOOLS:


- [JIS Driver Set](#) (1)
-

Step 1 — Side Cover



- Unscrew the J1 screws on the left side of the camcorder.
- Unscrew the marked screws on the bottom of the camcorder.
- Unscrew the marked screws on the back of the camcorder.

Step 2

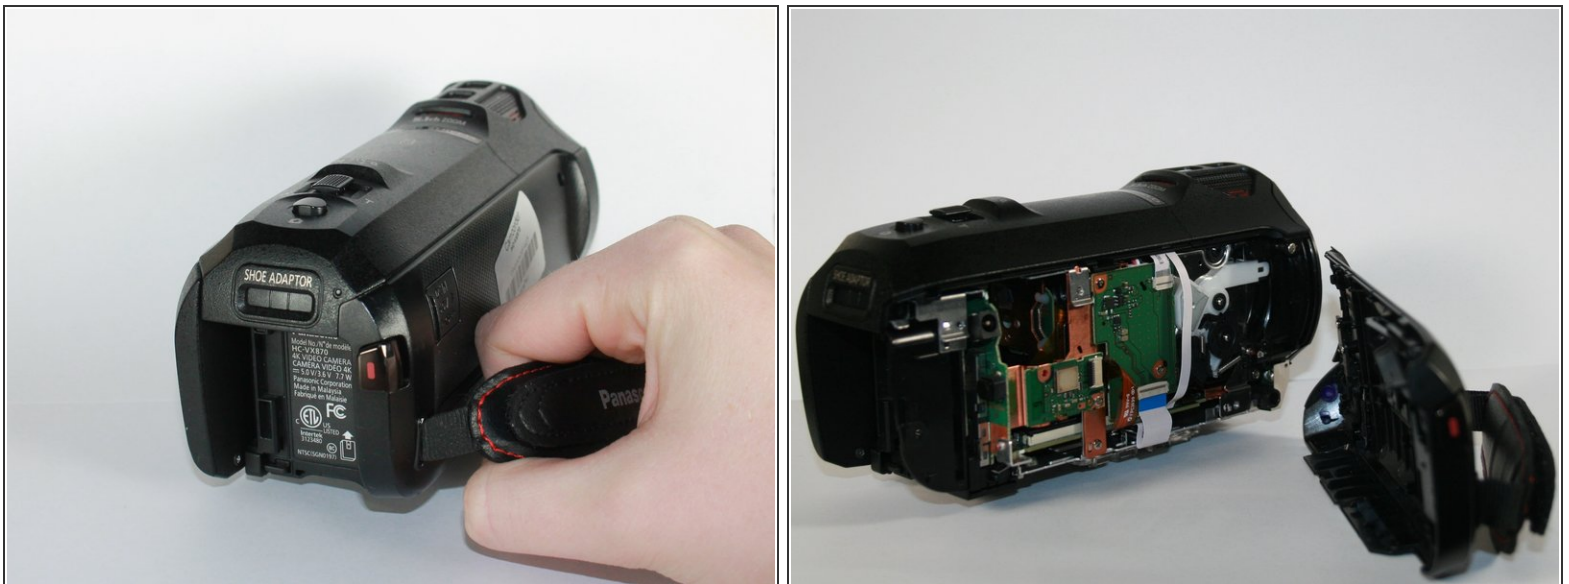

- Pull off the left side of the camcorder. You may have to use a little force but don't worry about breaking anything in the camcorder.

To reassemble your device, follow these instructions in reverse order.