



Escali P115M Battery Replacement

This guide explains how to replace low or faulty batteries for the Escali P115M kitchen scale.

Written By: Megan Herrel



INTRODUCTION


The Escali P115M should show a low battery symbol on the display if the battery is running low.

Step 1 — Battery



- Flip the device over.

Step 2

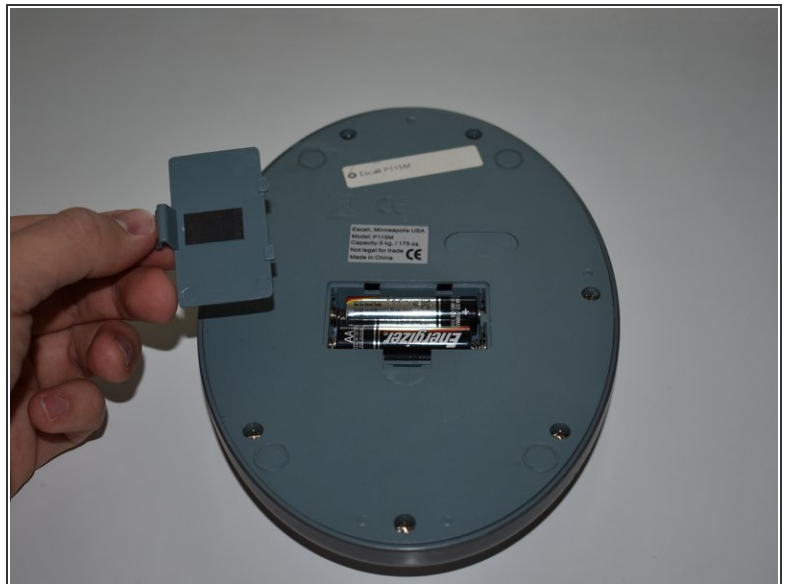

- Remove the battery cover.

Step 3



- Use the plastic tab to pry the battery cover off to get the batteries up and out of the device.

To reassemble your device, follow these instructions in reverse order.