



ProScan PLT7050 Back Casing Replacement

Prerequisite Only

Written By: Kaycee Nufer



INTRODUCTION

Use this as a prerequisite guide



TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Open Device



- Make sure device is unplugged and turned off while working on the device.
- Remove 2 Phillips head, 4.3 mm screws from the bottom side of the tablet with a PH00 screwdriver.

Step 2



- Use the plastic opening tools to pry the back of the tablet open.
 - You may need to slide the tool along the sides of the device to get it to open. You might hear some popping noises, it is okay.
- i** May be helpful if you start by the microSD slot.

To reassemble your device, follow these instructions in reverse order.