



Asus X751L Screen Replacement

Use this guide to replace the screen on your ASUS X751L.

Written By: Sanwal Hussain



INTRODUCTION

This guide will walk you through the process of replacing a broken or faulty screen on the Asus X751L.

TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Keyboard




- With the screen closed, place your laptop upside-down with the front facing you.
- Remove the six 14.6mm Phillips #00 screws.
- Remove the four 6.6mm Phillips #00 screws.

Step 2

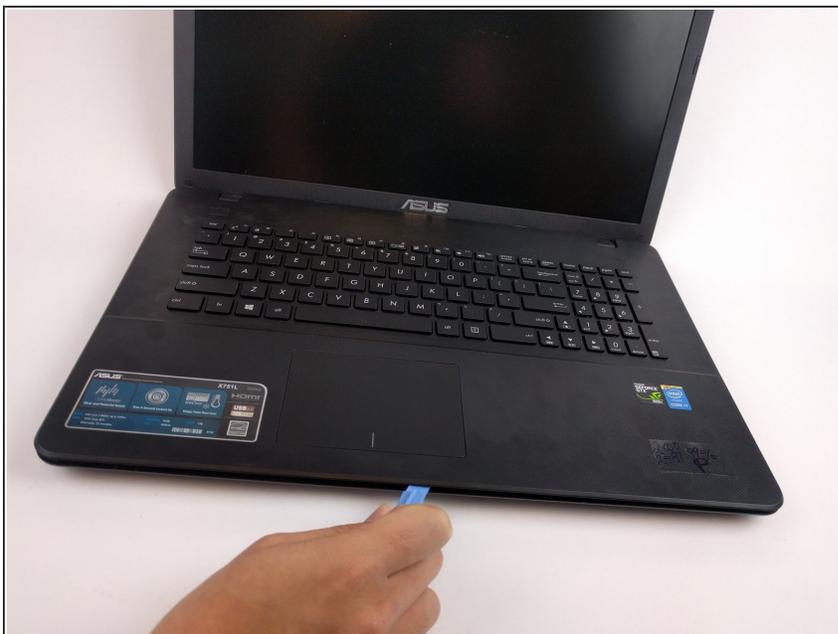

- Flip the laptop over and open the lid.
 - Pry around the edges of the laptop base using the plastic opening tool.
- ⚠ Prying too hard can break the plastic clips.

Step 3

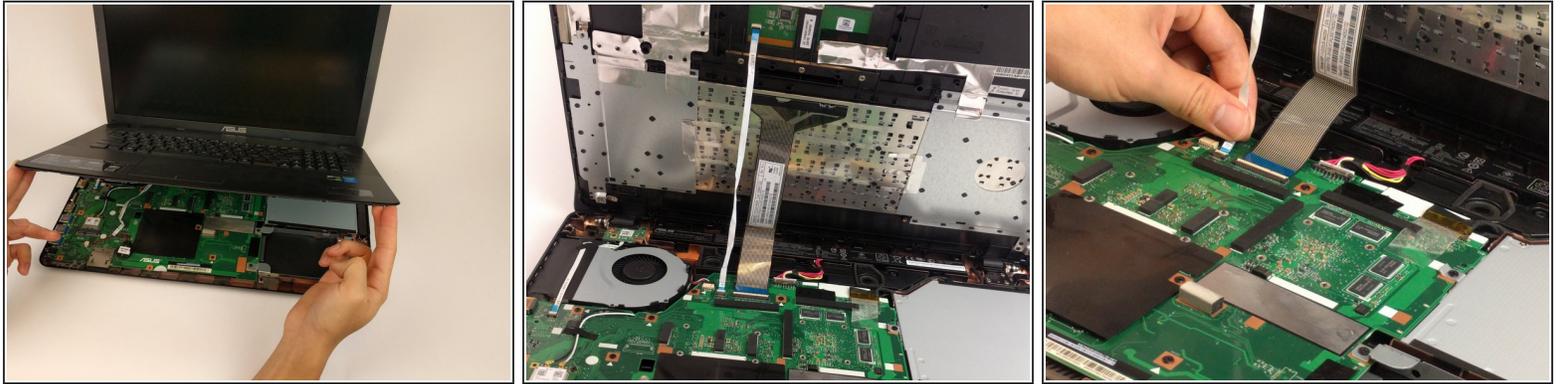

- Carefully lift the keyboard up.
 - ⚠ Be very careful when lifting the keyboard up. Two zero insertion force (ZIF) cables are between the keyboard assembly and the motherboard. Do not lift the assembly too high.
- Disconnect the two ZIF connectors from the motherboard using your fingernail to lift the cream-colored tab.

Step 4 — Screen




- Remove the two rubber screw covers and the Phillips #00 screws beneath them.

Step 5




- Pry around the edges of the panel using the plastic opening tool.
- ⚠ Prying too hard can break the plastic clips.
- Carefully pull off the screen cover.

Step 6

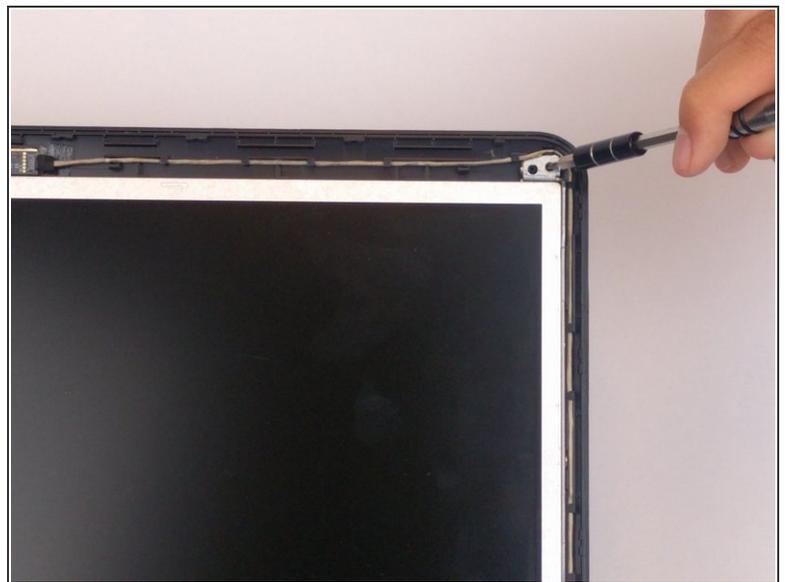


- Remove the two 4.7mm Phillips#00 screws to free the screen-holding bracket from the back panel.

Step 7

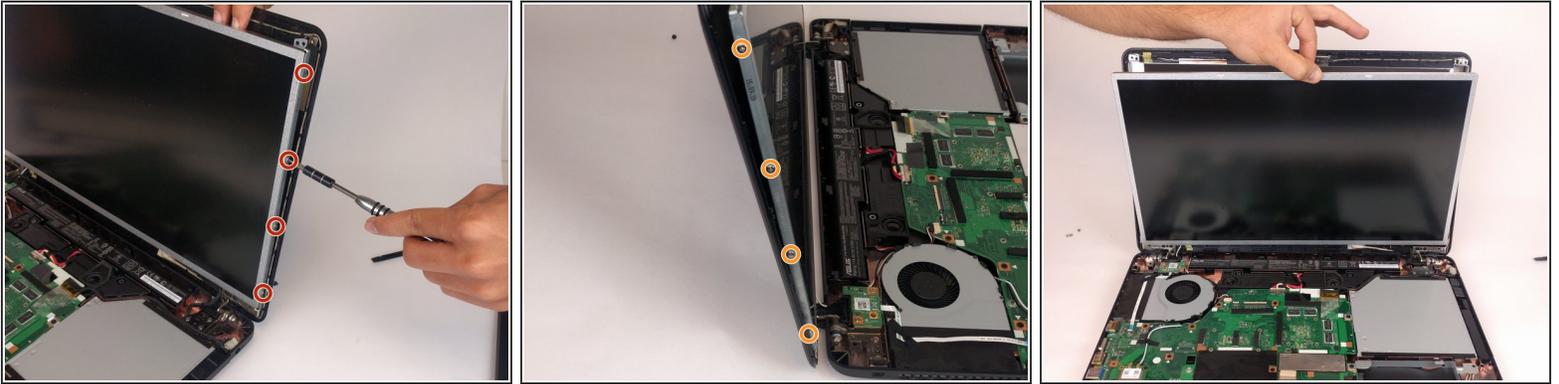

- Remove the four 3.6mm Phillips#00 screws on the right side of the screen.
 - Remove the four 3.6mm Phillips#00 screws on the left side of the screen.
- ⚠ Make sure you hold the screen so it doesn't fall forward when removed from the bracket.

Step 8

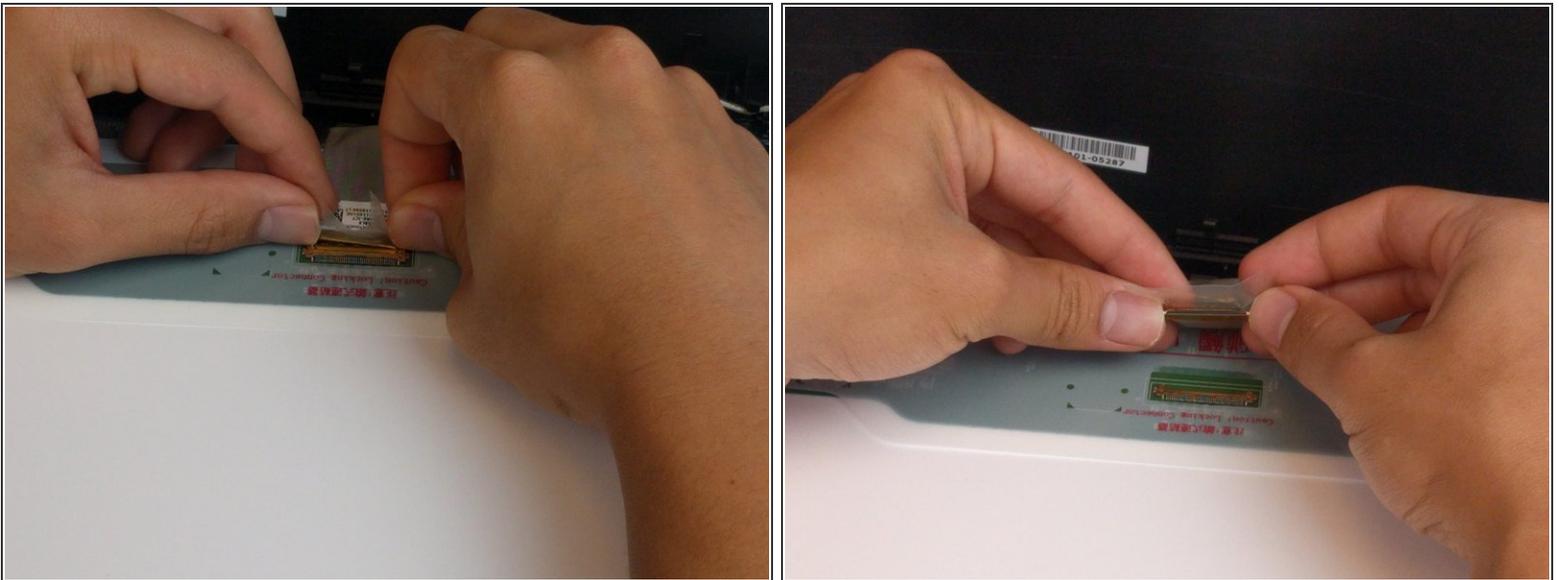

- Gently lay the screen down to reveal the back side.
- Remove the tape over top of the display cable connector.
- Disconnect the display cable connector using your fingers.

To reassemble your device, follow these instructions in reverse order.