

# Harman Kardon Onyx Studio 2 Speakers Replacement

Following this guide will lead you to replacing any number of speakers in the Onyx Studio 2.

Written By: Alexandra Achtenberg



This document was generated on 2020-11-15 12:57:27 PM (MST).

### **INTRODUCTION**

If your speakers are busted or faulty, this guide will help you in replacing one or both of the speakers in your Onyx Studio 2.



## **TOOLS:**

- iFixit Opening Tools (2)
- T10 Torx Screwdriver (2)
- Metal Spudger (1)

### Step 1 — Front Panel







 Using a plastic opening tool, pry off the front grill by wedging it in the notch on the front of the device.

## Step 2





Remove the five 14.4 mm T10 Torx screws.


### Step 3



 Gently pull the front apart from the back.


### Step 4



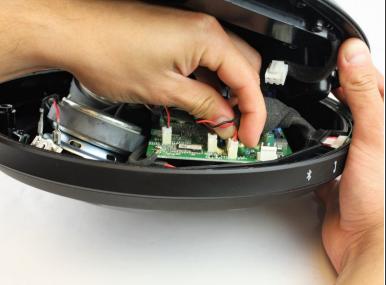

- Remove the four wires connecting the front and back panels.
- Pinch the connector tab and pull gently upwards.
- Repeat for the other three connectors.

### Step 5 — Control Board

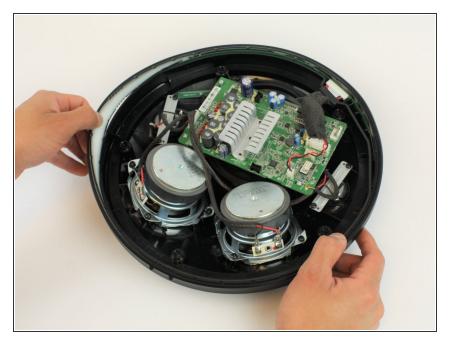

 Pull the silicone button band off of the outer edge of the speaker.


## Step 6





Disconnect the two pressure connections from the circuit board.

## Step 7

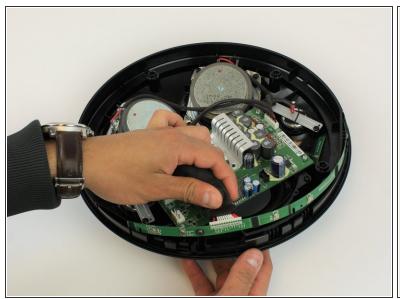



- Gently remove the control board band by placing fingers in contact with it through the button openings.
- (i) Work from the outer edges in so as not to bend the band.

### Step 8 — Circuit Board





- Disconnect the remaining connectors from the circuit board.
- Disconnect the Bluetooth antenna.

## Step 9





- Remove the four 10 mm T10 Torx screws.
- Pull the circuit board out of the device as it is now free.

### Step 10 — Speakers



 Using the metal spudger, gently pry off the two red and black connectors.

## Step 11





Remove the four 14.3 mm T10 Torx screws.

## Step 12



 Pull out the speaker, and if necessary follow these steps to replace the other identical speaker.

To reassemble your device, follow these instructions in reverse order.