



Kodak Easyshare P712 Battery Replacement

This guide demonstrates how to replace the rechargeable camera battery.

Written By: Melanie Martin



INTRODUCTION

This guide demonstrates how to replace the rechargeable camera battery.



PARTS:

- [Kodak Li-ion rechargeable battery](#) (1)
-

Step 1 — Power Off



- Turn off the camera by turning the selector dial to “off.” This is located on top of the camera body.

Step 2 — Open Battery Door



- On the bottom of the camera body, you will find the battery door. Slide the switch into the “open” position.

Release thumb to allow the door to swing open.

Step 3 — Remove Battery



- Remove the Kodak Li-ion Rechargeable Battery.

To reassemble your device, follow these instructions in reverse order.