

Inter-tel IP 8660 Motherboard Replacement

Written By: Mariano Bautista



TOOLS:

Phillips #1 Screwdriver (1) Spudger (1)

Step 1 — Rear Cover



Before disassembling the phone, make sure it is not plugged into power and the handset phone cord is disconnected from the handset jack.

Step 2



- Unscrew the 9 highlighted screws using a #1 Phillips head screwdriver. You can use a magnetized screwdriver to draw them out.
 - 8 mm long
 - 11 mm long



• Lift up the back cover and set it aside.

Step 4 — Internal speaker



• While holding down the motherboard, gently pull the wire harness connecting the speaker to the motherboard until it comes free.



• Lift up the speaker.

Step 6 — LCD Screen




- Lift up the motherboard out of its housing in the front cover of the phone.
- Set the front cover and button pads aside.



- Using <u>tweezers</u>, pinch the highlighted connective clips together and depress. Start with the clips in the middle of the motherboard first.
 - Note: There are four clips, one at each corner of the LCD screen.

Step 8

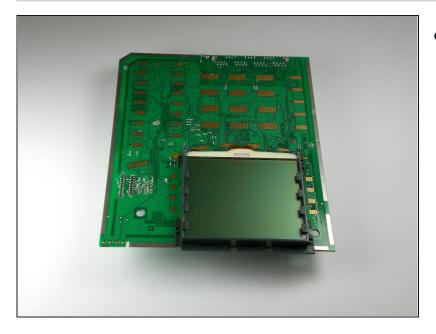

• Flip the motherboard over so that the LCD screen is facing upward.



- Push the black clip holding the ribbon cable out of its casing using the plastic opening tool.
 - This is done using the spudger to lift one side out of its housing.
 - Reposition the spudger to the other side of the black clip and push it flush with the other end.
- Note: The black clip pushes out of the housing and does not come completely loose.

Step 10



• Pull gently on the ribbon cable so that it comes loose from the black clip.

To reassemble your device, follow these instructions in reverse order.