




# Toshiba Chromebook CB35-A3120 Speakers

## Replacement

In this guide we plan to remove the internal...

Written By: Jayce Houghton

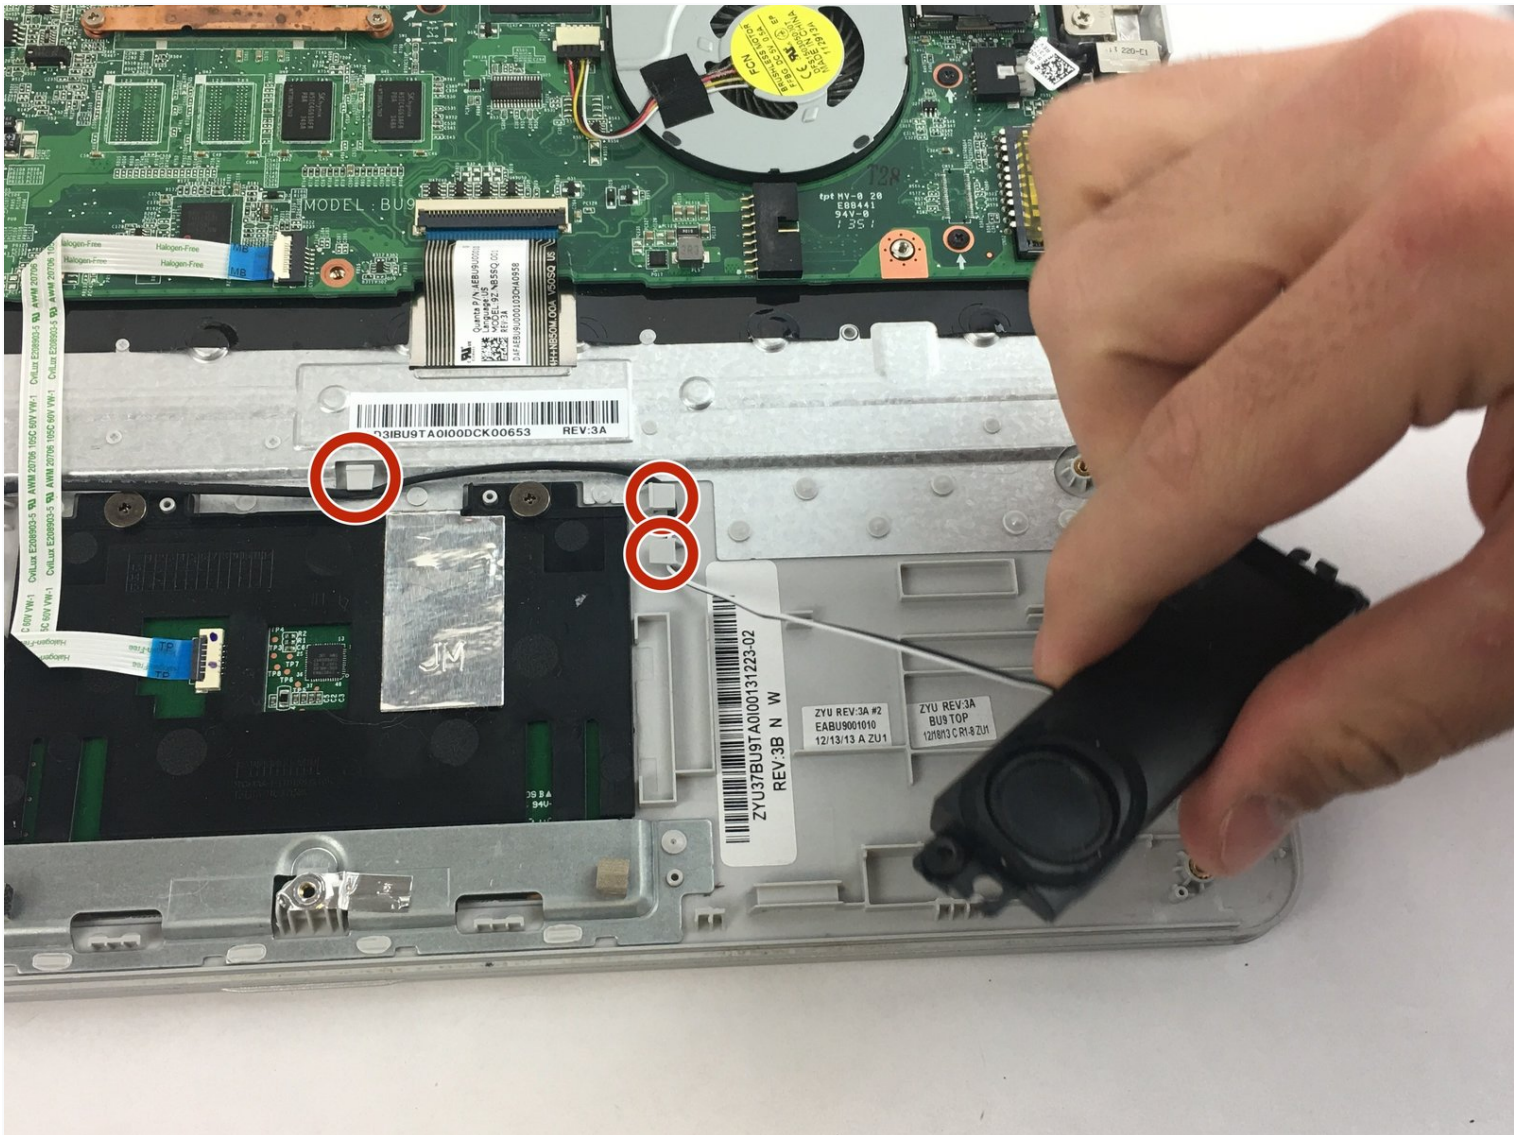

# INTRODUCTION

In this guide we plan to remove the internal speakers from the Toshiba ChromeBook and replace them with new ones.

## TOOLS:

[Outil pour ouvrir iFixit](#) (1)

[Mako Precision Bit Set](#) (1)

## Step 1 — Speakers



- Using a Y1 screw driver head remove all ten .9mm screws from the back cover
- Set the screws aside in preparation for reassembly






## Step 2




- Remove the back cover by placing a prying tool in the SD slot and popping the clips out of place.

## Step 3

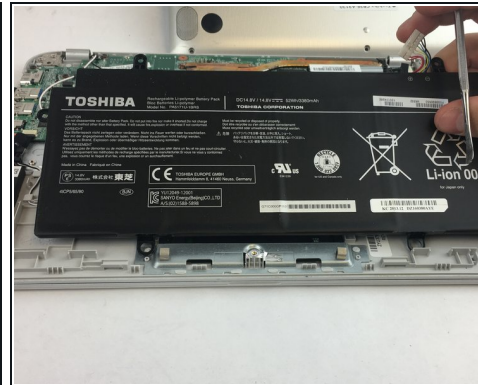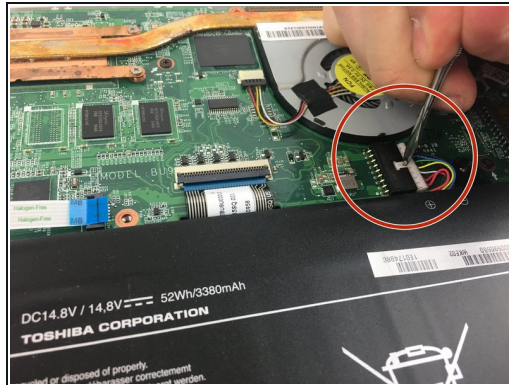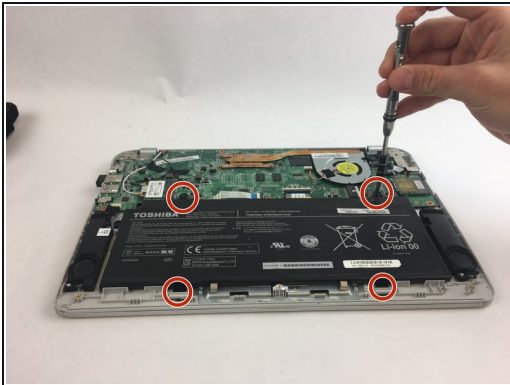


- Unscrew the battery by using a J1 screw driver head, and place the four .7mm screws off to the side
- Using a pry tool, pop the battery connector out of place and gently lift the battery upward.

## Step 4

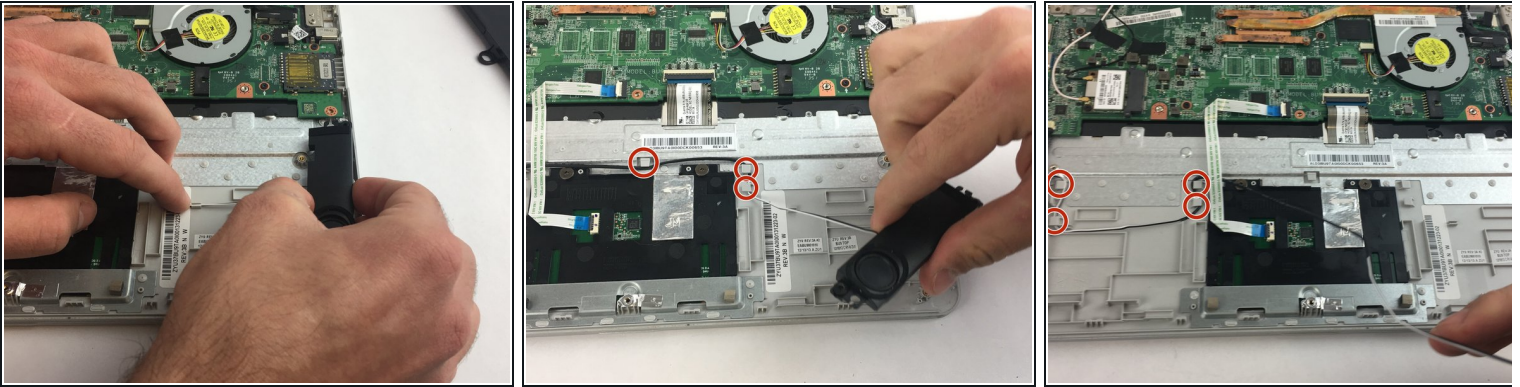

- Remove the right side speaker by popping it out of place with your finger
- Follow the speaker wire along the clips underneath the battery until you reach the left hand speaker

## Step 5

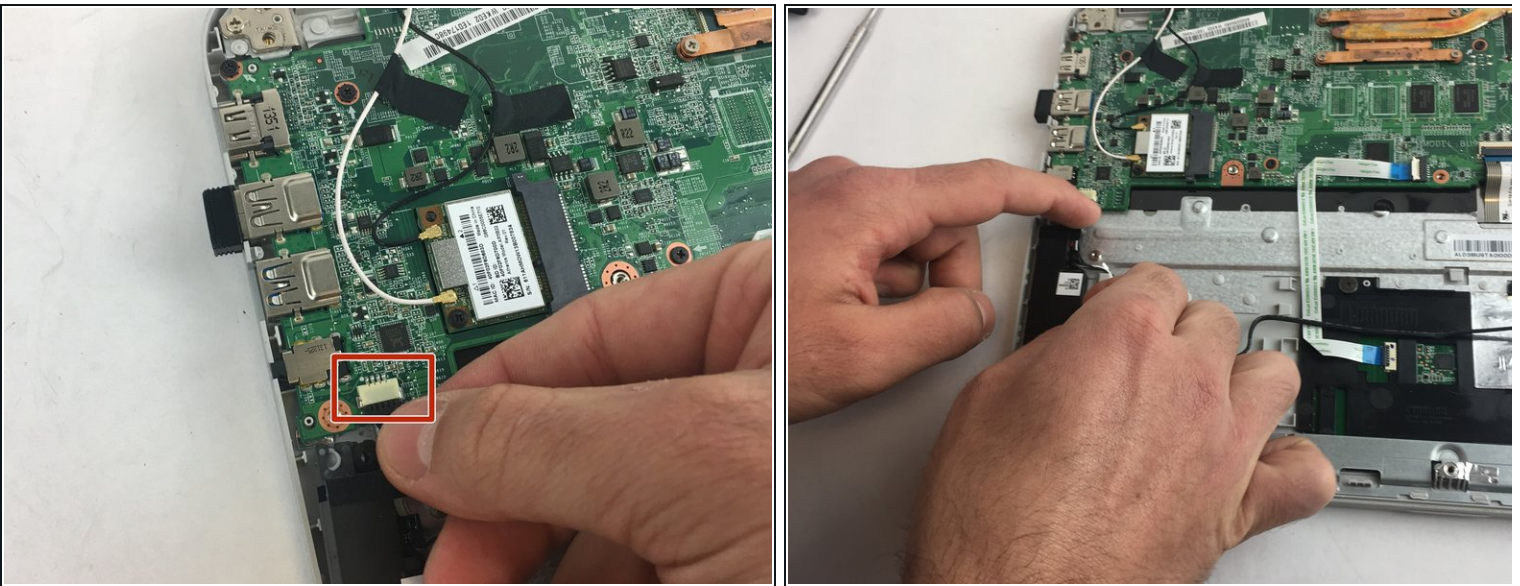

- Unplug the connector wiring the speaker to the mother board.
- Pop the speaker out of the computer, similar to the method used in the previous step.

To reassemble your device, follow these instructions in reverse order.