




# VTech InnoTab Max Battery Replacement

This guide will show how to replace the battery...

Written By: Jacob Schioppo

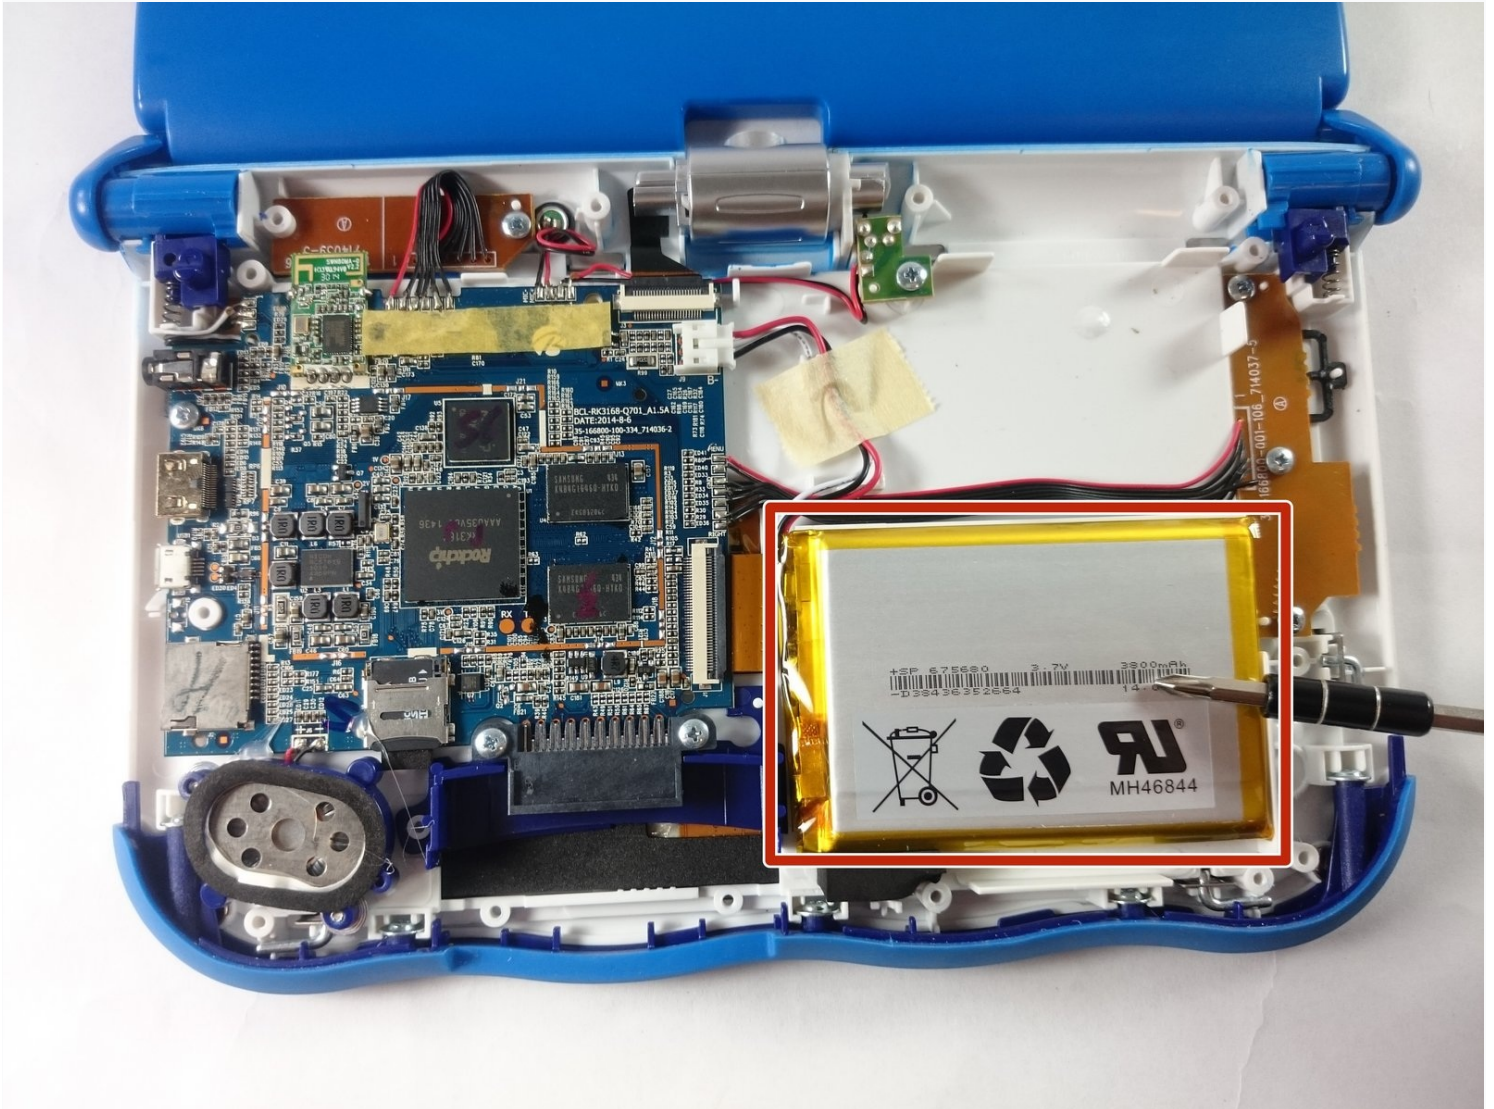

# INTRODUCTION

This guide will show how to replace the battery in the VTech InnoTab Max.

## TOOLS:

J1 Screwdriver Bit (1)  
iFixit Precision Bit Driver (1)  
iFixit Opening Tool (1)  
Magnetic Project Mat (1)


### Step 1 — Cover



- Remove all screw caps from the back panel using a metal spudger.

### Step 2



- Next remove all of the now uncovered screws.
-  If there is a cartridge in the device make sure to remove it.



### Step 3




- Now that all of the screws have been removed, pry the back cover off using a plastic opening tool.

### Step 4




- Here you can see the back cover has been fully removed and you can now access the front cover.
- To remove the front cover, remove the springs holding the pictured brackets in place, then pull it away.

## Step 5 — Battery

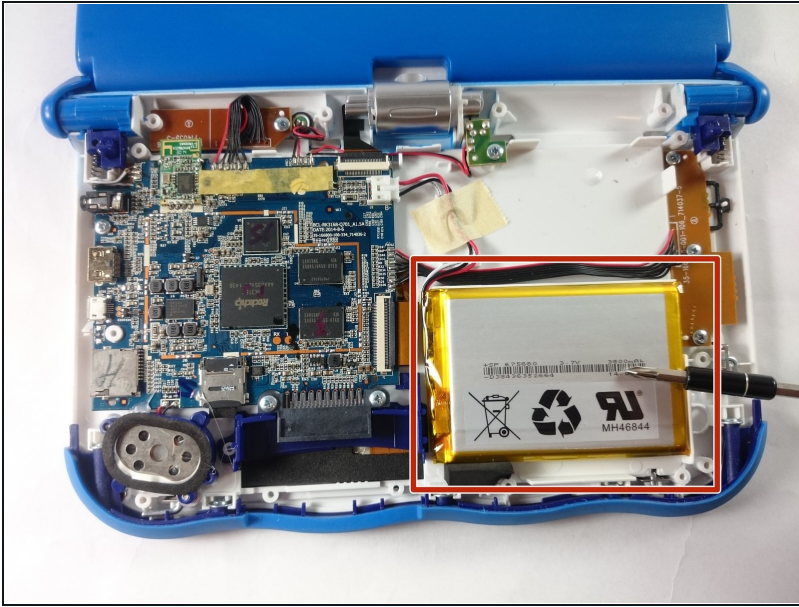

- Once the back cover is removed the battery will be located in the bottom right as you can see in the image to the right.


## Step 6

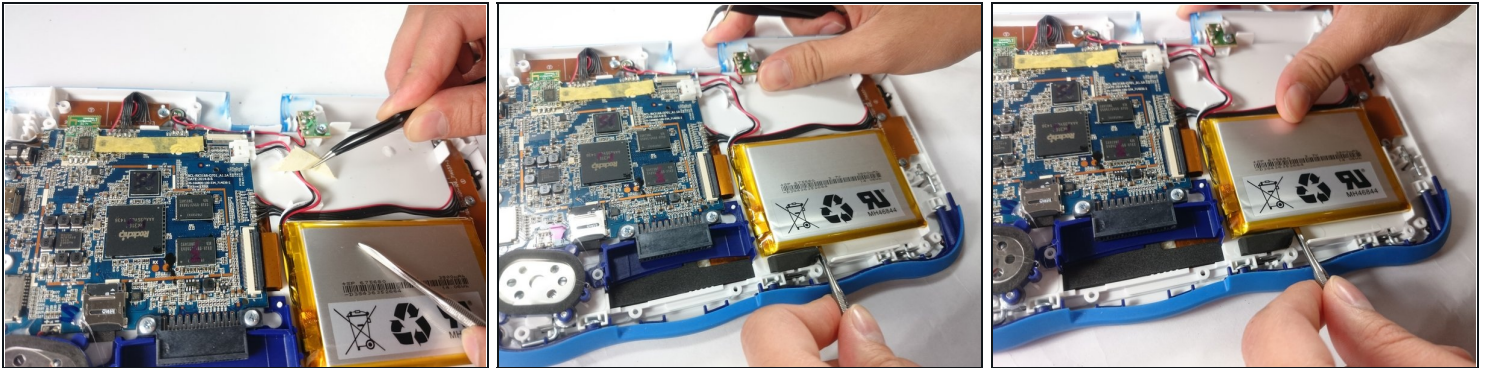

- Remove the tape holding down the wires, and carefully pry the battery off of the base of the device.
- ⓘ Pry carefully to avoid damaging the battery. The battery may start to bend slightly, this is normal and not a cause for concern.
- ⚠ It is best to use a [plastic card](#) or nylon spudger to remove the battery. Metal tools can puncture a battery, potentially causing a fire.




## Step 7

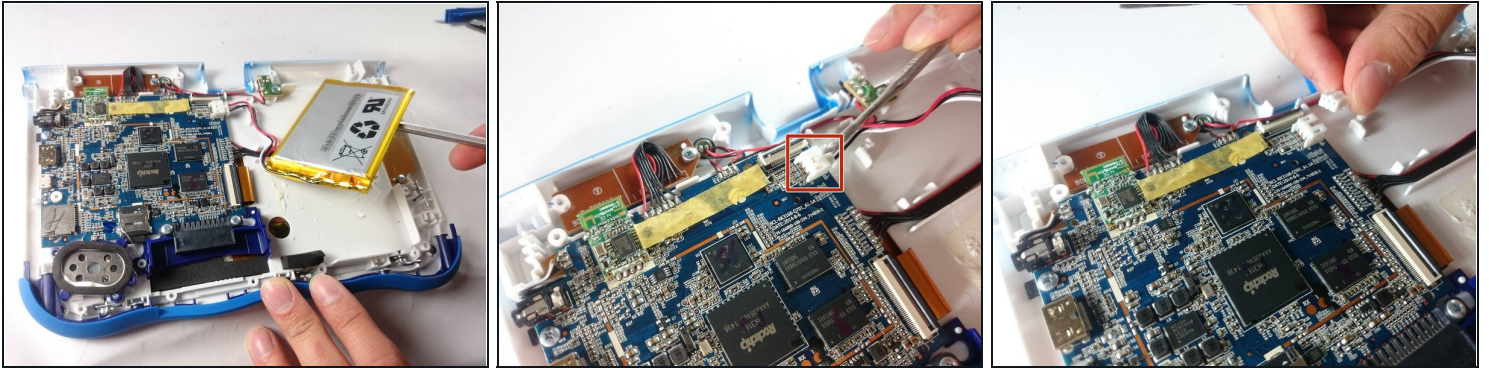

- Now that the battery is free to be moved, unplug the wire connecting the battery to the motherboard.

## Step 8

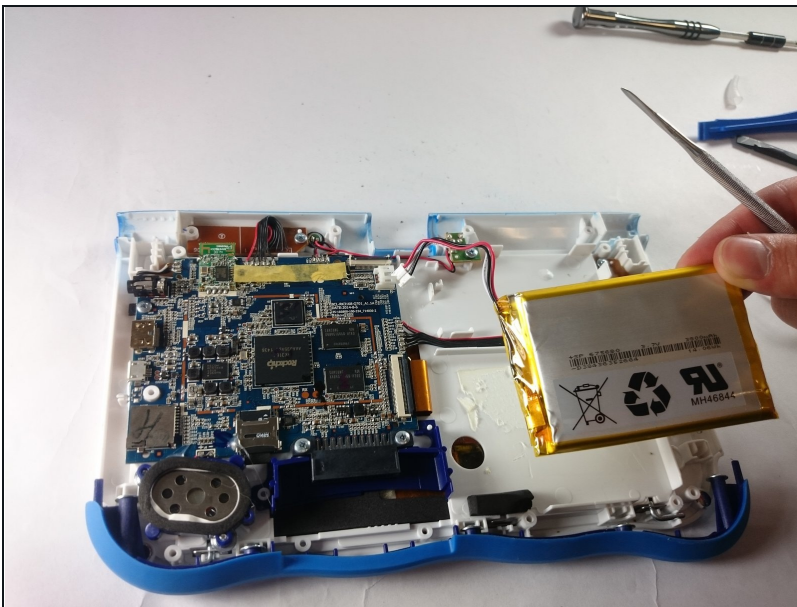

- The battery is now fully disconnected.

To reassemble your device, follow these instructions in reverse order.