




Acer Aspire 5517-1127 RAM Replacement

Replace RAM on Acer Aspire 5517-1127 to improve multi-tasking performance on a slow device.

Written By: Christopher Newkirk

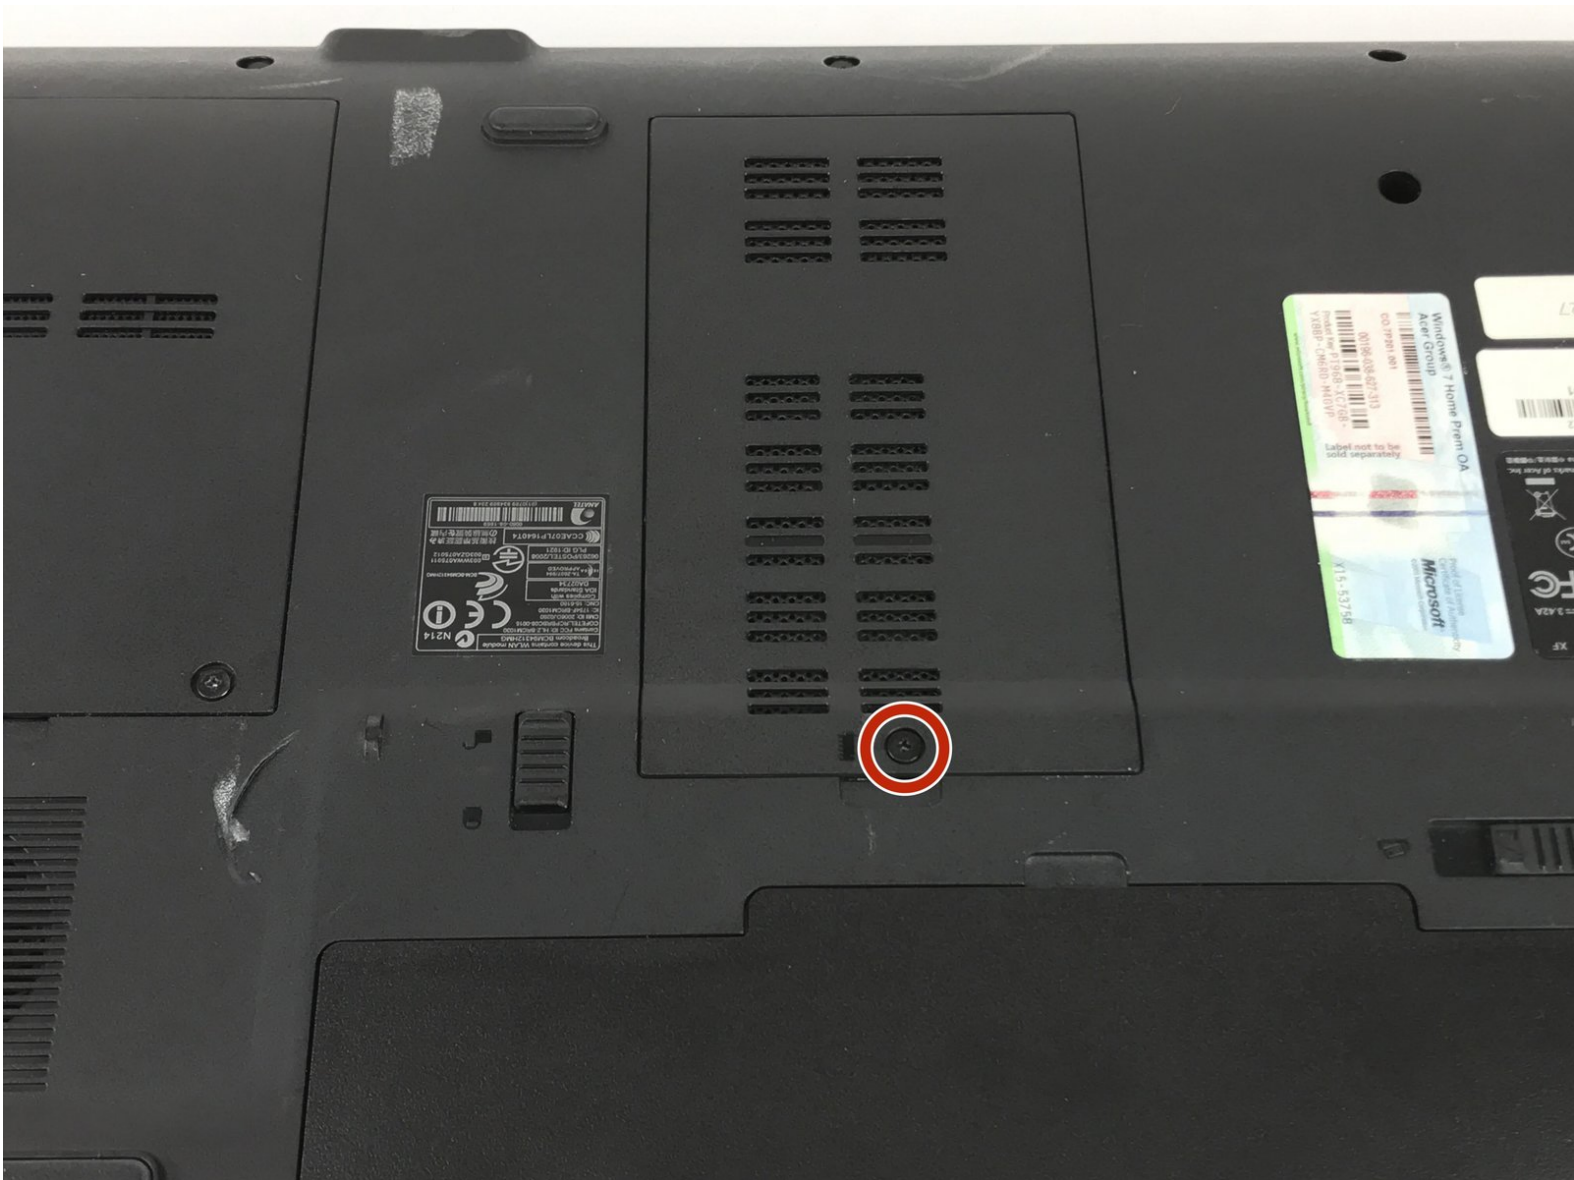


INTRODUCTION

This guide will show you how to replace the RAM on your Acer Aspire-5517-1127 laptop. If your device cannot run multiple applications at once smoothly, then replacing the RAM may help.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — RAM

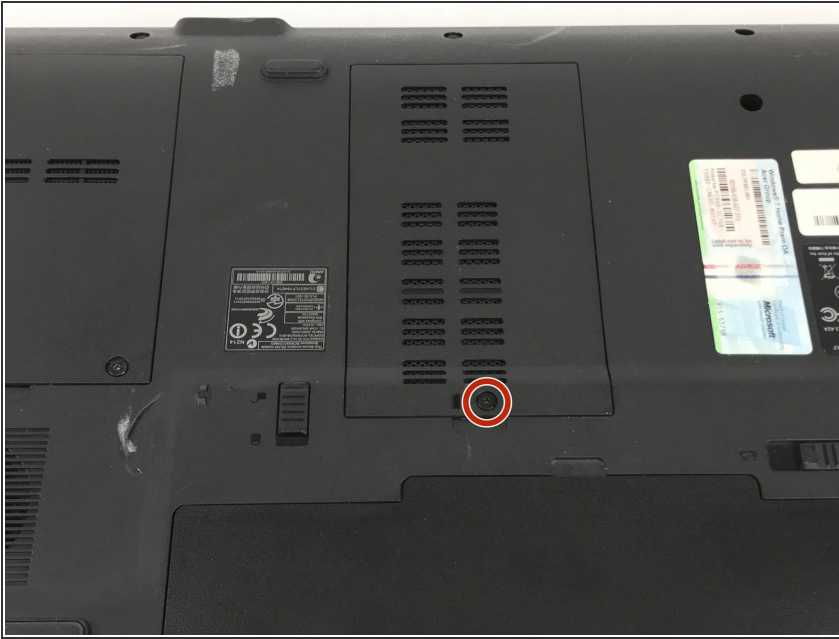


- Orient the device so that it is upside down facing towards you. The ram panel is in the middle of the device.
- The screw is at the bottom of the panel.

Step 2

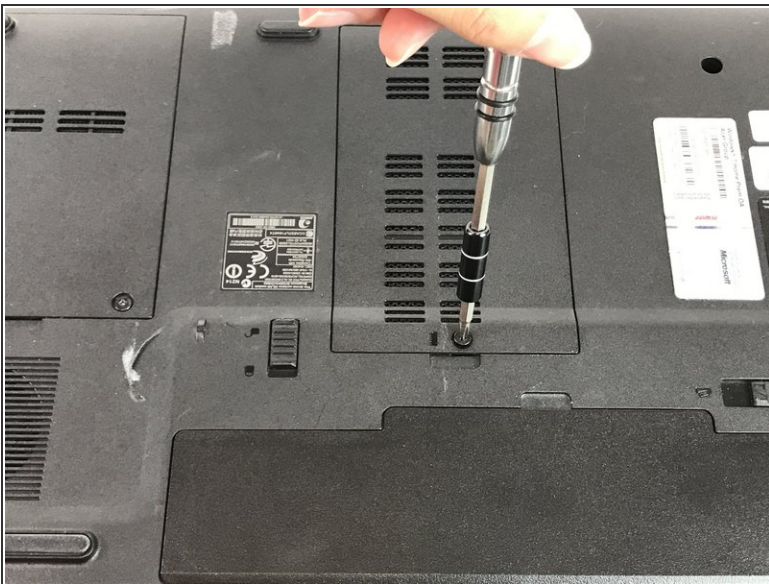



- Using a Phillips screwdriver (PH1), unscrew the screw from the panel.
- Pull the panel away from the device as shown.

Step 3

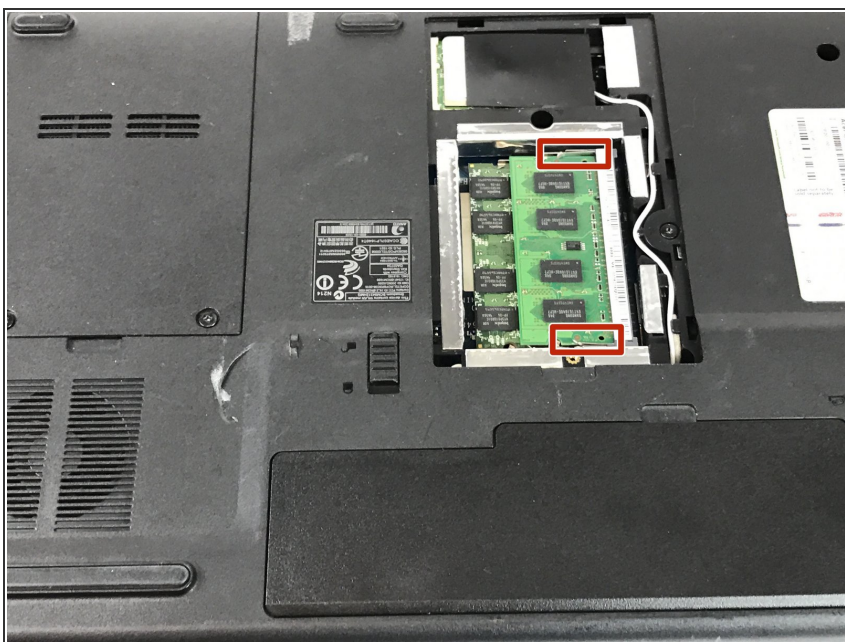


- The two tabs are at the top and bottom of the case as shown.

Step 4

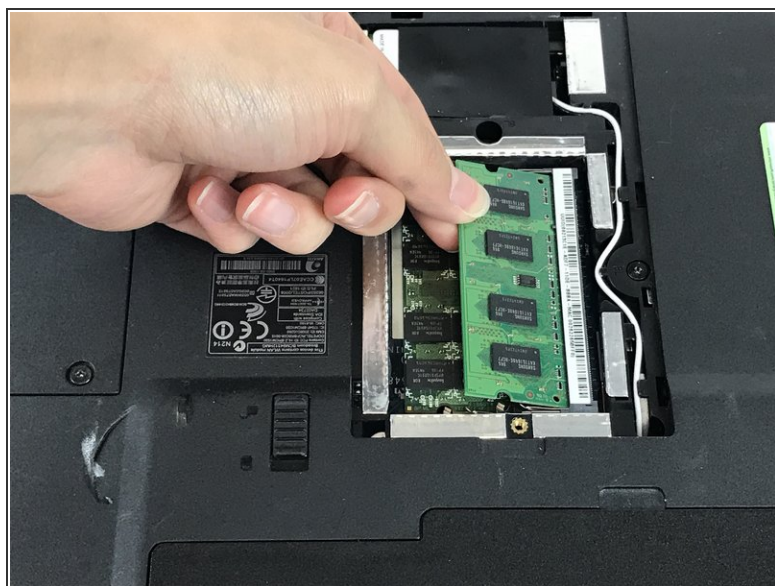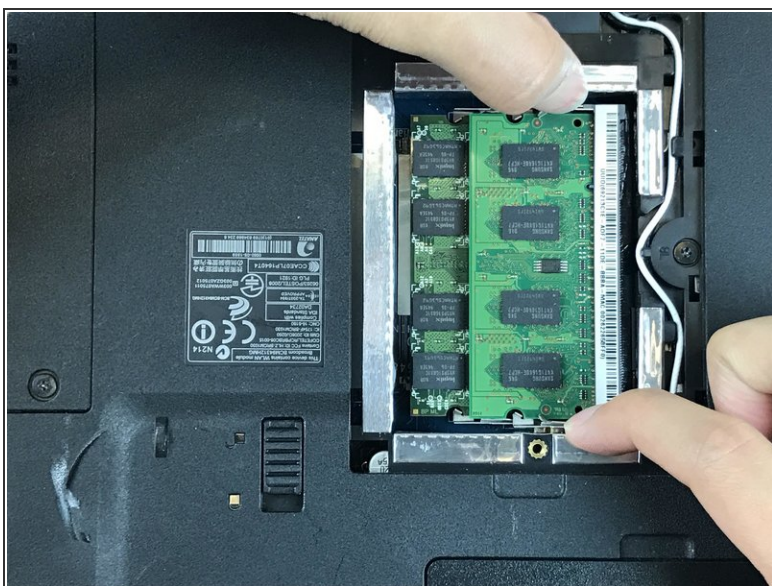

- Using two fingers, push the tabs inward to release the RAM from its casing.
- Pull the RAM towards you to remove it.

Step 5

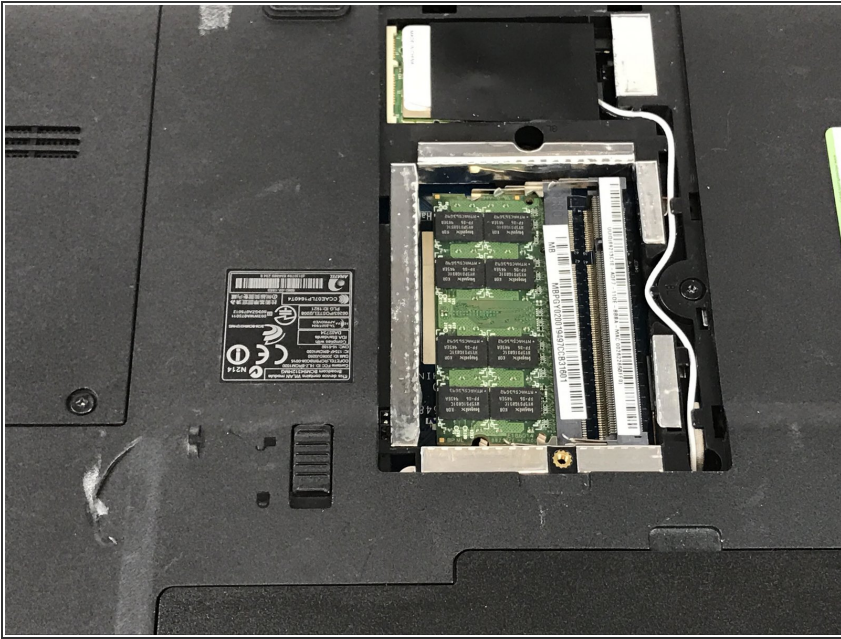

- The RAM is now removed.

To reassemble your device, follow these instructions in reverse order.