



Asus ROG GL551J Battery Replacement

Asus ROG GL551J guide on how to remove and replace the battery.

Written By: Jason Nguyen



INTRODUCTION

This guide is a prerequisite to completing any other replacement guides for the Asus ROG GL551J. Removing the battery removes power from the device to prevent potential harm from electric shock.

Step 1 — Battery



- Lay the device on a flat surface with the battery facing up.
- ⓘ Be sure to wear ESD or Rubber gloves to protect the computer components.

Step 2



- Push the latch found below the battery to the unlock position.

Step 3



- Pull the battery out.

To reassemble your device, follow these instructions in reverse order.