




Asus Vivobook S500CA Touch Pad Replacement

How to replace an Asus Vivobook S500CA touch pad.

Written By: Sydney Price

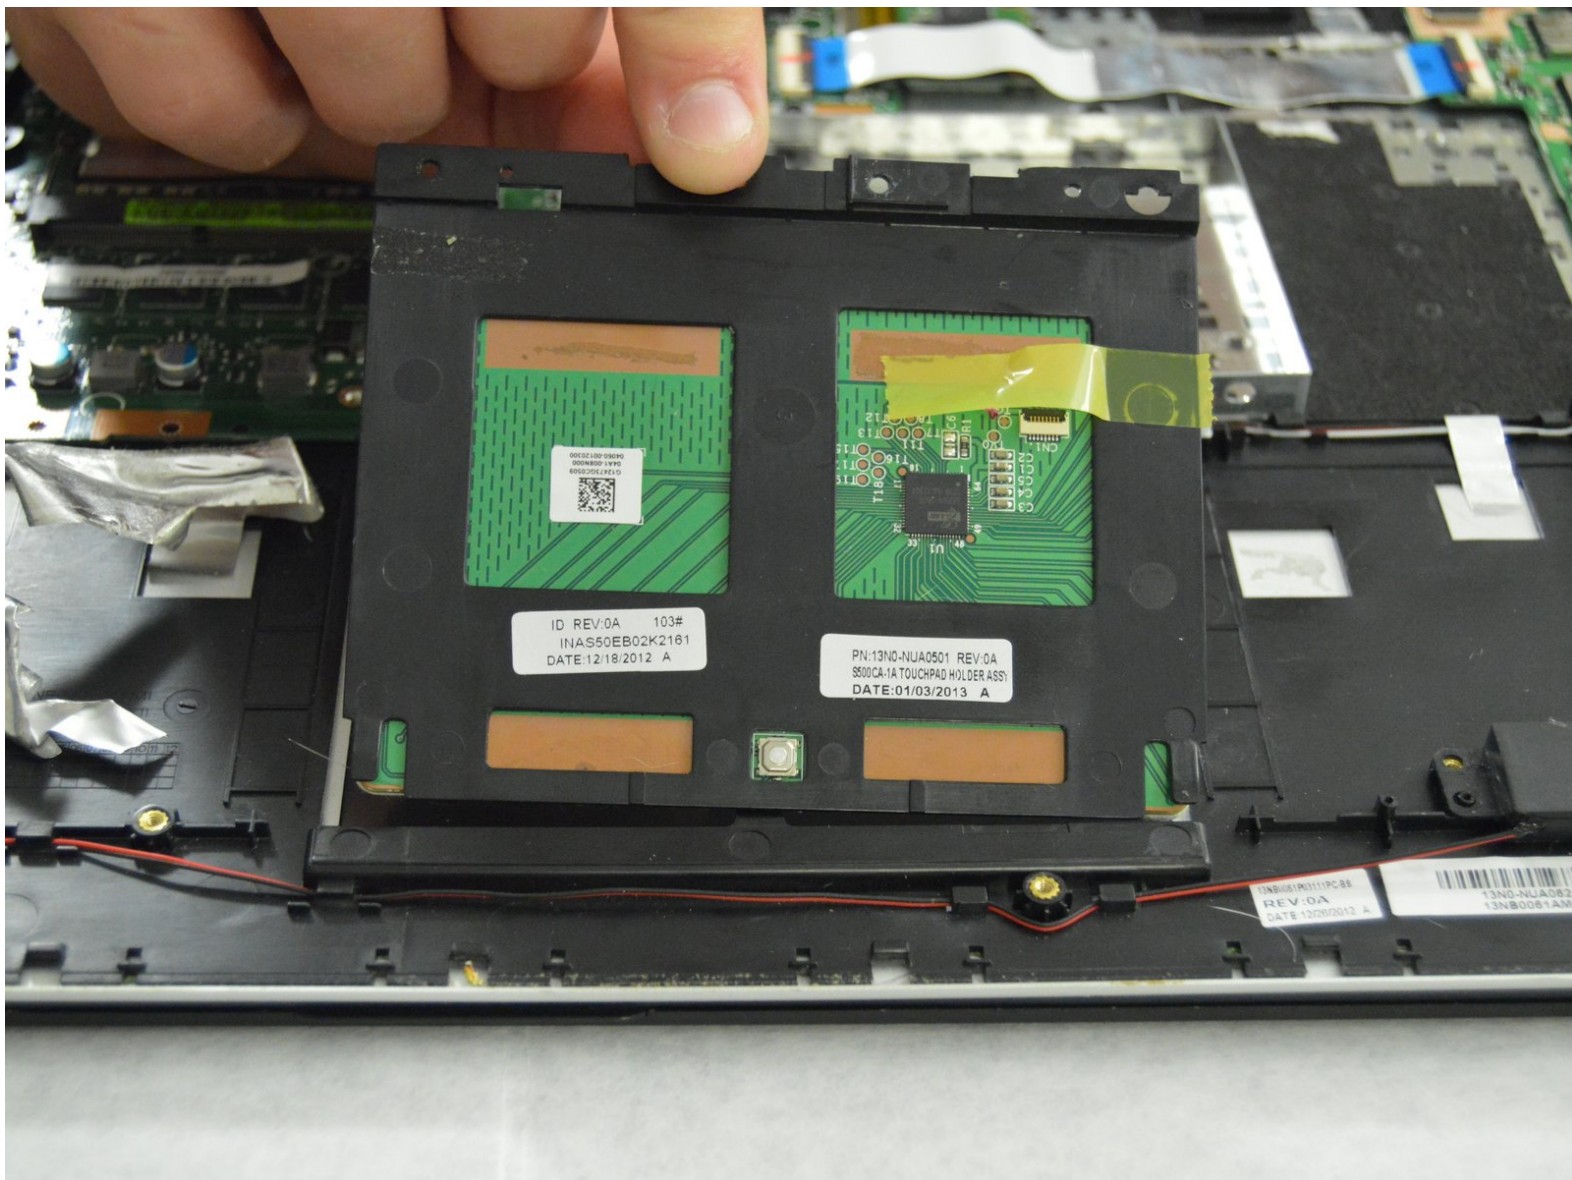

INTRODUCTION

If your touch pad is unresponsive, follow this guide to replace the components.



TOOLS:


- [Phillips Head Screwdriver: Size PH1](#) (1)
-

Step 1 — Touch Pad




- Turn the device over so the back plate is facing up.

Step 2

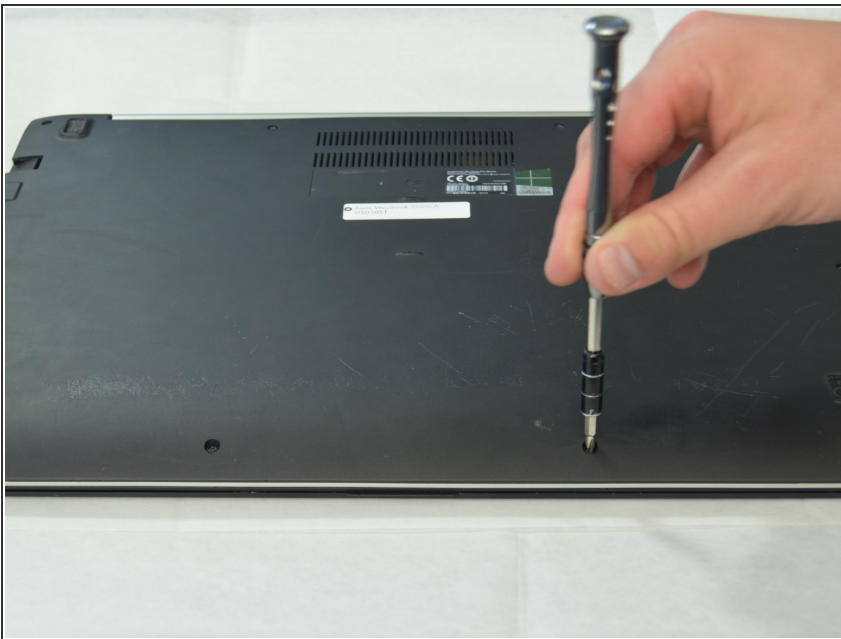


- Use a Philips Head PH1 screwdriver to remove 10 screws (3 10mm screws and 7 5mm screws) around the perimeter of the back plate.

Step 3

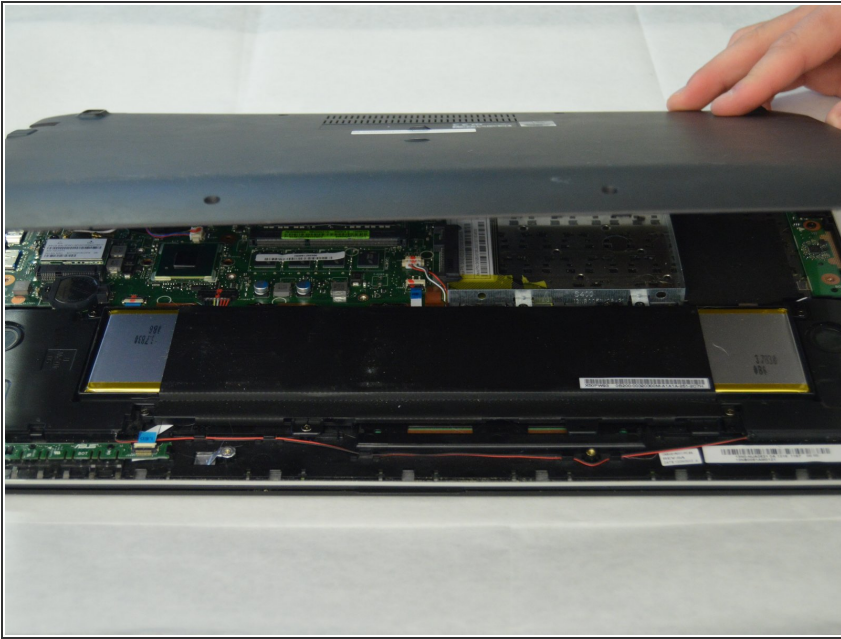

- Remove the back plate by lifting it straight up.

Step 4

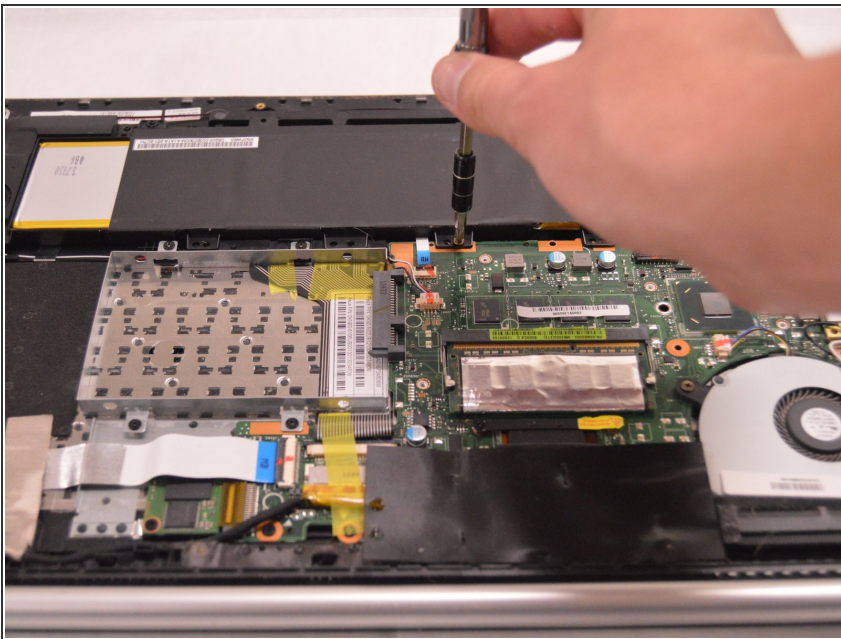


- Remove 9 5mm screws around the edge of the battery

Step 5




- Lift up the battery to reveal the battery terminal.

Step 6

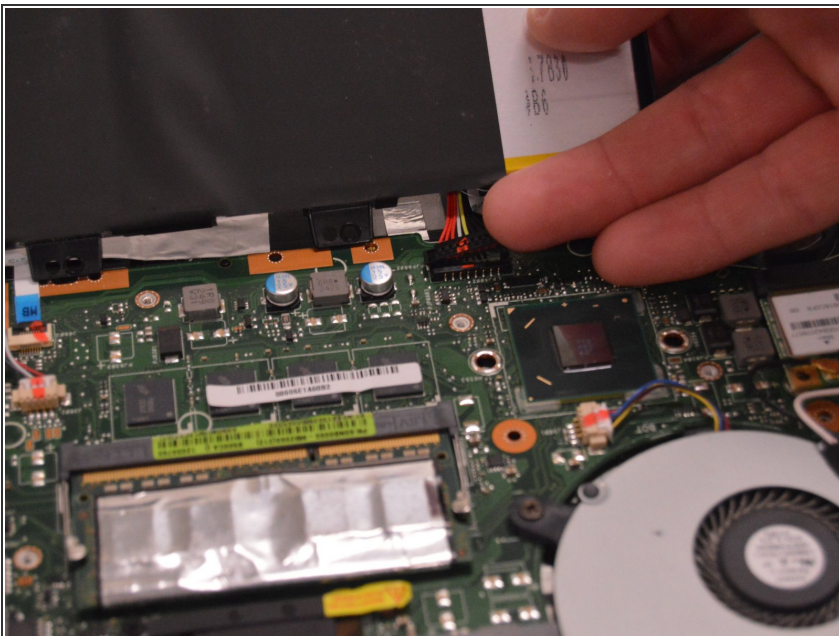


- Unclip the battery terminal by prying straight up on the sides of the connector to release the clips.

Step 7

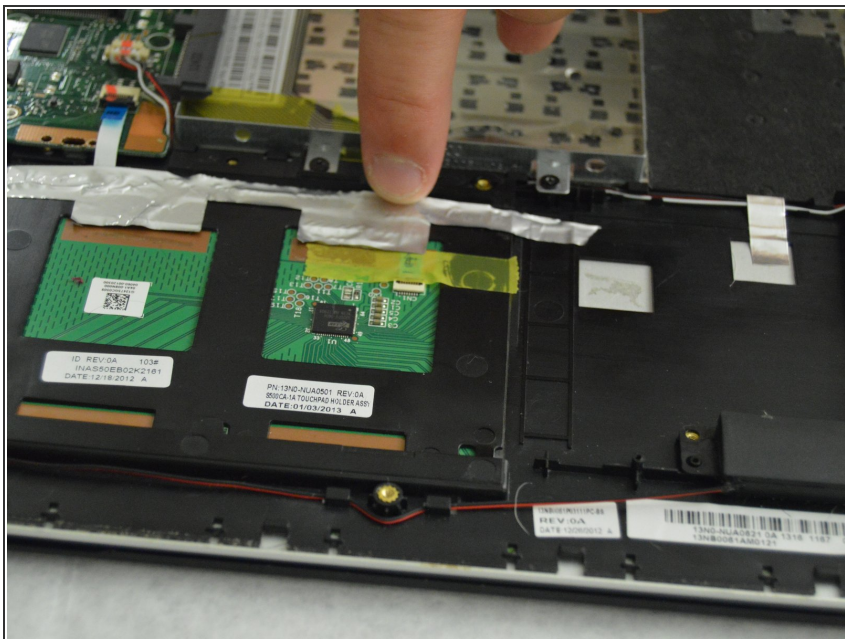


- Remove the silver tape at the edge of the touch pad.

Step 8

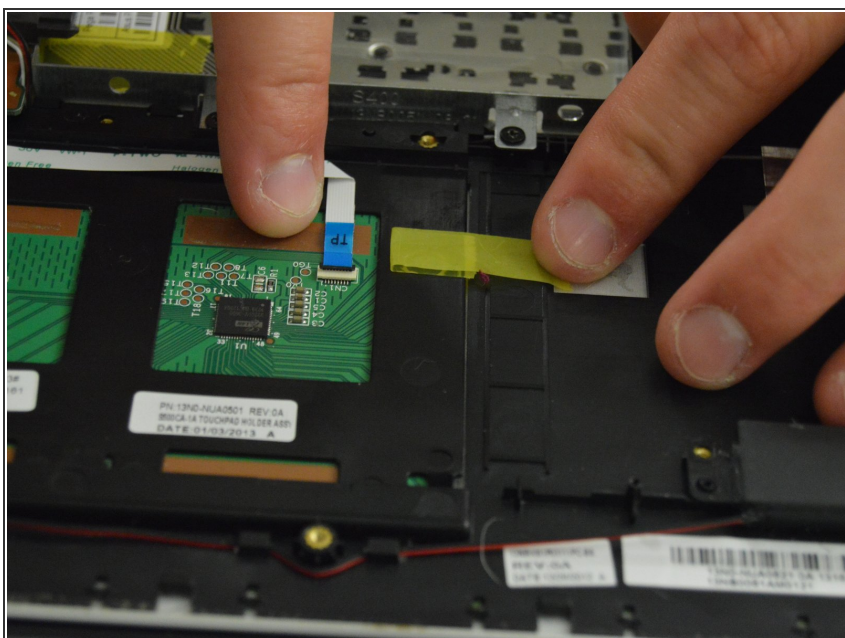


- Disconnect the white ribbon labeled “TP” by pulling gently.

Step 9

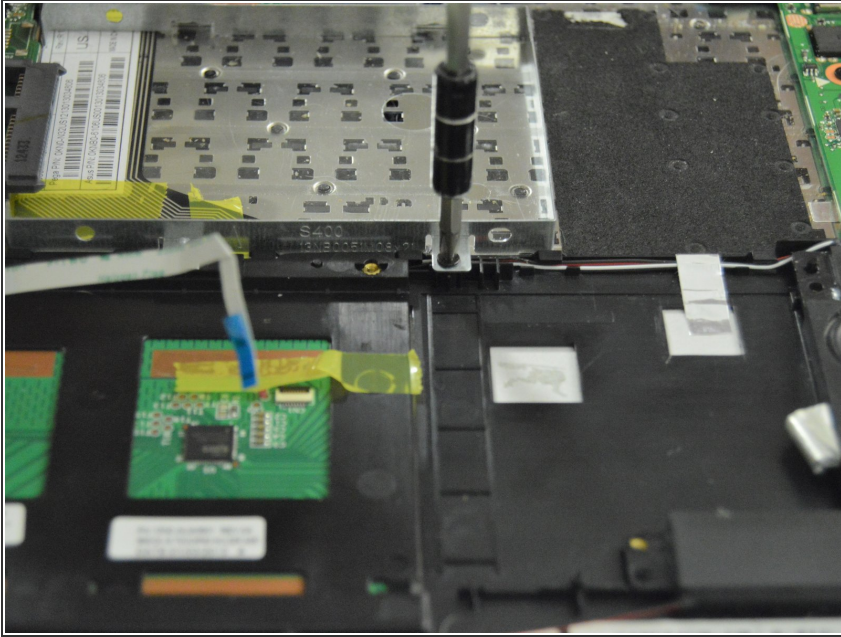

- Remove 2 5mm screws from the hard drive casing.

Step 10

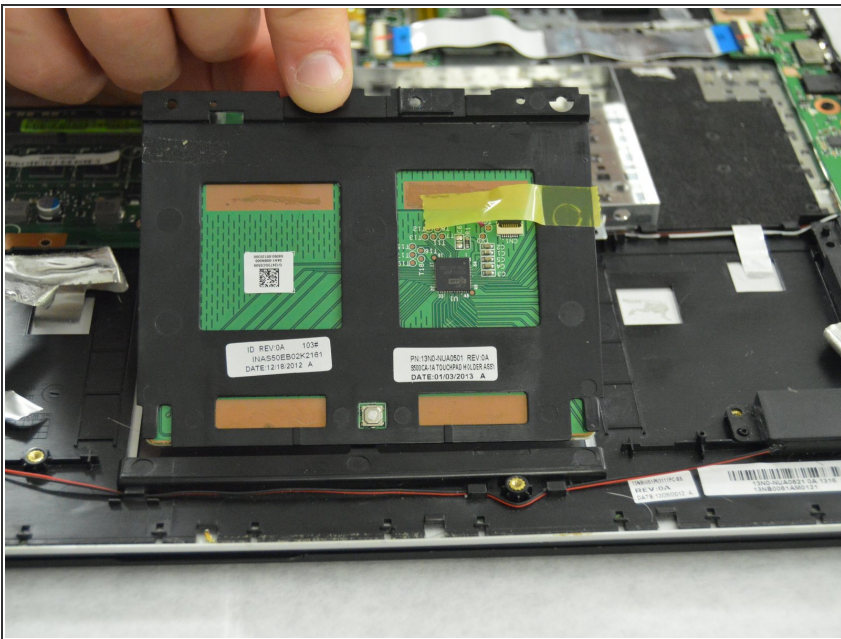

- Slide the touch pad out.

To reassemble your device, follow these instructions in reverse order.