



Acer Aspire 5517-1127 Disk Drive Replacement

Replace broken or malfunctioning disk drive on Acer Aspire 5517-1127.

Written By: Christopher Newkirk




INTRODUCTION

This guide will walk you through how to replace a disk drive on your Acer Aspire 5517-1127 device. If your device is not recognizing or reading disks when inside the disk drive, this guide may be able to assist you.

TOOLS:


- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Disk Drive

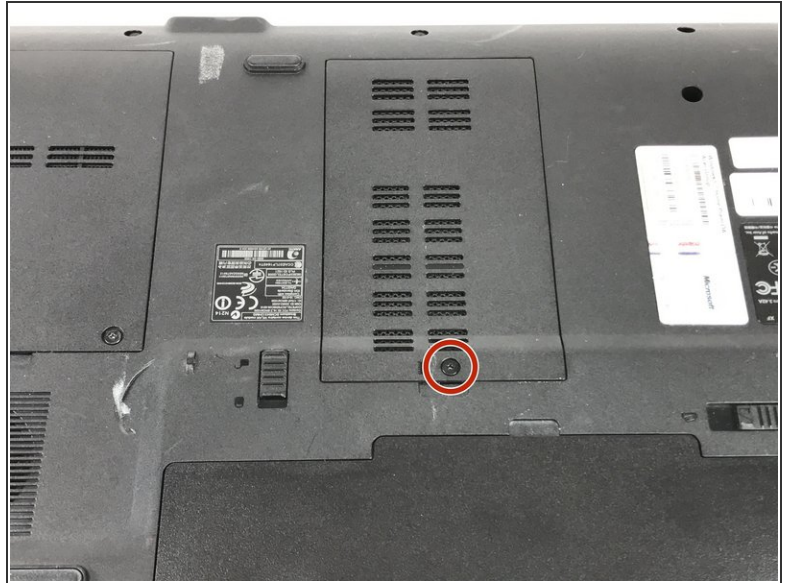


- Orient the laptop so that its upside down facing away from you.
- The screw is at the bottom of the RAM panel.

Step 2

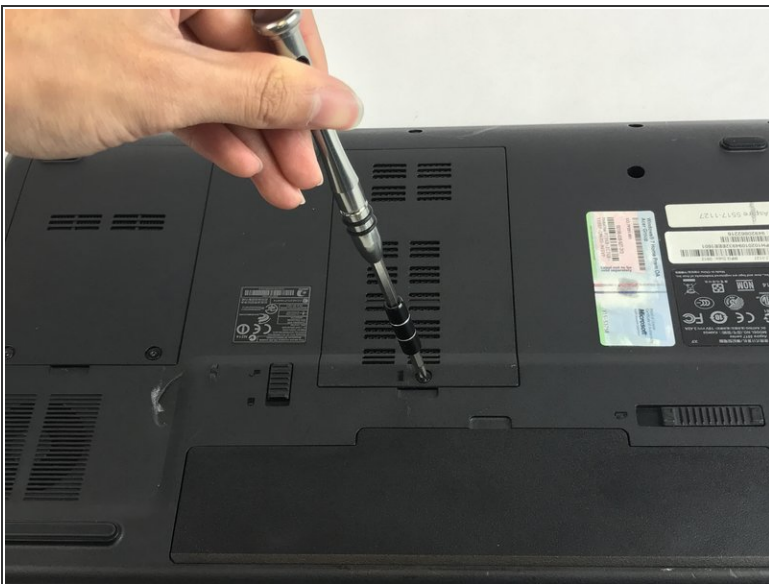

- Using a Phillips screwdriver (PH1), unscrew the screw from the panel.
- Pull the panel away from the device as shown.

Step 3

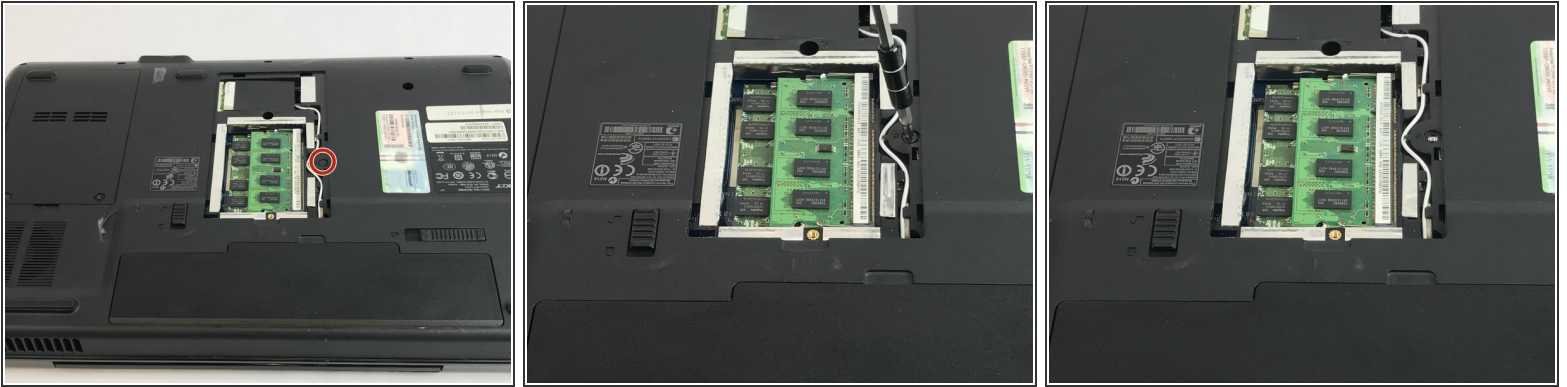

- The screw to the right of the inner RAM casing is shown.
- Using the same Phillips screwdriver (PH1), unscrew the screw.

Step 4



- Gently push the disk drive away from the device as demonstrated.
- The disk drive will come out with the screw removed from the RAM casing.

To reassemble your device, follow these instructions in reverse order.