




# Chromebook 15 CB3-531-C4A5 Speakers Replacement

This guide will elaborate on how to replace the speakers in a Chromebook 15 CB3-531-C4A5.

Written By: Savannah Vining

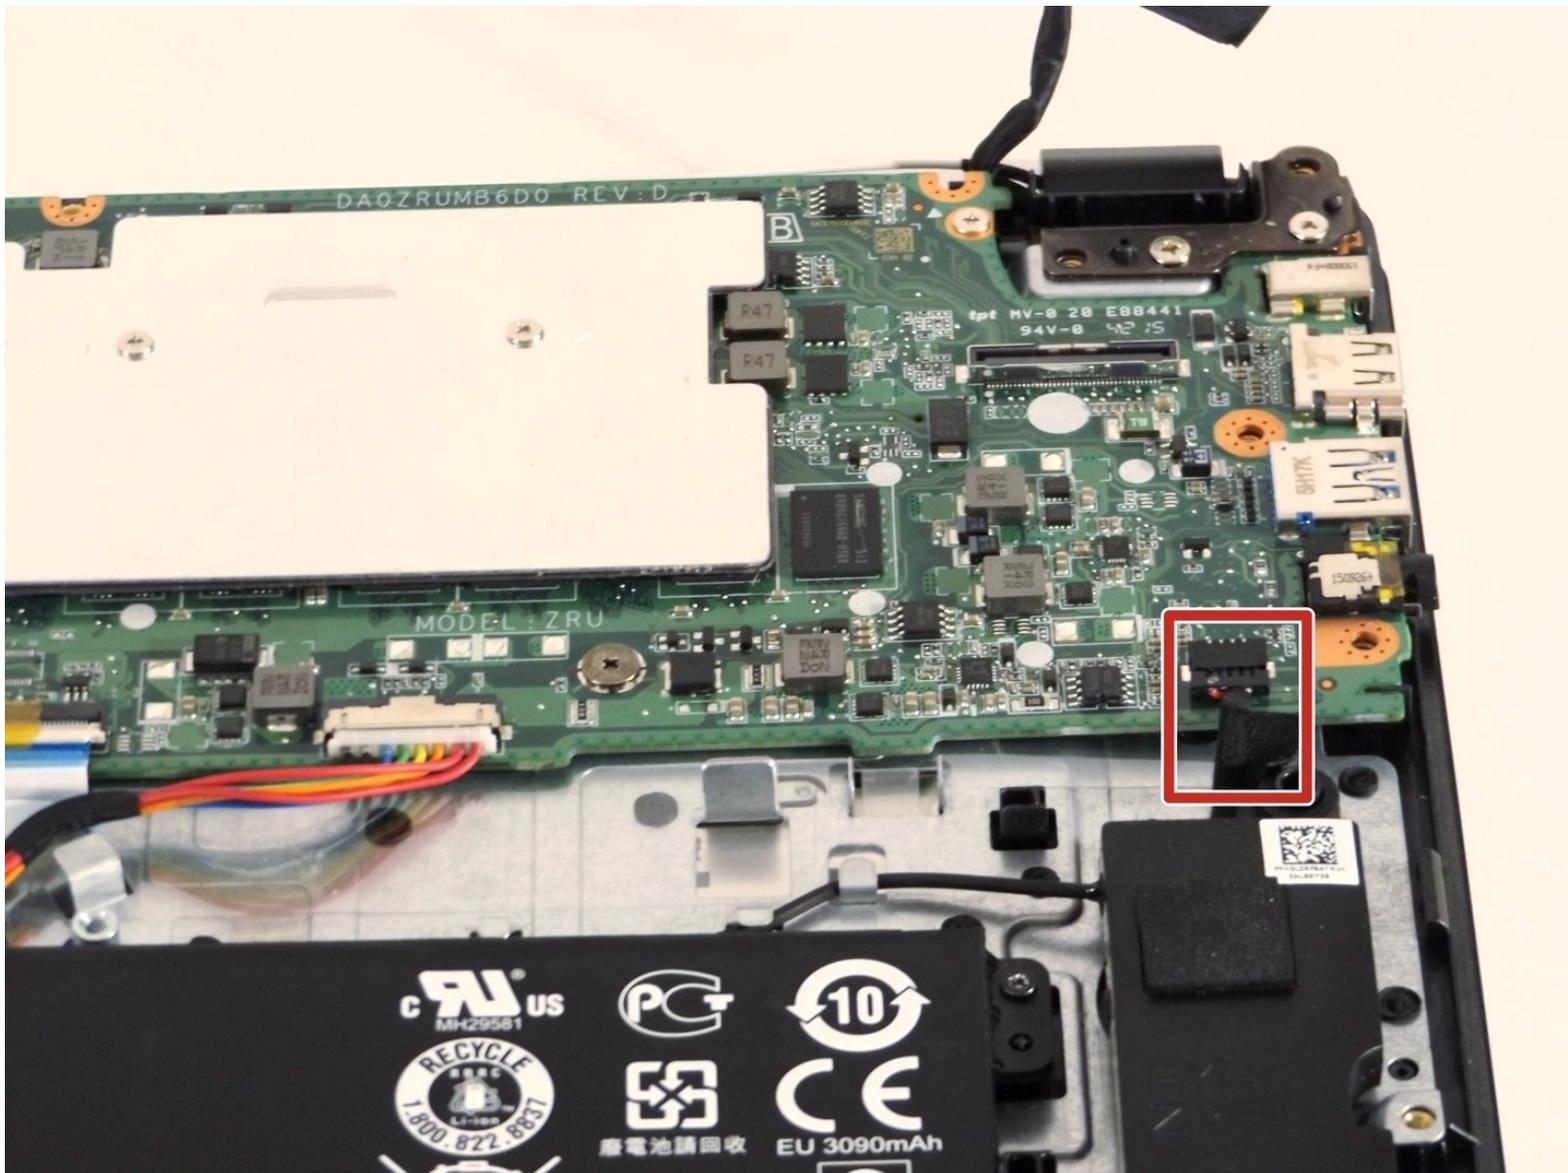

---

## INTRODUCTION


You may need to replace the speakers if you have a one or two faulty speakers. It will require you to take the back of the computer off and replace the speakers internally. There are no hazards accompanied with this task as long as the Chromebook is not charging

---

### TOOLS:

- [Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Case

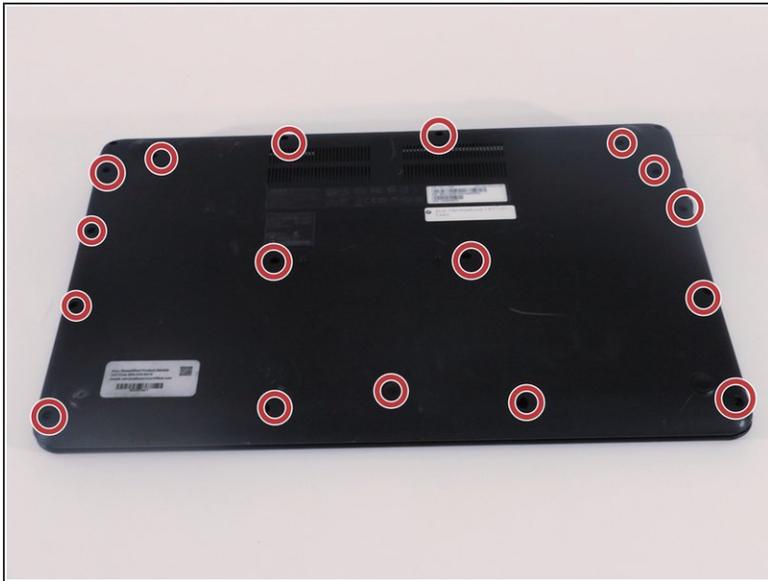


- Remove the 18 Phillips screws using a screwdriver with a PH0 bit.

## Step 2




- Using a spudger, gently pry open the back from the top.

### Step 3 — Speakers

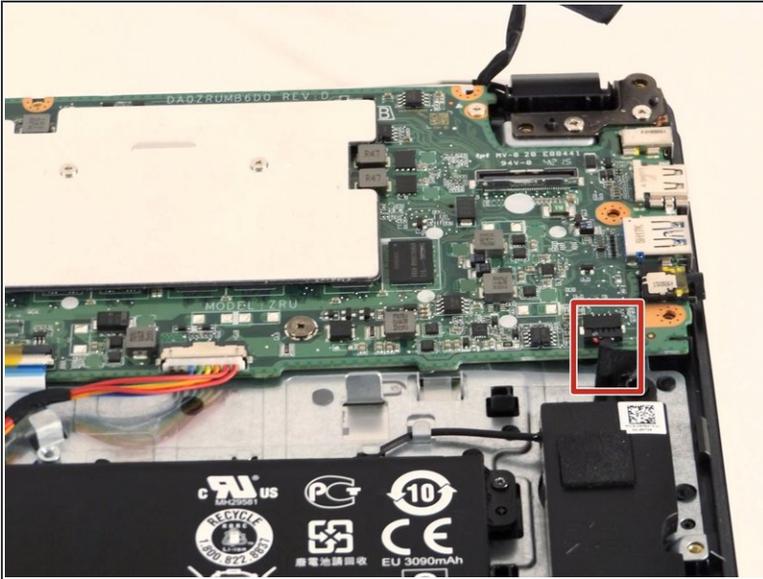

- Locate the cable that attaches the speakers to the motherboard. Unhook the cable.

### Step 4

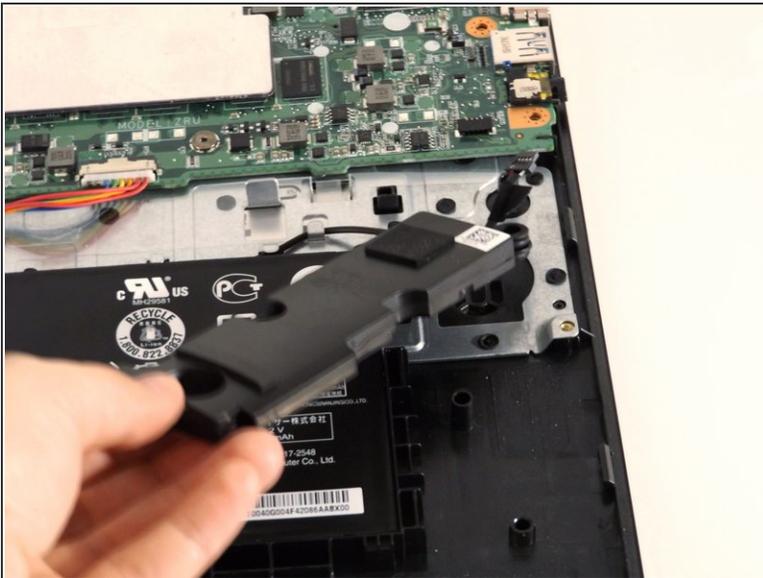

- Remove both speakers.

To reassemble your device, follow these instructions in reverse order.