




# Samsung Galaxy Player 5.0 Screen Replacement

This guide demonstrates how to remove and...

Written By: Wenbin Weng

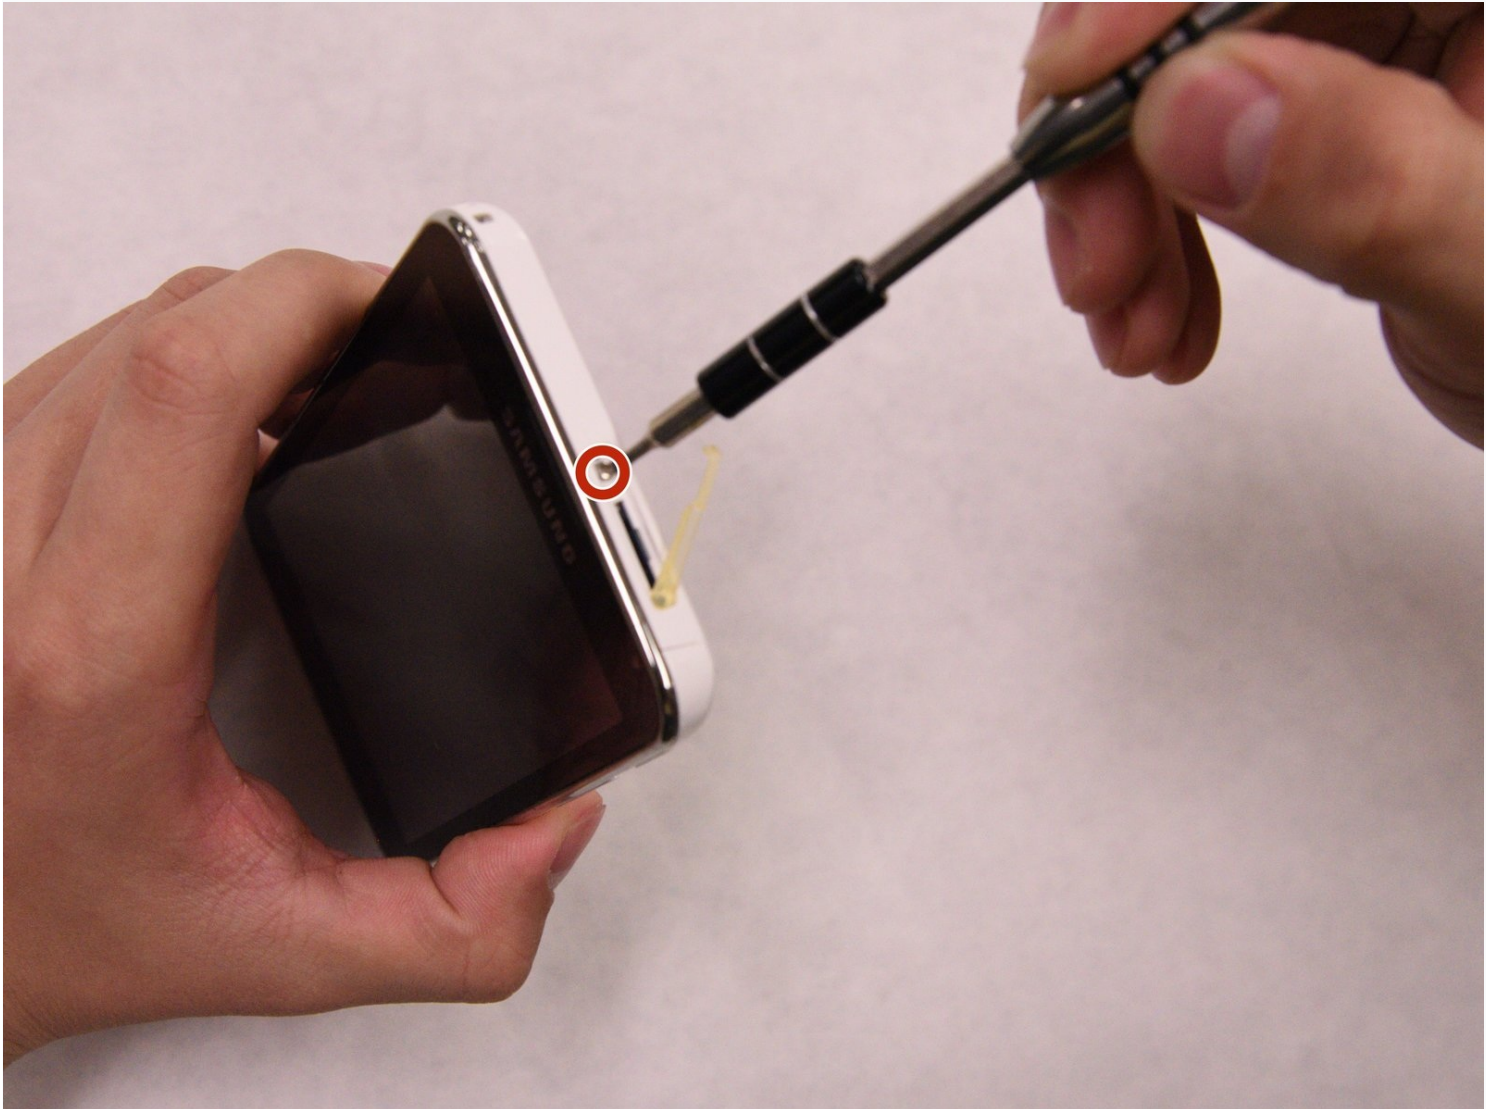

# INTRODUCTION

This guide demonstrates how to remove and replace a cracked or otherwise non-functional screen on a Samsung Galaxy Player 5.0 in order to preserve the function of your device.

---

## TOOLS:


[Phillips #00 Screwdriver](#) (1)  
[iFixit Opening Tool](#) (1)

## PARTS:

[Galaxy Player 5.0 Screen](#) (1)


---

## Step 1 — Screen

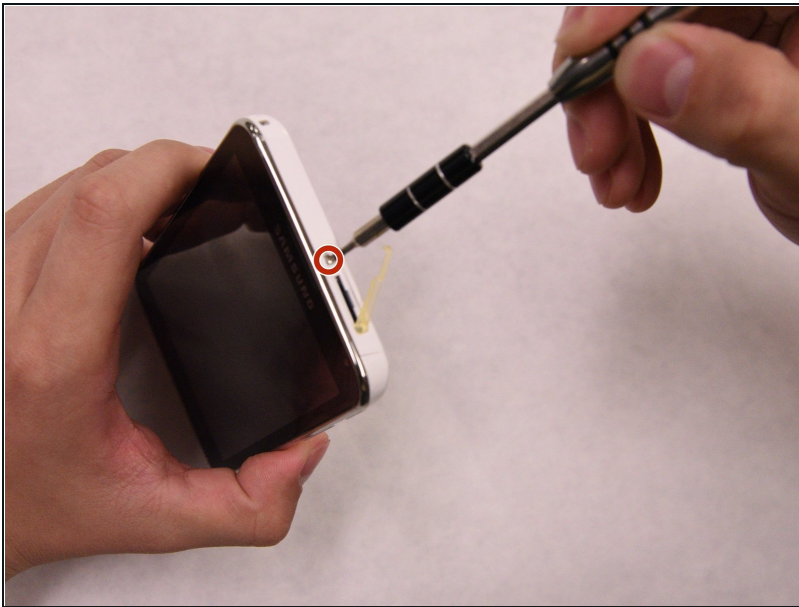


- Remove the SD card before disassembling the device.
- Use a screwdriver to remove the screw near the SD card.

## Step 2

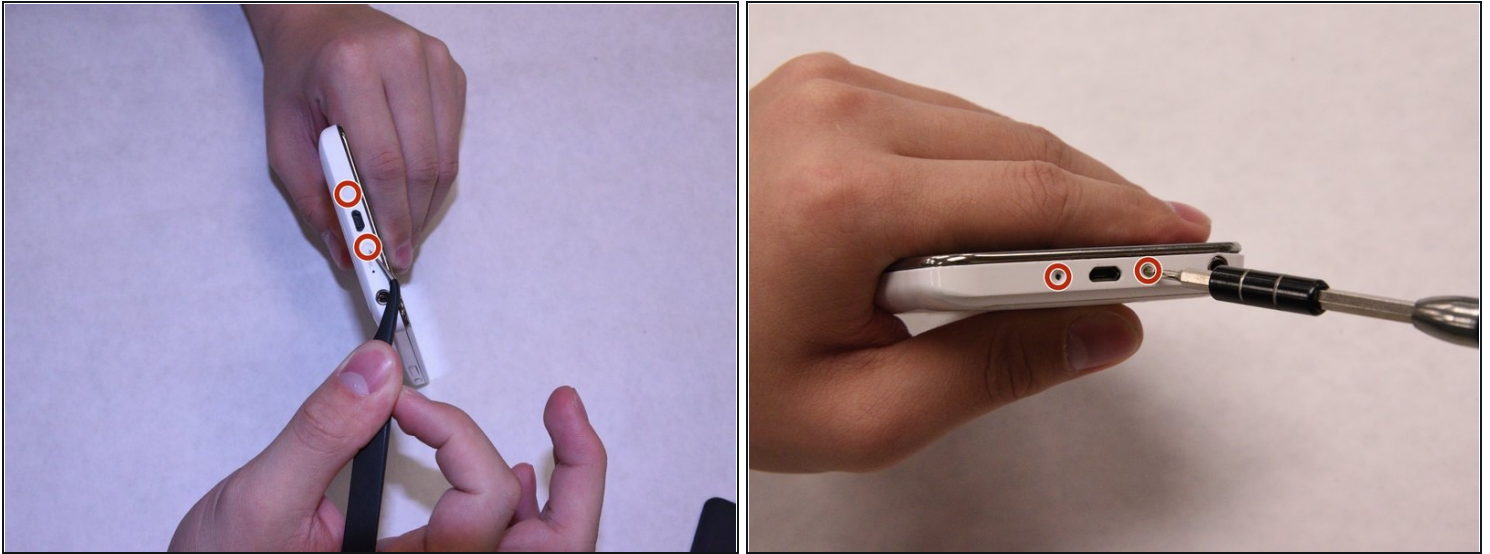

- Go to the bottom of the device and remove the white caps covering the screws.
  - ① If it is difficult to remove the white caps, use a heat blower to heat them before removing them.
- After removing the caps, use a screwdriver to remove the screws at the bottom of the device. Set aside.


## Step 3

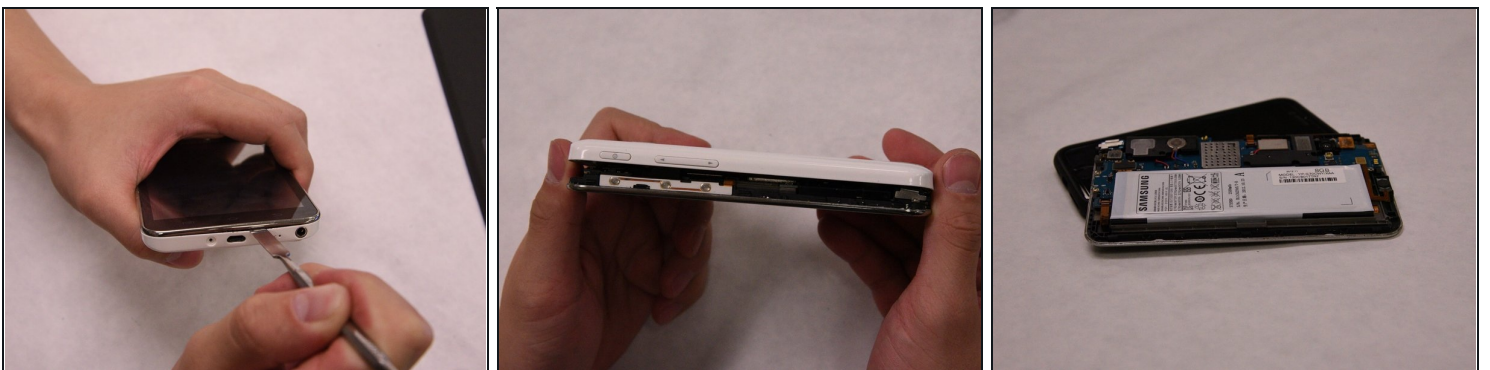

- Starting from the bottom, use a pry tool to separate the front housing cover from the back cover.
  - ① Use a plastic prying tool if you can. Be extremely careful when separating the front housing cover.
- Pull the front and back cover halves apart completely.



## Step 4

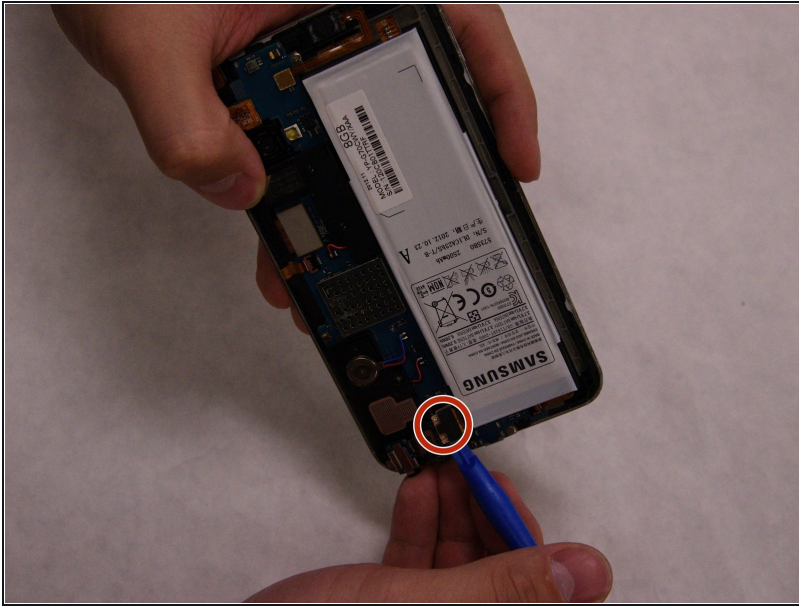


- Use the pry tool to separate the tab connecting the battery and motherboard.

## Step 5




- Use the prying tool to separate the battery from the motherboard.
- ⚠ Metal spudgers and similar pry tools can puncture an unprotected battery, potentially causing a fire. To be on the safe side, it's better to use a [plastic card](#) or nylon spudger.

## Step 6

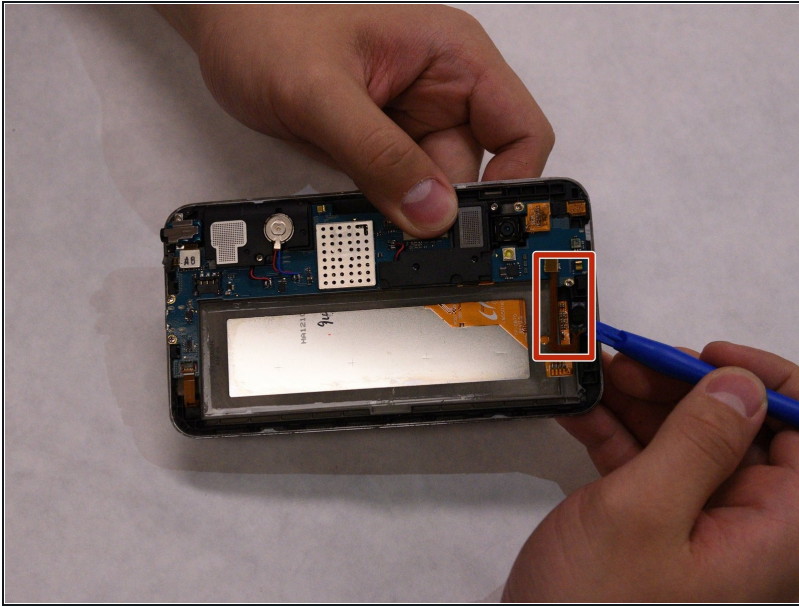

- Remove the ear piece using a pry tool. Set aside.


## Step 7

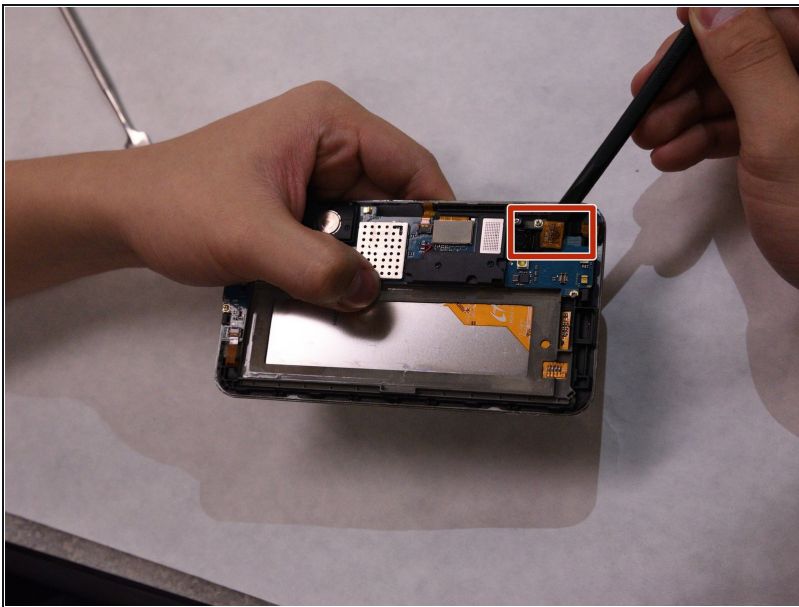

- Remove the front and rear cameras.




## Step 8

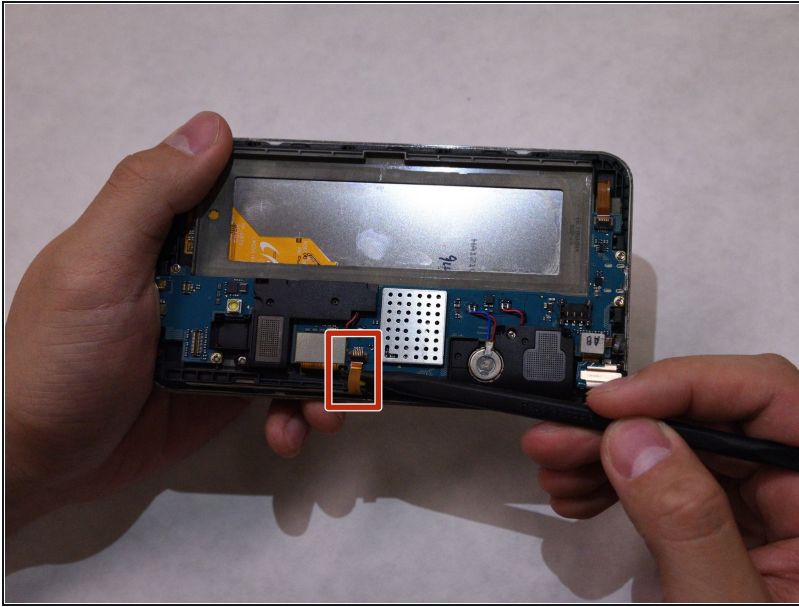


- Disconnect the volume button from the motherboard.
- ① It is not necessary to completely remove the volume buttons from the device after they have been disconnected.

## Step 9

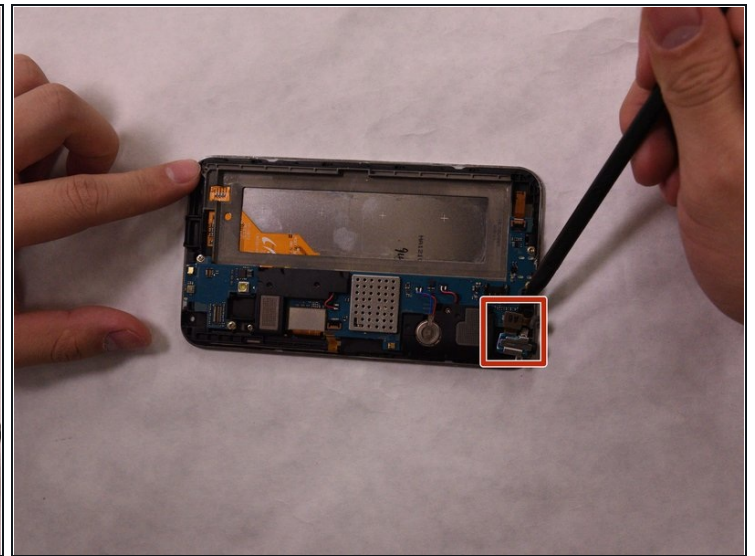


- Use a screwdriver to remove the screw pictured.
- Use a prying tool to remove the headphone jack.
- Set both carefully aside.

## Step 10

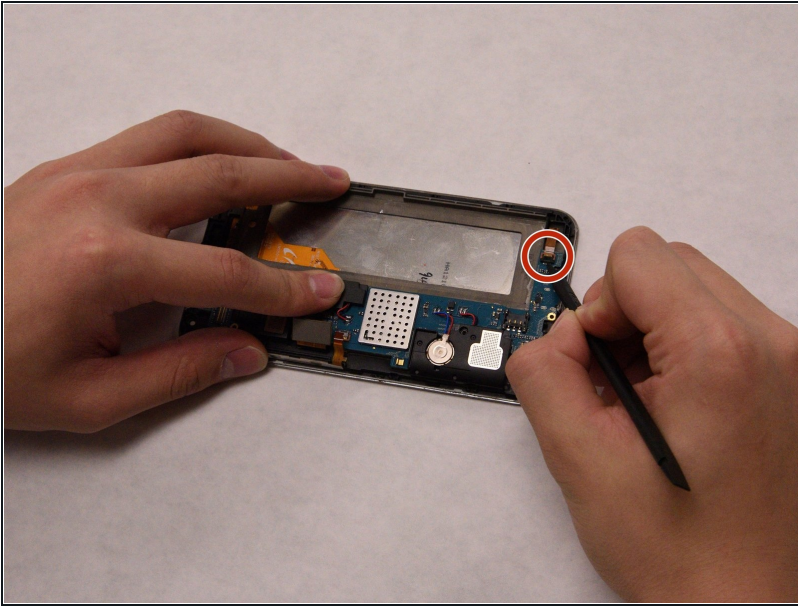




- Disconnect the mean button flex cable.
- ① Use a pry tool to open the locker on the motherboard and remove flex cable.

## Step 11

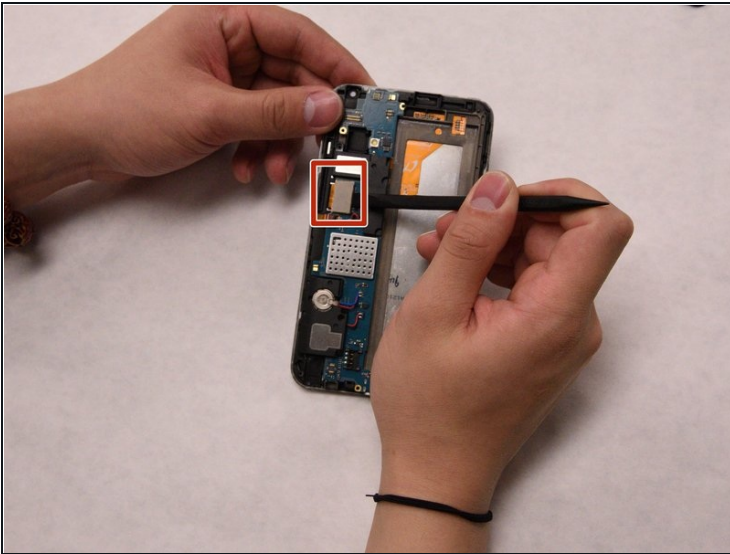

- Disconnect the LCD flex cable.
- Use a screwdriver to remove six screws pictured.

## Step 12

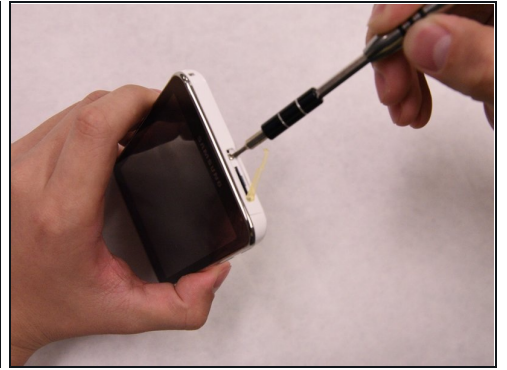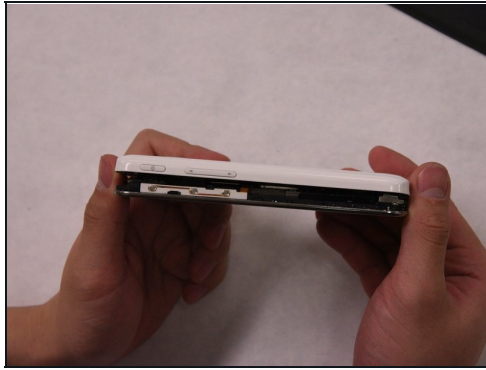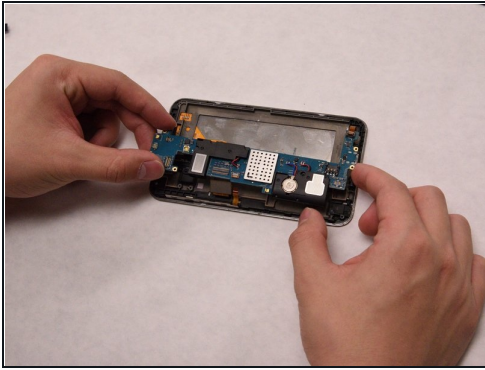

- Hold the PCD unit and lift it up.
- Switch out the old digitizer for the new one. Reconnect all the cables and screws in the reverse sequence.

---

To reassemble your device, follow these instructions in reverse order.