 


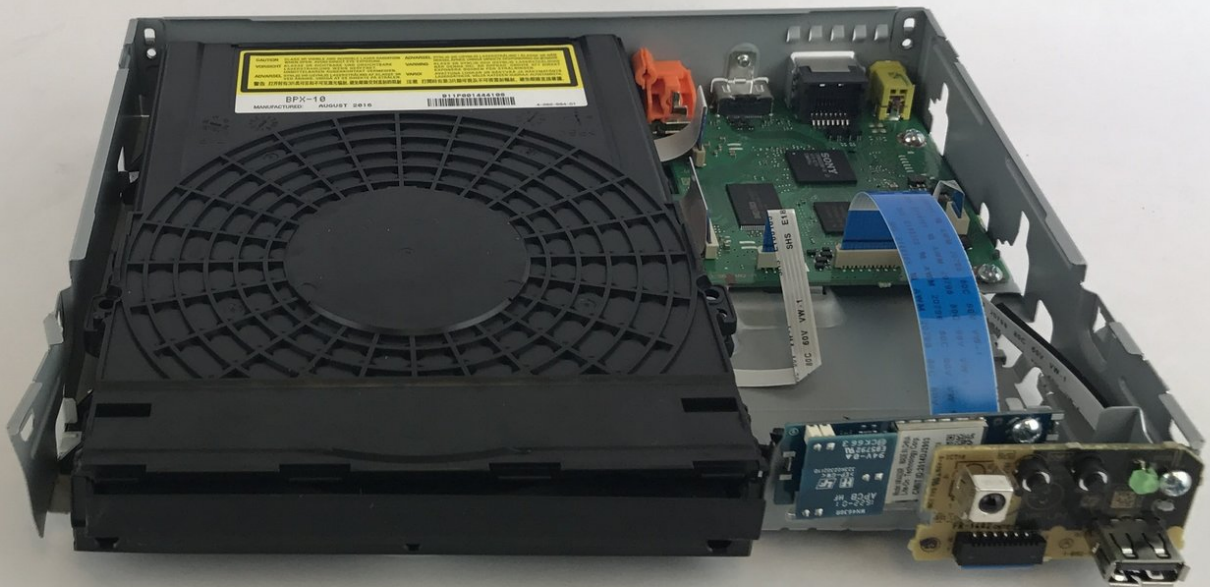

Sony BDP-S3700 Front Panel Replacement

This is a brief guide that demonstrates how to remove the front panel from your Sony BDP-S3700.

Written By: Luiz Barreto



INTRODUCTION

This is a brief guide that demonstrates how to remove the front panel from your Sony BDP-S3700.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Front Panel



 
- Use the PH1 screwdriver to remove the two 9mm screws on the back of the Blu-ray player.

Step 2



- Remove the back of the device by slowly sliding the rear outer housing backwards.

Step 3

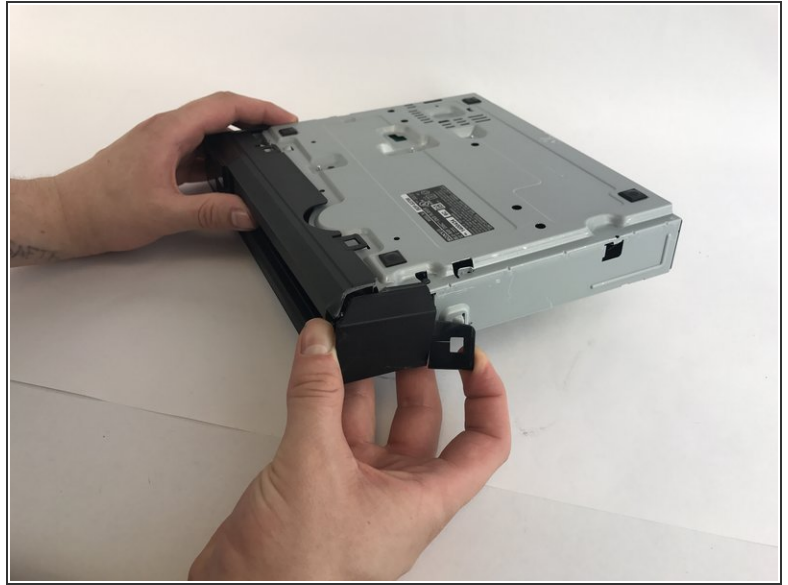

- Turn the Blu-ray over
- Pry open the clips under and on the sides

Step 4



- Once all the clips are open, slide the front outer housing out.

To reassemble your device, follow these instructions in reverse order.