


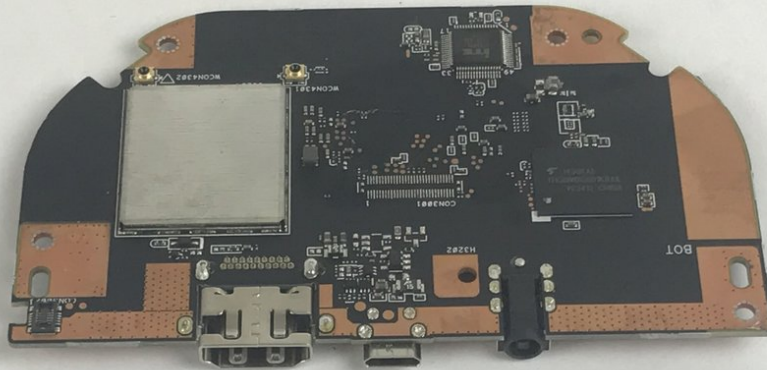

# Asus Nexus Player Motherboard Replacement

Replace your defective motherboard to allow other hardware components to be able to communicate with each other effectively again.

Written By: Eric Smith



---

## INTRODUCTION

Replace your defective motherboard to allow other hardware components to be able to communicate with each other effectively again.

---



### TOOLS:


- [Metal Spudger](#) (1)
  - [Phillips Head Screwdriver: Size PH1](#) (1)
  - [iFixit Precision Bit Driver](#) (1)
-

## Step 1 — Motherboard




- Use the metal spudger to gently pry open the back of the Nexus Player.

## Step 2

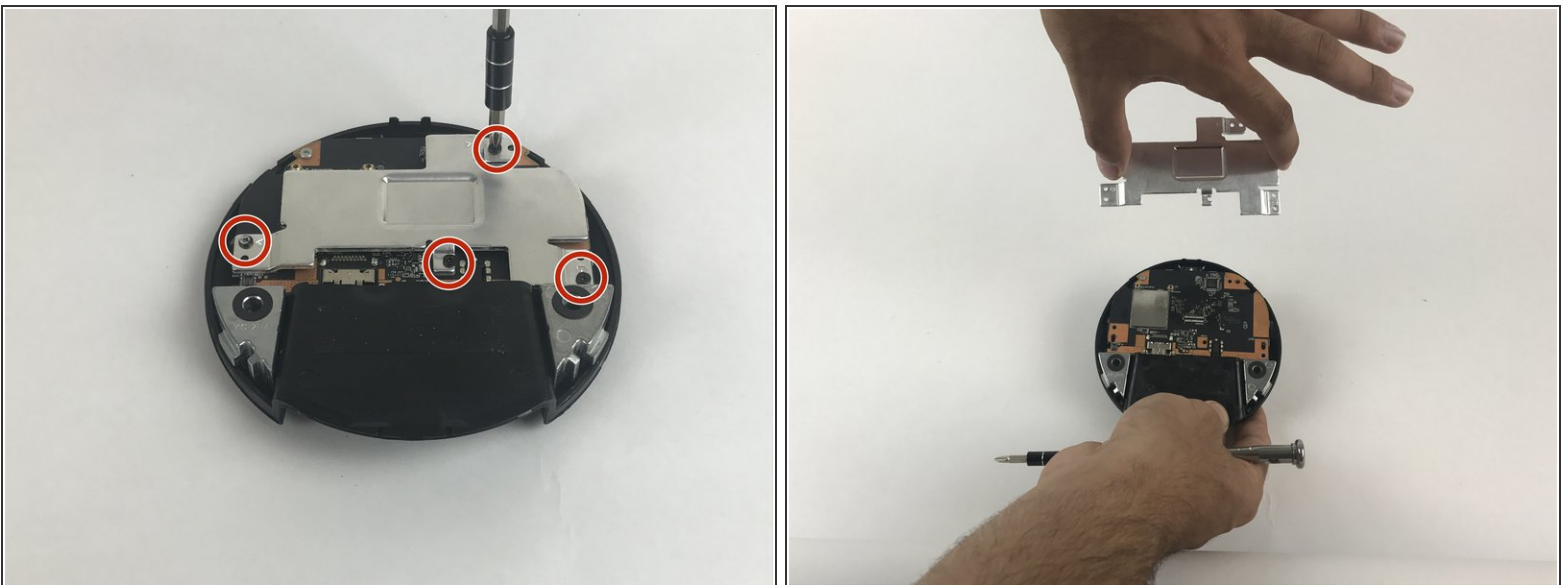

- Use a PH1 Philips-head screw driver to unscrew the four 8 mm screws holding the shield in place.
- Once screws are removed, simply lift the shield away.

## Step 3

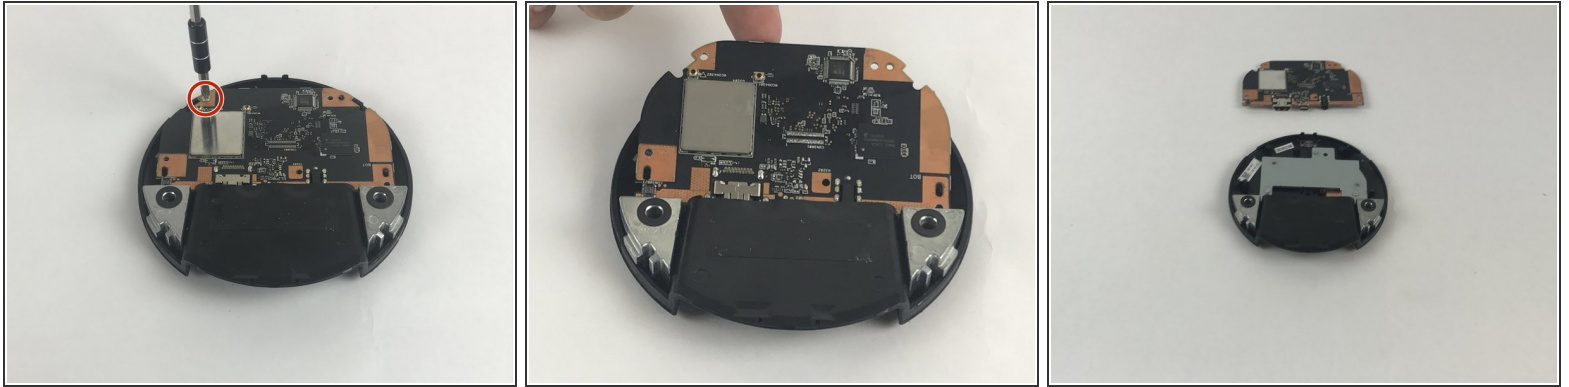

- Remove the 5 mm screw using the PH1 Phillips-head screwdriver to be able to remove the motherboard.
- After the screw is removed, lift the motherboard out of the frame.

To reassemble your device, follow these instructions in reverse order.